




PSCHOISE P4-3 Wireless Controller User Guide

[Home](#) » [PSCHOISE](#) » PSCHOISE P4-3 Wireless Controller User Guide 

Contents

- 1 PSCHOISE P4-3 Wireless Controller
- 2 Product Information
- 3 Frequently Asked Questions (FAQ)
- 4 Product description
- 5 Product parameter
- 6 Key composition
- 7 Match and connect
- 8 LED guiding lights
- 9 TURBO function settings
- 10 Reset function
- 11 Package
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

PSCHOISE

PSCHOISE P4-3 Wireless Controller



Product Information

Specifications

- **Model:** P4-3
- **Voltage:** DC 5.0V
- **Working current:** < 55mA
- **Sleep current:** 0uA
- **Battery capacity:** 600mAh
- **Usage time:** 10-12 hours
- **Weight:** 221.6g
- **Charging time:** 2-3 hours
- **Vibration current:** 80-100mA
- **Charging current:** 350mA
- **USB length:** 1m
- **Bluetooth transmission distance:** 10m
- **Size:** 16.0 x 13.0 x 6.0cm

Key Composition

The handle consists of 22 standard keys (PS, Share, Option, L1, L2, L3, R1, R2, R3, VRL, VRR, RESET, Turbo, Clear) and Two analog 3D rockers.

Match and Connect

1. Connect the handle with the host using the USB cable.
2. Press the HOME button on the handle to establish the connection.
3. Once connected, the LED light will indicate the status.
4. To switch to wireless mode, remove the USB cable.

LED Guiding Lights

The LED light bar displays different colors to distinguish users. Each user has an assigned color when connecting to the host.

Turbo Function Settings

The handle features a Turbo function that can be customized based on user preferences.

Reset Function

If the handle experiences abnormalities, such as key disorder or connection failure, you can reset it by inserting a slender object into the Reset hole on the back of the handle.

Attention

- Do not use this product near fire sources.
- Avoid placing the product in damp or dusty environments.
- Avoid direct sunlight and high temperatures.
- Avoid contact with chemicals like gasoline or thinner.
- Avoid impacts that may cause damage or falls.
- Avoid bending or pulling cable components strongly.
- Do not attempt to disassemble, repair, or modify the product.

Frequently Asked Questions (FAQ)

- **How long does it take to charge the controller?**

The controller takes approximately 2-3 hours to fully charge.

- **How many hours of usage can I expect from a full charge?**

A full charge provides a usage time of 10-12 hours.

- **How many controllers can be connected to the host at once?**

Up to four controllers can be connected to the host simultaneously.

- **How do I know if my controller is connected wirelessly?**

When the LED light bar flashes white and remains a solid color, your controller is connected wirelessly.

Product description

This product is a P4 handle, which belongs to wireless Bluetooth control handle (using wireless Bluetooth technology). It can remotely control the handle, which is easy to operate. It can be used for P4 host, P4 PRO and P4 SLIM. At the same time, PC games such as PC and x-input(PC360) are also supported.


Product parameter

- **Voltage:** DC 5.0V
- **Working current:** < 55mA
- **Sleep current:** 0uA
- **Battery capacity:** 600mAh
- **Usage time:** 10-12 hours
- **Weight:** 221.6g
- **Charging time:** 2-3 hours
- **Vibration current:** 80-100mA
- **Charging current:** 350mA
- **USB length:** 1m

- **Bluetooth transmission distance** 10m
- **Size:** 16.0 x 13.0 x 6.0cm

Key composition


The handle consists of 22 standard keys(PS,Share, Option, ↑, ↓, ←, →, ×, ○, □, △,L1,L2,L3, R1,R2,R3 ,VRL,VRR,RESET Turbo Clear),and Two analog 3D rockers.

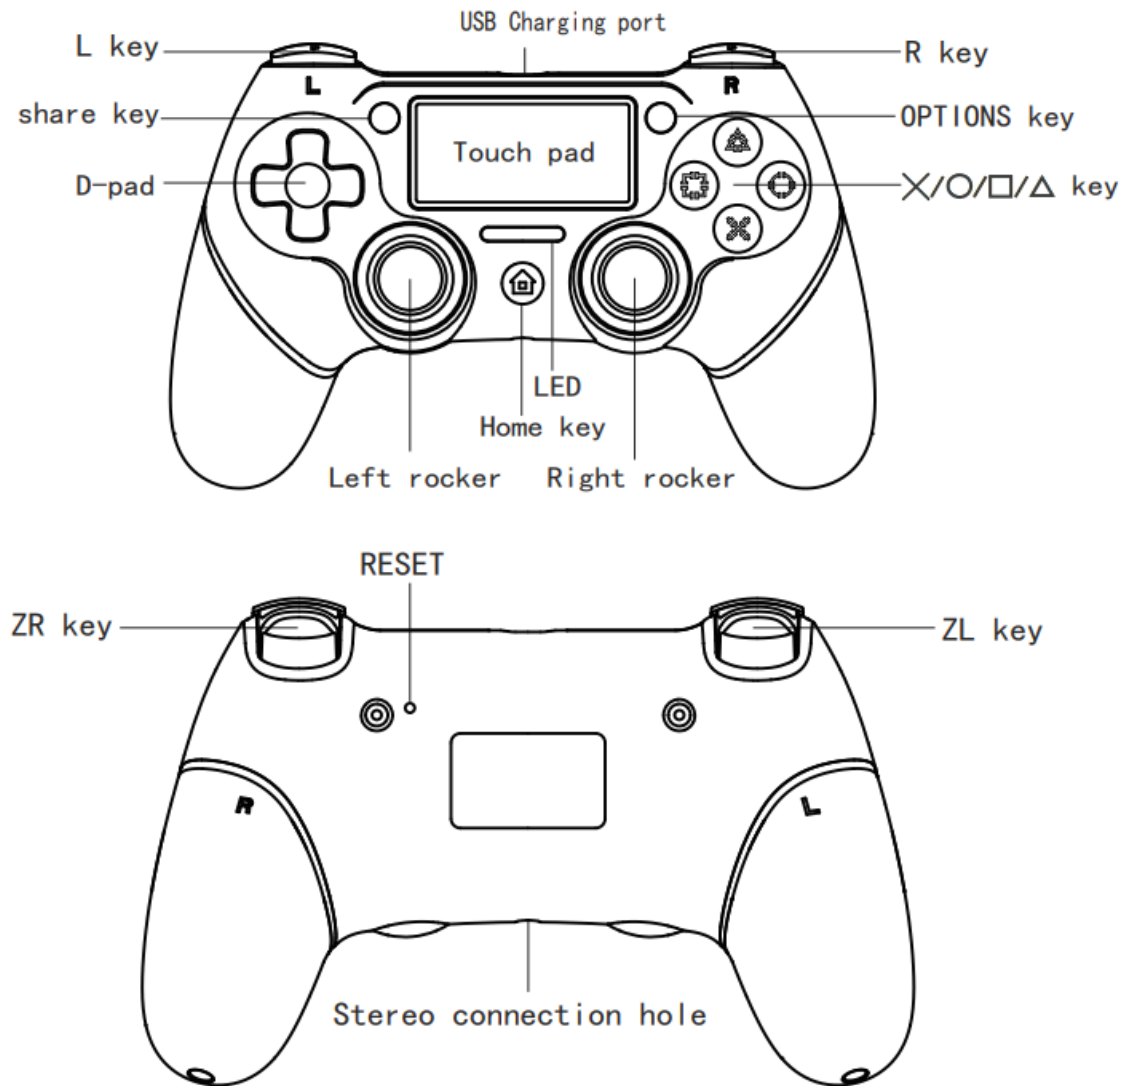

Match and connect

- When you use the handle for the first time, you need to connect it with the current host: first, use the USB cable to communicate with P4 host, then press the HOME button of the handle, the LED light bar will always light in one color, and then the host will be connected.
- When the handle is connected to the host, the LED light bar flashes white, and then keeps one color always on. At this time, you can remove the data cable and use the handle wirelessly.
- If the handle fails to connect with P4 host within 30 seconds in search state, it will enter sleep state.
- In the connected state, there is no button operation for about 10 minutes, and the 3D rocker does not move greatly, and the handle enters the sleep state;
- Press the HOME button during sleep to wake up the handle-the sleep time without operation can be set on the console

 - If the handle needs to be turned off, please press the PS key for 8-10 seconds, the LED light goes out and the handle is turned off;

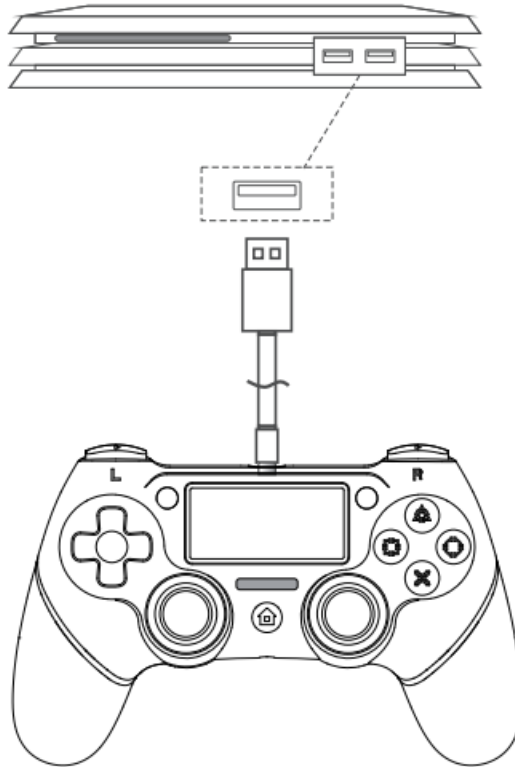

LED guiding lights


- After different handles are connected to the host, LED light bars display different colors to distinguish users. When you press the HOME button, the LED light bar will emit light in a specific color. The assigned color depends on the order in which each user presses the HOME button. The first connecting handle is blue, the second is red, the third is green and the fourth is pink. Up to four handles can be used at the same time.
- The LED light bar will be displayed in breathing light when it is turned off and charged, and the color will be orange. When it is full, the light will go out.

TURBO function settings

After the handle is connected to the host computer, the buttons: \times , \bigcirc , \square , \triangle , L1, L2, R1, R2 can be Turbo operated according to the user's requirements. Turbo and share share share this function key. Operation mode: press and hold the x key, and then press the SHARE key to perform Turbo operation on the x key (the order of pressing the x and SHARE keys is not required). if you need to cancel the Turbo function of x, press and hold the SHARE key, and then press the x key to clear the Turbo function of this key. after shutdown, the previously set Turbo function will not be saved, and the initial state will be automatically restored.

Reset function

- When the handle is abnormal, such as key disorder, crash, connection failure, etc., you can try to restart the handle.
- Reset mode: insert a slender object into the Reset hole on the back of the handle, and press the reset key to reset the handle state.

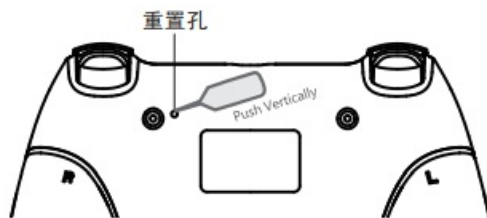

The back of
Gamepad

Attention

- Do not use this product near the fire source;
- Do not put the product in a damp or dusty environment;
- Do not be exposed to direct sunlight or high temperature;
- Do not use chemicals such as gasoline or thinner;
- Do not hit the product or make it fall off due to strong impact.
- Do not bend or pull the cable components strongly;
- Do not disassemble, repair or refit.

Package



GAMEPAD x1




DATA CABLE x1



USER GUIDE x1

Documents / Resources

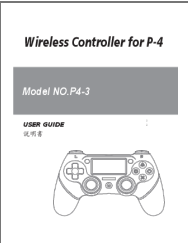	<p>PSCHOISE P4-3 Wireless Controller [pdf] User Guide</p> <p>P4-3 Wireless Controller, P4-3, Wireless Controller, Controller</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.