



PTHTECHUS B07T1W9C2D Smart Watch with Games and Player User Guide

[Home](#) » [PTHTECHUS](#) » PTHTECHUS B07T1W9C2D Smart Watch with Games and Player User Guide 

Contents

- [1 PTHTECHUS B07T1W9C2D Smart Watch with Games and Player](#)
- [2 Get Started](#)
- [3 Functions](#)
 - [3.1 Silent Profile](#)
- [4 Hardware Specifications](#)
- [5 Package Contents](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

PTHTECHUS®



PTHTECHUS B07T1W9C2D Smart Watch with Games and Player



- **Touch instructions** Swipe left or right to switch menus Swipe up and down to back the previous menu and touch enter the menu.
- **Note:** The function of this product could be subject to change. For the functional modification that will not affect the use of this product, this manual will not be revised. Thank you for your understanding.

Get Started

Power On/Off

- **Power On:** Press and hold the power button 
- **Shutdown:** Press and hold the power button 
- Before turning on the watch, make sure that the battery is properly installed in the device.
- If the device fails to turn on, this could be caused by a low battery.
- Please try again after recharging the device for 5 minutes.

Charging

- Remove the silicone plug on the USB charging port, and then connect the Micro-USB end of the cable to the watch and the other end to the USB charger.
- After the charger is plugged into the power socket, the power icon at the top right of the screen will start scrolling, indicating that it is in charging mode. The power icon will stop scrolling with a full battery icon when fully charged.

Functions

User interface



Contacts



- Slide to the left or right in the standby interface to enter the main menu, select contacts, and click to enter, you can select Dad, Mother, or others, click SET NUMBER, enter the number input interface, enter the corresponding phone number, click Save, then record in the phone book. Click the avatar on the interface to call out the corresponding call.
- **Note** maximum of 10 contacts can be stored

Quick Dial



- In the main menu, select <phone> and click to enter. After entering the number on the dial-pad interface, press the dial button to call out the call directly.

Camera



- In the main menu, select “Camera” and click to enter, you can enter the preview interface, click the left button to take a picture, right button to return.

Photos



- In the main menu, slide to select Album and click to enter, you can view the saved photos.
- You can also set pictures as wallpapers.
- you can download“.jpg;*.png;*.bmp”format to watch storage disk: photos

Video recorder



- In the main menu, slide and select “VIDEO recorder” and click enter to enter the preview interface. Click the left button to record and the right button to preview.

Video player



- In the main menu, swipe to select the video player and click enter to view the saved video

Music



- Swipe to select music in the main menu, and click to enter, you can play the downloaded stored music

Record



- In the main menu, select “Record” and click to enter, you can record.
- **Note:** need memory in watch

Calendar



- In the main menu, swipe to select the calendar, and click to enter, and you can view the calendar

Calculator



- In the main menu, select “Calculator” and click to enter you can calculate.

Alarm



- In the main menu, select “Alarm” and click to enter, you can set the alarm, and up to three different alarms are supported. can set switch on/off, set time and period.

Torch



- In the main menu, slide and select Flashlight, and click into select Open and Close.
- Do not direct your eyes to light, in order to save electricity, it is recommended to open them when necessary.

Wallpaper



- Swipe to select wallpaper in the main menu Click to enter, you can change to the preset wallpaper.

Tool




- In the main menu, slide to select the tool and click to enter, there are stopwatch, timer, and storage functions.

Games



- Seven games are installed on the watch 2048 is a popular digital game.
- **How to play:** Slide up, down, left, or right to move the tiles across the board. The tiles will slide in the slide direction; meanwhile, a new tile will emerge randomly on the board. When the tiles with the same number meet, they will merge into one tile.

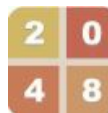

Basketball Shoot master



- **How to play:** Press the basketball to shoot, When the backboard is going to move to the middle, control to shot.

Bee War



- Protect your star from the attack by your enemy. Wipe out all of them before they arrive at your base station.
- How to play: tap left/right to move your warcraft to shoot, need to hit twice to destroy the enemy.
- Score as much as you can! You have a total of three opportunities.
- You can set "Easy", "Normal" and "Hard" modes separately, and set music on or off and view.

Pinball Hit Bricks



- **How to play:** Destroy all bricks to progress to the next level
- White bricks give a special 3-ball bonus. Blue bricks need to be hit 2 times. Score as much as you can!
- The “Easy”, “Normal” and “Hard” modes can be set separately.
- And turn the music on/off or check the score.

Car Grab Goods



- **How to play:** Click the screen left or right to move the car, as much as possible to catch the airdropped supplies.
- You have a total of three opportunities. The “Easy”, “Normal” and “Hard” modes can be set separately. And turn the music on/off or check the score.

Mario eat gold



- **How to play:** You need to collect as many coins as possible and jump over platforms, Don't fall or hit the columns, or you'll die! Press once to jump, and press twice for a big jump.
- The “Easy”, “Normal” and “Hard” modes can be set separately.
- And turn the music on/off or check the score.

Ultimate racing



- **How to play:** Press and hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible. To avoid crashes, you have only one chance.
- Can set turn music on/off or check the score.

Set up



- The following items can be set in the settings

Language

- Can set 5 different languages

Time And Date

- You can set the time and date of the watch. Optional date and time format

Silent Profile

Restore settings

- If you click it, will restore


Hardware Specifications

No.	Item	Parameter/Model
1	CPU model	MT6261
2	Communication system	GSM
3	Screen	1.44 inch; IPS HD colored touchscreen
4	Resolution	240*240
5	Camera	300,000 pixels
6	Battery	400mAh lithium polymer battery
7	Internal memory	32MB
8	Cover material	Plastic (ABS+PC)
9	Strap material	Dow Corning food-grade silicone
10	Watch size	52mm*40.7mm*14.5mm
11	Watch weight	41g
12	Optional languages	English (default), French, Spanish, German

Package Contents

No.	Item	Quantity
1	Cell Phone Watch (with battery)	1
2	USB cable	1
3	Instruction Manual	1

Documents / Resources

	PTHTECHUS B07T1W9C2D Smart Watch with Games and Player [pdf] User Guide B07T1W9C2D Smart Watch with Games and Player, B07T1W9C2D, Smart Watch with Games and Player, Watch with Games and Player, Games and Player, Player
---	---

References

- [User Manual](#)