



pTron Funk Mojo Bluetooth Speaker User Guide

[Home](#) » [pTron](#) » pTron Funk Mojo Bluetooth Speaker User Guide 



Funk Mojo Bluetooth Speaker



User Guide

Important: pTron 'Funk Mojo' speaker is set at 50% default volume. You can increase the volume through the Speaker or through the connected device.

Contents

1 Getting Started & Charging:

2 Troubleshooting:

3 Documents / Resources

3.1 References

4 Related Posts

Getting Started & Charging:

- i. Unbox the Speakers and remove all packaging materials.
- ii. Place the speakers on a flat surface.
- iii. Connect the USB Type-C cable to the charging port on the speaker's backside, and connect the USB end of the Charging cable to a Power Source such as a USB Charger or other Charging Devices with a 5 volt output.
- iv. Charge the speakers fully before initial use for the best battery performance.

Bluetooth Pairing:


- i. Turn on the speakers by long-pressing the power button.
- ii. The speaker will enter pairing mode automatically.
- iii. On your smartphone or tablet, enable Bluetooth and search for nearby devices.
- iv. When you see "pTron BT speaker" in the list of available devices, select it to pair.

Note: If no device is connected within 5 minutes after turning on the speaker, the Speaker will automatically turn off.

Mic function : When both the mic and the speaker are turned on, the mic will automatically connect with the speaker.

Power button: Turn on/off the mic by long-pressing the Power button.

Volume control: Press the "+" button once to increase the sound, and press the "-" button once for sound decrease.

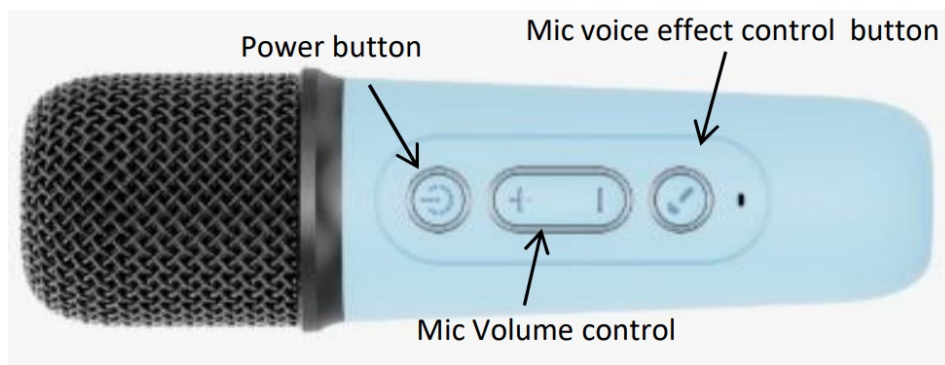

Voice effect button:

This mic comes with Five sound effect options; You can choose the sound effect as per your choice.

Basic Operation:

- i. Power on/off: Turn on/off the speakers by long-pressing the Power button.
- ii. Volume control: Press the "+" button once to increase the sound, and press the "-" button once for sound decrease.
- i. Play/Pause: Press the play/pause button once to start or pause audio playback.
- iii. Next/Previous track: Long press the "+" button to move to the next song, and long press the "-" button for the previous track when playing music.
- iv. Led light control: Long press the 'M' button to turn the LED light on or off, Press double time to change the light effect, This speaker comes with 7 different LED light modes.

v. Mode: If a TF card/USB drive or Aux in cable is already plugged into the speaker but you want to play a song via Bluetooth then just press the Mode button to enable playback thru Bluetooth connected device. To switch back to playback from TF card/USB drive or Aux, just press the Mode button again.

Troubleshooting:

- i. If the speakers do not pair with your Bluetooth device, make sure the speakers are in pairing mode and try again.
- ii. Check the volume level on both your audio source and the speakers to ensure they are not set too low.

Important: Please use this speaker within a 10 metre wireless range from the connected device.

Safety Precautions

- Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
- Please don't over-charge the product as it will decrease the service life of battery.
- Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
- This product or the Bluetooth function should not be used during charging.
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect your hearing.
- Please don't open/temper the product or product's battery.
- Please keep the product out of children's reach.
- Dispose the product responsibly and adhere to your local authority guidelines.

Packing Box Content

1 Speaker, 1 USB Type-C charging cable, 1 Karaoke Mic, 1 User Manual/Warranty QR Card

What is Covered in Warranty?

- ✓ Manufacturing defects in materials and workmanship of the product ONLY. This warranty applies when the product is used under normal conditions and the purpose for which the product was designed.
- ✓ No warranty on product accessories..
- ✓ To avail warranty, Product Registration is Mandatory at <https://ptron.in/apps/product-registration>
- ✓ Please read through the complete warranty details at <https://ptron.in/pages/repair-service-warranty>

Customer Care Details:


Mail: support@ptron.in

Tel: 040 – 67138888

Service Centers List: <https://ptron.in/pages/ptron-service-centers>

Disclaimer: The colour and specifications shown in or mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

Documents / Resources

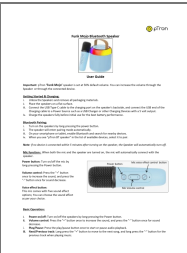	<p>pTron Funk Mojo Bluetooth Speaker [pdf] User Guide</p> <p>Funk Mojo Bluetooth Speaker, Funk, Mojo Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

References

- [!\[\]\(a22ba4e13c745edbf29e51af246c4c12_img.jpg\) Our Service Center's - pTron India](#)
- [!\[\]\(33b18af9a4b997eb52666cfeb3c44157_img.jpg\) Repair & Service Warranty - pTron India](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.