

pulsar AWOP-360PR Distribution Junction Box



pulsar AWOP-360PR Distribution Junction Box Instructions

[Home](#) » [Pulsar](#) » pulsar AWOP-360PR Distribution Junction Box Instructions 

Contents

- 1 [pulsar AWOP-360PR Distribution Junction Box](#)
- 2 [Description](#)
- 3 [Installation](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)



pulsar AWOP-360PR Distribution Junction Box



Description

The junction box for fire alarm systems is designed for connecting fire protection devices in cable installation systems with fire resistance according to the DIN 4102-12 standard, where the uninterruptible power supply or transmission of the signal in case of fire is required.

The junction box is designed to guarantee the mechanical ability to keep the cable routes capable of guaranteeing the uninterruptible power supply and transmission of telecommunication signals in the fire zone.

The junction box can be used for power supply of fire protection equipment, such as ventilators and smoke vents, fire alarm control panels, emergency warning systems, etc.

Junction box enable to connect and split 3 wires cable.

Table 1. Elements of the junction box.

Component No .	Description
[1]	Mounting holes for mounting to a surface.
[2]	Cable glands.
[3]	Protection connector PE.
[4]	Connection sockets.

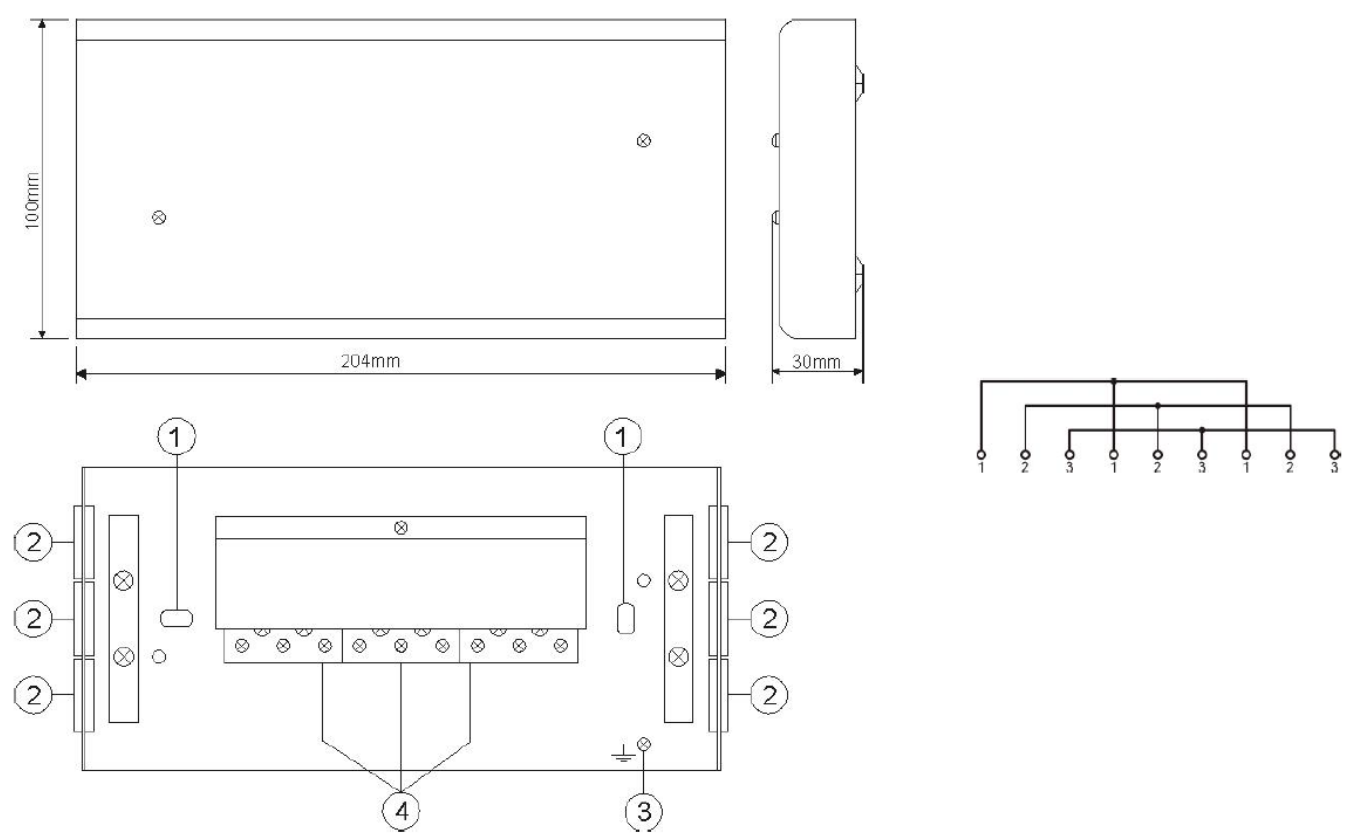


Fig.1. The junction box and wiring diagram.

Table 2. Technical parameters

Voltage	450 V AC max
Diameter of installation cable	Max. 13mm
Cross-section of the cable	Max. 6mm ²
Protection class	IP20
Enclosure	DC01 1mm steel plate, color RAL 3001 (red)
Dimensions	204 x 100 x 30 [mm] (WxHxD)
Temperature range during installation	-25°C to +60°C
Mounting	141mm Ø5,5 mm
Net/gross weight	0,63 / 0,66 [kg]

Installation

The junction box for fire alarm systems should be mounted directly to the concrete base class min. B20 or natural stone. Other building materials of adequate strength and of fire resistance class of at least R90 are also approved for use.

The junction box for fire alarm systems should be mounted to the ceiling or wall using two steel pins of adequate fire resistance. The cables should be mounted using handles at intervals of 600 mm. Mounting distance between the cables (handles) and the edge of the junction box is maximally 100 mm.

Pay attention to the following boundary conditions:

- The bushings and expansion bolts should be recessed at least 30 mm into the concrete.
- Tension on the pin should not exceed 500 N.
- Alternatively, the pins with well-documented fire protection design can also be used.
- It should be ensured that the functional class of the cable assemblies containing junction boxes for fire alarm systems will not be adversely affected by falling building elements.

Installation cables should be led through the appropriate bushings and then mounted with cable holders located inside the enclosure.


WEEE LABEL

Waste electrical and electronic equipment must not be disposed of with normal household waste. According to European Union WEEE Directive, waste electrical and electronic equipment should be disposed of separately from normal household waste.



e-mail: sales@pulsar.pl <http://www.pulsar.pl>

Documents / Resources

	<p>pulsar AWOP-360PR Distribution Junction Box [pdf] Instructions AWOP-360PR, AWOP-360PR Distribution Junction Box, AWOP-360PR, Distribution Junction Bo x, Junction Box, Box</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.