



PULSE E20 Portable Wireless Speaker Instruction Manual

[Home](#) » [Pulse](#) » PULSE E20 Portable Wireless Speaker Instruction Manual 

PULSE E20 Portable Wireless Speaker Instruction Manual



Contents

- [1 Technical Specifications](#)
- [2 Features](#)
- [3 Button instruction](#)
- [4 Directions for use](#)
- [5 Trouble shooting](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Technical Specifications

Wireless standard: V5.3

Transmission distance: 10 meters

Output power: 10W*2

Playing time: 4 – 5 hours

Frequency effect: 80Hz-20Khz

Speaker: 57mm 40, 10W*2

Input power: 5V  1A

Maximum current consumption: 1A


Battery type: 18650 lithium ion battery 3600mAh

Audio signal input interface: standard 3.5mm headphone jack (stereo)

Features

1. Wireless connection.
2. Memory function, break point resuming.
3. Support **U** disk / **TF** Card / **AUX** playback mode.
4. Built-in lithium ion battery.
5. Support **MP3/WAV/WMA/FLAC/APE** music format decoding.
6. Using high-fidelity speakers, the sound is more natural and delicate.
7. **IPX5** waterproof
8. 1+1 device serial connection function
9. Radio function

Pulse E20 button indication section view

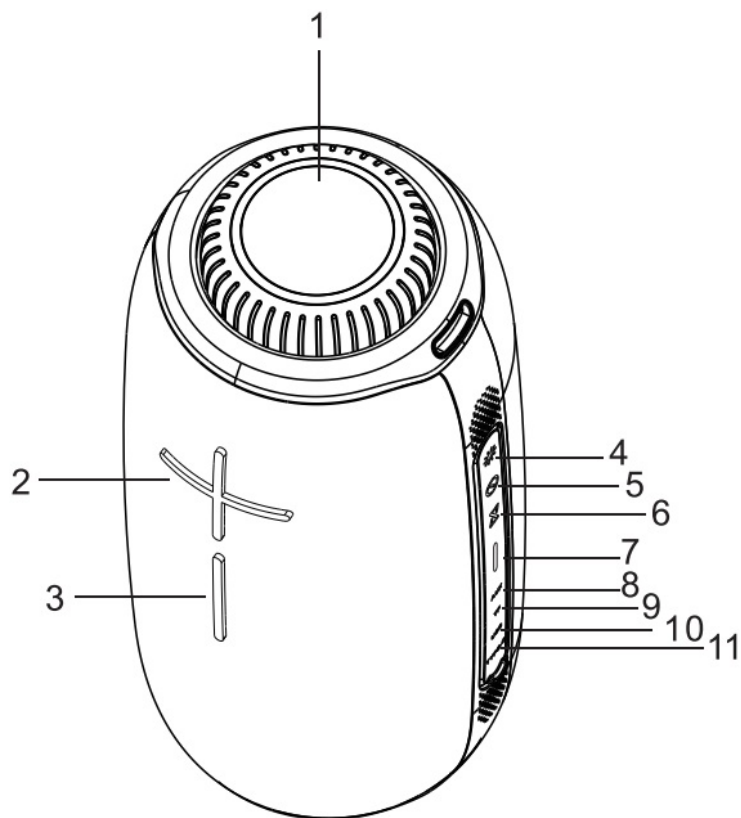

Button instruction

1. Knob keys

Rotate to increase or decrease volume.

2. Button +

Click: next song

3. Buttons –

Click: previous song

4. Light button

Single click: switch the light mode

Long press: turn the light on/off

Double click: exit/reconnect Bluetooth connection

5. Power button

Press and hold the switch for about 3 seconds/time.

Click: play/pause

In radio mode: double click to close

6. Tandem keys

Single click: Concatenation/Exit Concatenation

Long press: Transition mode

Double-click in Bluetooth mode to call back;

short press: answer/hang up

In case of incoming call, long press for 2 seconds to reject the call

7. Play indicator

Wireless search status: white light flashes quickly, about 0.5 seconds/time;

Wireless pairing status: white light is always on.

Playing status: the white light flashes slowly about 1 second/time;

8. **AUX IN**
9. **TF Card**
10. **USB Port**
11. **Type-C Port**

Directions for use

1. Bluetooth pairing

Turn on the wireless device, search for Pulse E20, connect and pair, connect. After success, start playing music experience.

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.
3. Voice prompt
 1. There is a voice prompt when turning on/off;
 2. Low battery voice prompt 3 times, turn off after 15s.

4. Charging indicator

Charging is 3 running lights flashing from bottom to top.

The first light flashes when the battery is 0-40% 40% battery, the first light is always on, the second light is flashing 70% battery, the 1st-2nd light is always on, the 3rd light is flashing.

When the battery is 100%, the 1st-2nd-3rd lights are always on.

5. Volume

The default speaker volume is 70% when it is turned on.

6. Charging use:

The machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, and the charging can be completed in about four hours. The playing time of each battery will vary due to the use of different volume levels.


7. No working status, automatic shutdown after 15 minutes.

Trouble shooting

1. **Automatic shutdown:** When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use.
2. **Unable to play music:** The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device.
3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port.
4. There is no response to the keys or the function is disordered: try again after shutting down.
5. When the machine is abnormal, use a slender round bar to press the **RESET** hole behind the **AUX** to reset.



Documents / Resources

| | |
|---|--|
|  | <p>PULSE E20 Portable Wireless Speaker [pdf] Instruction Manual E20, E20 Portable Wireless Speaker, Portable Wireless Speaker, Wireless Speaker, Speaker</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.