



PURMO FLA Integrated Insert Instruction Manual


[Home](#) » [PURMO](#) » PURMO FLA Integrated Insert Instruction Manual 




Contents

- [1 Assembly instruction](#)
- [2 Aontembligh](#)
- [3 pre-settimh](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Assembly instruction

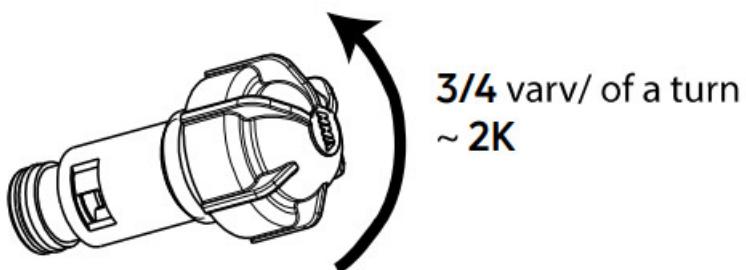



Aontembligh

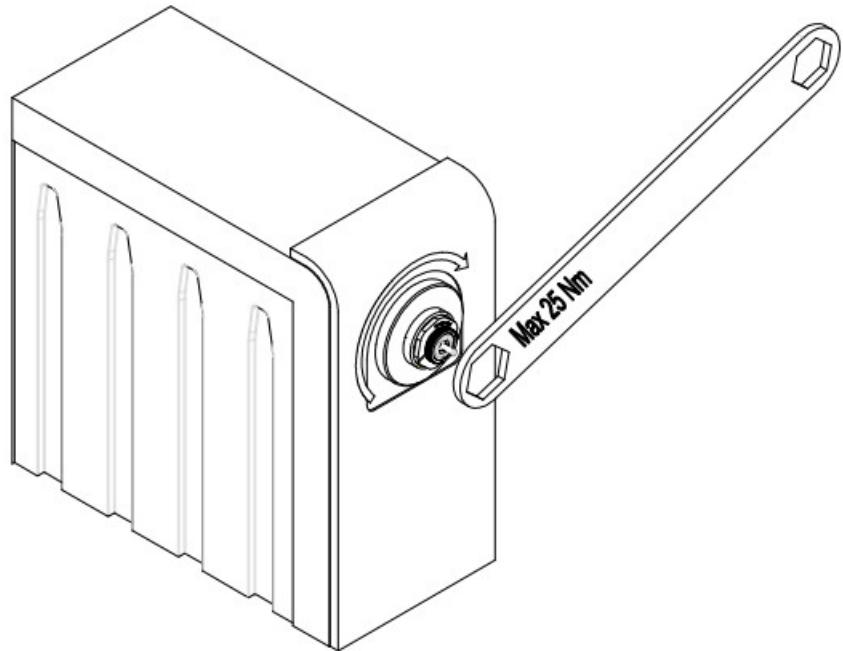

All mounting must be carried out in accordance to instructions for proper operation, the existing valve body must be in undamaged condition and that the instructions are followed. For non-conforming valve designs, incorrect installation, insufficient heating capacity or anything outside our control is out of product responsibility.

pre-settimh

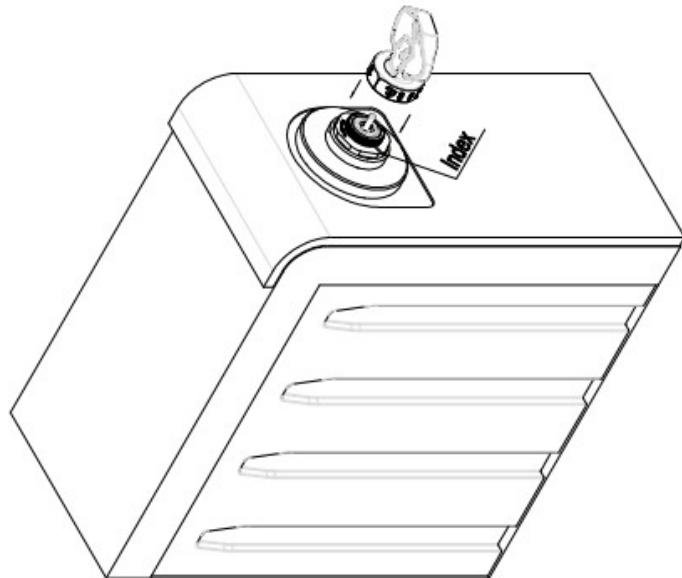


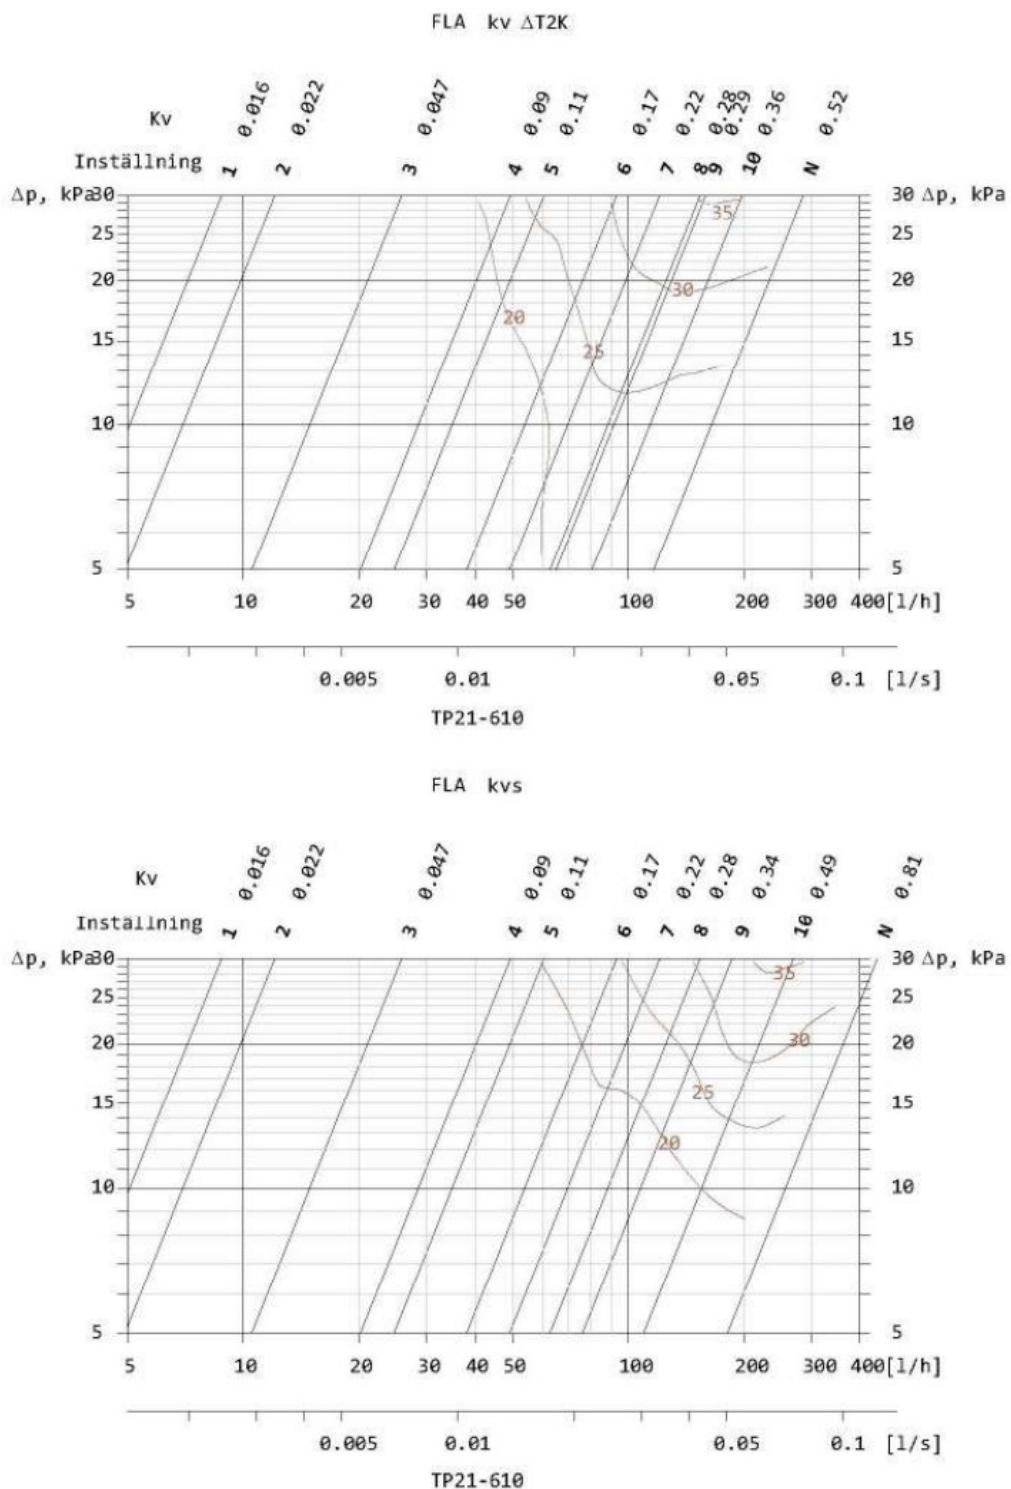

BY PURMO

Purmo Group Sweden AB
Tel. +46 (0)433 737 37
48282169 rev 2
220613

Documents / Resources

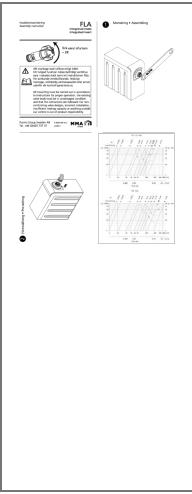

[PURMO FLA Integrated Insert](#) [pdf] Instruction Manual
FLA Integrated Insert, FLA, Integrated Insert, Insert