



PXN 0082 Wired Arcade Stick Gaming Controller User Manual

[Home](#) » [PXN](#) » PXN 0082 Wired Arcade Stick Gaming Controller User Manual 

Contents

- [1 PXN 0082 Wired Arcade Stick Gaming Controller](#)
- [2 Product Information](#)
- [3 Product Using Instructions](#)
- [4 Product Overview](#)
- [5 Connections](#)
- [6 SWITCH Connection](#)
- [7 Mode And Functions](#)
- [8 Product Specifications](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



PXN 0082 Wired Arcade Stick Gaming Controller



Product Information

Product Specifications

- **Model:** PXN-0082
- **Connection:** USB Cable
- **Working Current:** < 25mA
- **Packaging Size:** Appr. 268 * 195 * 114 mm
- **Product Size:** Appr. 250 * 175 * 105 mm
- **Unit Weight:** Appr. 720 g
- **Usage Temperature:** 10-40°C
- **Usage Humidity:** 20-80%

Frequently Asked Questions

- **Q:** What gaming platforms is the PXN-0082 compatible with?
 - **A:** The PXN-0082 is compatible with PC, PS3, PS4, SWITCH, Xbox One, and Xbox Series X&S.
- **Q:** How do I connect the PXN-0082 to a PC?
 - **A:** To connect the PXN-0082 to a PC, plug the USB of the joystick into the computer's USB interface and follow the installation instructions.
- **Q:** How do I calibrate the PXN-0082 controller?
 - **A:** If the controller is not functioning properly, it may need to be calibrated. To calibrate it, go to the Settings page on your gaming platform.
- **Q:** How do I switch between D-pad mode and controller joystick mode?

- **A:** The PXN-0082 joystick controller has a switch that allows you to toggle between D-pad mode and controller joystick mode.

Product Overview

The PXN-0082 is a versatile joystick controller designed for use with various gaming platforms including PC, PS3, PS4, SWITCH, Xbox One, and Xbox Series X&S. It features an exchangeable joystick and D-pad, as well as indicators for TURBO and MACRO functions.

Product Using Instructions

Exchange the Joystick and D-pad

- The PXN-0082 allows you to easily exchange the joystick and D-pad according to your preference.
- Simply detach the current joystick or D-pad and attach the desired one.

Indicator of TURBO and MACRO

- The joystick controller is equipped with indicators for TURBO and MACRO functions.
- These indicators will provide visual feedback on the status of these functions.

Action Button

- The controller features various action buttons including L1/LB, R1/RB, A, B, X, Y, L2/LT, R2/RT, L3/SL, and R3/SR.
- These buttons are used for different in-game actions depending on the gaming platform and game being played.

Original Controller (PS4 / Xbox One / Xbox Series X&S) USB Port

- The PXN-0082 can be connected to the USB port of the original controllers for PS4, Xbox One, and Xbox Series X&S.
- This allows for seamless integration with these gaming consoles.

PC Connection

To connect the PXN-0082 to a PC, follow these steps:

1. Plug the USB of the joystick into the computer's USB interface.
2. At the first connection, your computer will find new hardware and install the driver automatically.
3. Open the test interface to test the axes and buttons of the controller.
4. If the controller is not functioning properly, it may need to be calibrated. To calibrate it, go to the Settings page.

PS3 Connection

To connect the PXN-0082 to a PS3, follow these steps:

1. Plug the USB of the joystick into the PS3's USB interface and power on the console.
2. After connection, the console will allocate a channel to the joystick and the indicator light will turn on. You can now start playing games or set functions of the console.

PS4 Connection

 
To connect the PXN-0082 to a PS4, follow these steps:

1. Power off the original controller of the PS4.
2. Connect the joystick with the PS4 controller using a Micro USB cable.
3. Plug the USB of the joystick into the PS4's USB interface.
4. Press the HOME button. After that, the joystick can be used to play games and adjust settings.

System Requirements

- Support Platform
 - PC /PS3 /PS4 /SWITCH /Xbox One /Xbox Series X&S

Product Overview

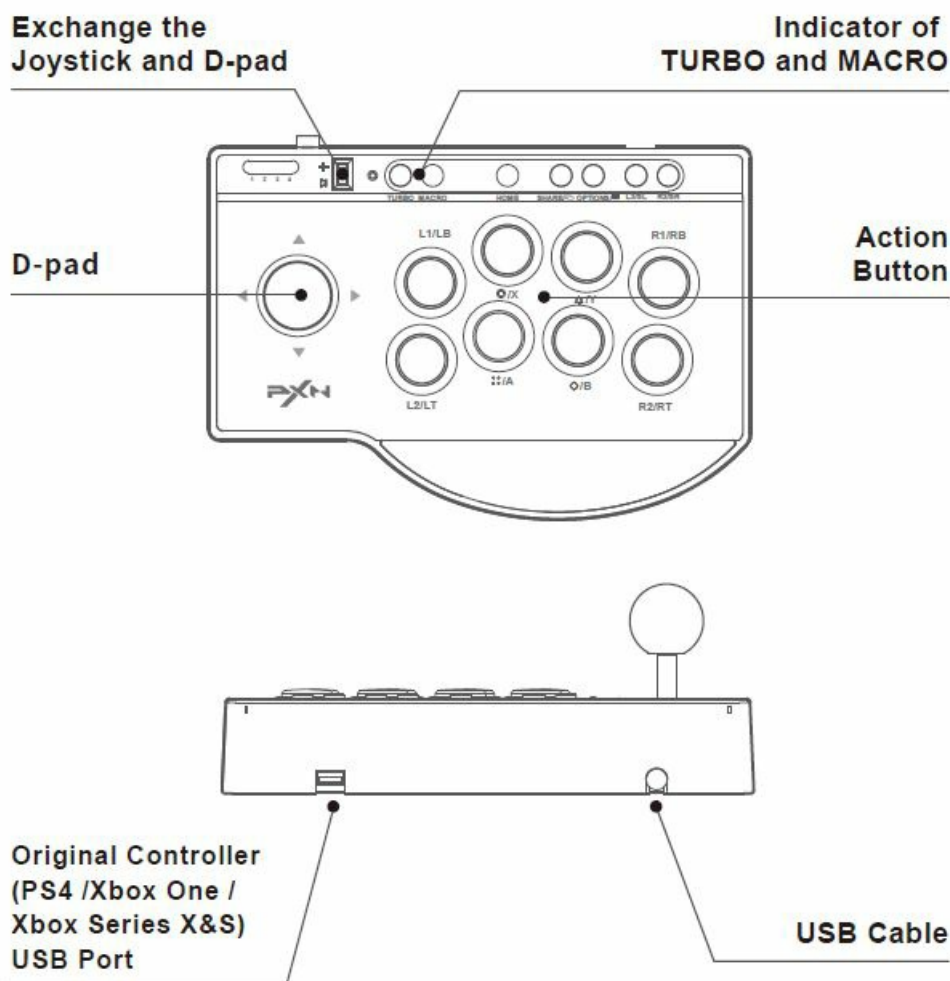


Connections

PC Connection

- **Step 1:** Plug the USB of Joystick into the computer USB interface.
- **Step 2:** At the first connection, your computer will find new hardware and install the driver automatically.

Testing

 It Can test function buttons and stick through computer game controller on PC. The specific methods show below:

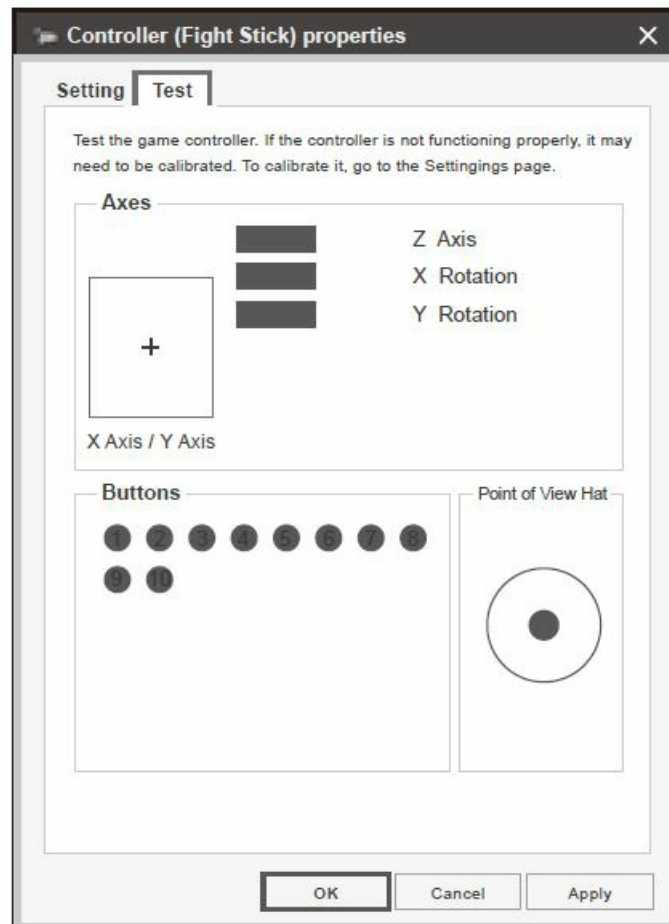

- WIN XP/7/10: enter Control Panle → Devices and Printers → controlller icon → right click with your mouse → Game controller settings, choose Properties test.
- Open the test interface as below, you can test the axes and buttons.

PS3 Connection

- **Step 1:** Plug the USB of Joystick into the PS3 USB interface, power on the console.

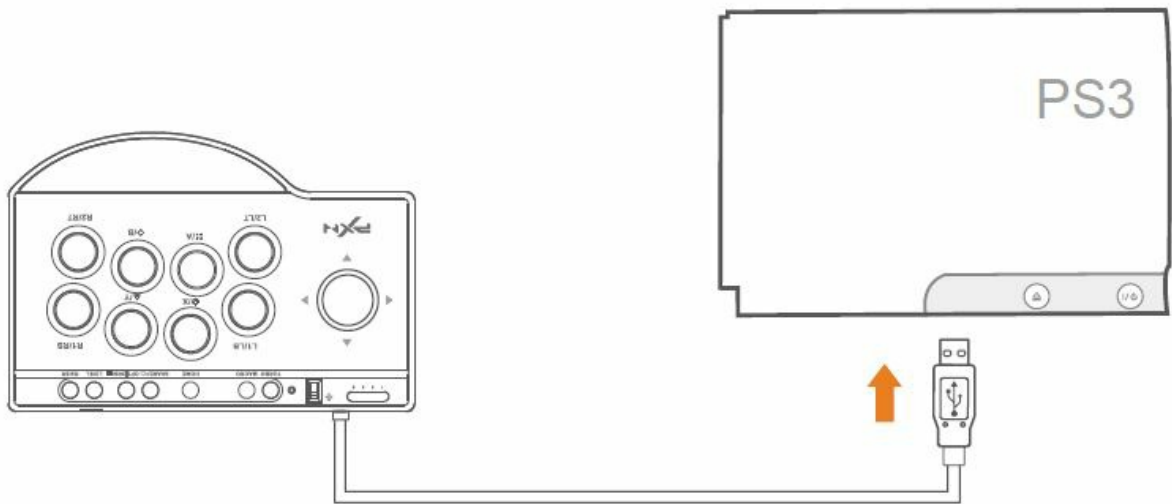 


Diagram of PS3 Connection

- **Step 2:** After connection, the console will allocate a channel to Joystick and the compared indicator light on. You can start to play game or set functions of console.

PS4 Connection

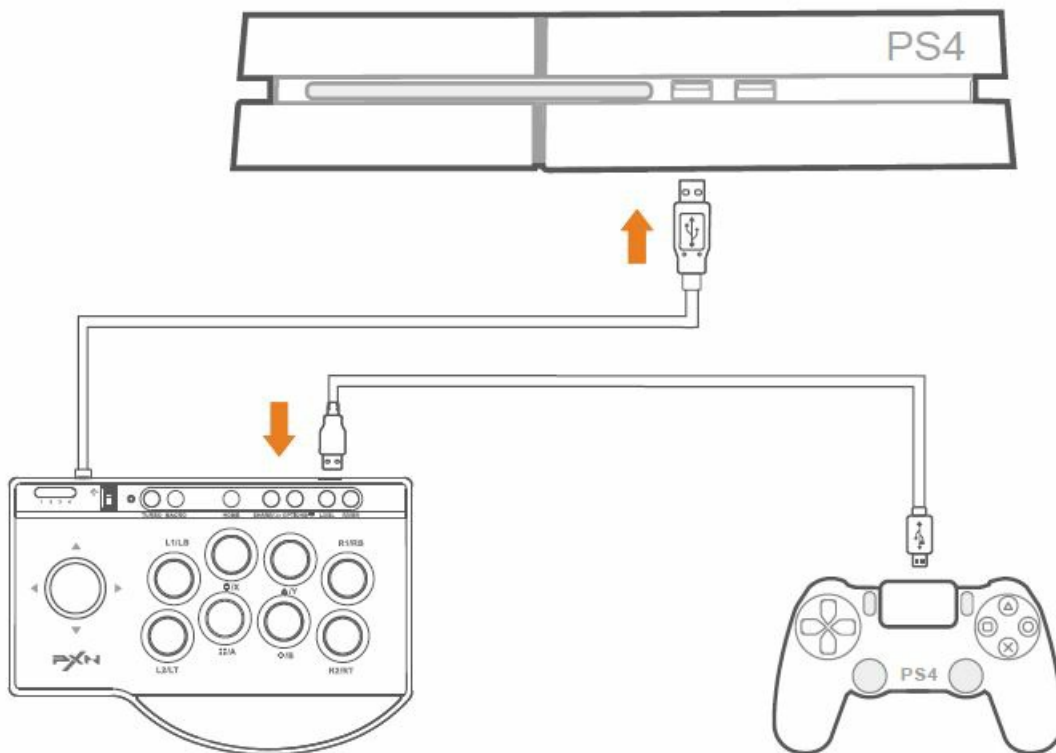 


Diagram of PS4 Connection

- **Step 1:** Power off the original controller of PS4.
- **Step 2:** Connect the Joystick with PS4 controller by Micro USB cable.
- **Step 3:** Plug the USB of Joystick into PS4 USB interface.
- **Step 4:** Press the button of "HOME" . After that the Joystick can start to play game and setting.

XBOX ONE /XBOX SERIES X&S Connection

 



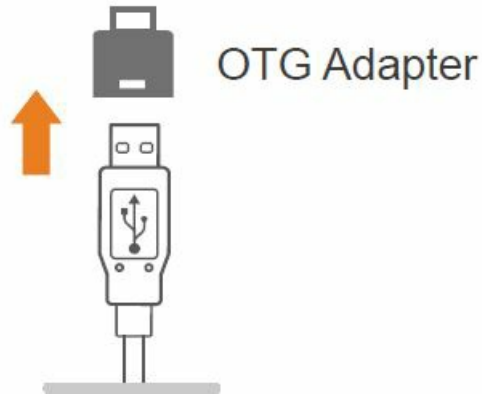 
Diagram of XBOX ONE Connection

- **Step 1:** Power off the original controller of Xbox One /Xbox Series X&S.
- **Step 2:** Connect the Joystick with console controller by Micro USB cable.
- **Step 3:** Plug the USB of Joystick into console USB interface.
- **Step 4:** Press the button of "HOME" . After that the Joystick can start to play game and setting.

SWITCH Connection

*Enter System settings  Controllers and Sensors, Select Pro Controller Wired Communication. The option state is ON.

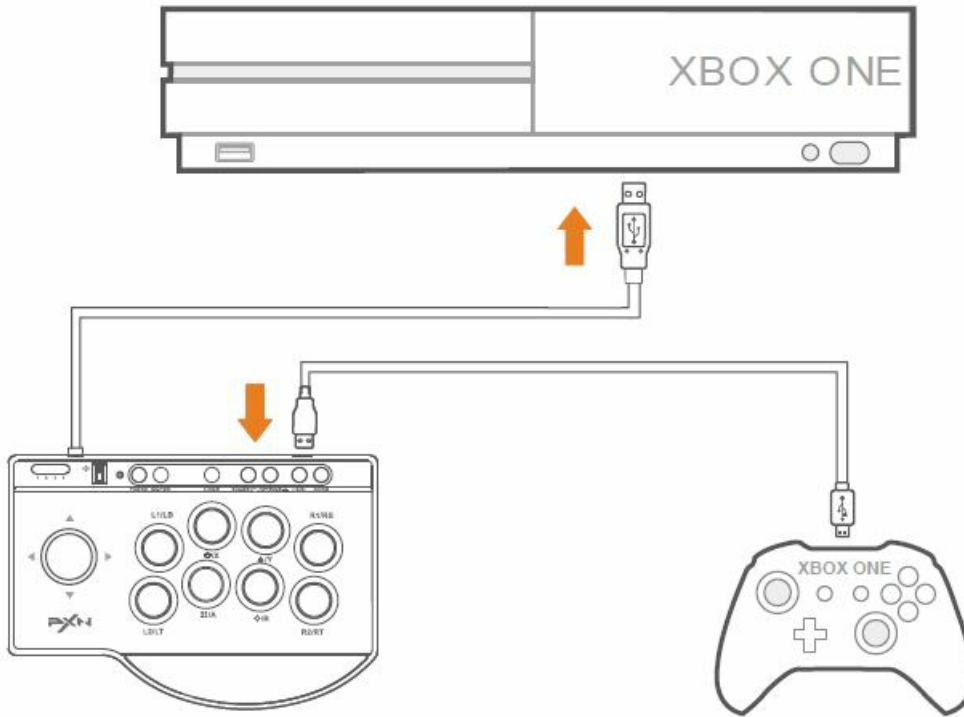Connect With Switch Console



- **Step 1:** Connect the TYPE-C OTG with the USB of Arcade Fightstick.
- **Step 2:** Connect the USB main cable of the Arcade Fightstick to Switch Console.
- **Step 3:** Power on switch console to play.



Connect With Switch dock



- **Step 1:** Place the Switch dock and ensure successful connection.
- **Step 2:** Plug the USB of Arcade Fightstick into Switch dock and power on Switch console.

Mode And Functions

Joystick MODE Change

- Turn the switch to the icon of “D-pad ”  , the joystick is D-pad function on different console application.
- Turn the switch to the icon of “Controller Joystick ”  the joystick is
- Controller joystick function on different console application.

TURBO Function

- **Available Buttons:** A B X Y LB RB LT RT.
- **TURBO Set:** Press TURBO and Available Buttons, indicator LED flash.
- **TURBO Clear:** Press TURBO and Well-Setting Buttons indicator LED lights off.

MACRO Function

MACRO Function: L3 R3.

MACRO Sourcing Buttons: A, B, X, Y, LB, LT, L3, RB, RT, R3, Joystick UP/ DOWN/LEFT/RIGHT.

MACRO Setting

- **Step 1:** Press MACRO, Green LED lights on, press L3 or R3, Green LED flash.
 - **Step 2:** Press Sourcing Buttons what you want to set, after setting, press MACRO and exit, green LED light off.
 - **Step 3:** Press well-setting button with MACRO function, it will act macro action after releasing, green LED flash to indicate.
1. The maximum times of setting MARCO function buttons at a time is 15 times. Pressing several buttons meanwhile means 1 time, After 15 times, it will save and exit this setting automatically.
 2. SHARE and OPTIONS buttons are used as separating key for dividing two identical action keys or delay functions.

MACRO Cancel

- **Step 1:** Press MACRO, green LED light on, press well-setting buttons of MACRO, green LED flash.
- **Step 2:** Press MACRO again, green LED light off, cleared.
- **Step 3:** Re-plug Arcade fight stick or power off and reconnection, MACRO function will be cleared automatically.

Attention

- Avoid fierce vibration. Don't take apart, revise and mend by yourself.
- Don't let water or other liquid entering inside of the gamepad to make any damages.
- Don't store in places of high humidity, temperature, heavy oil or smoke.
- Don't drop the gamepad into fire or explosion danger may be caused by built-in battery.
- Children should be under the custody of adults to use this product.

Product Specifications

- **Model:** PXN-0082
- **Connection:** USB Cable
- **Working Current:** < 25mA
- **Packaging Size:** Appr. 268 * 195 * 114 mm
- **Product Size:** Appr. 250 * 175 * 105 mm
- **Unit Weight:** Appr. 720 g

- **Usage Temperature:** 10-40 °C
- **Usage Humidity:** 20 80 %

“PXN” is a registered trademark of ShenZhen PXN Electronics Technology Co., Ltd

PS4/PS3 is a registered trademark of Sony Computer Entertainment Inc.

Xbox is a registered trademark of Microsoft Corporation.


SWITCH is a registered trademark of Nintendo Co., Ltd.

All trademarks are the property of their respective owner. Technical specifications are subject to change.

Information contained herein is subject to change without prior notice. ShenZhen PXN Electronics Technology Co., Ltd. shall not be made liable for any errors that may appear.

Please keep this information for later reference.

Documents / Resources

	<p>PXN 0082 Wired Arcade Stick Gaming Controller [pdf] User Manual PXN0082, 0082 Wired Arcade Stick Gaming Controller, 0082, Wired Arcade Stick Gaming Controller, Arcade Stick Gaming Controller, Stick Gaming Controller, Gaming Controller, Controller</p>
---	---

References

- [User Manual](#)