

PYLE **ACCPGATN** **R20 Digital** **Tuner**



PYLE ACCPGATNR20 Digital Tuner User Guide

[Home](#) » [Pyle](#) » PYLE ACCPGATNR20 Digital Tuner User Guide 

Contents

- [1 PYLE ACCPGATNR20 Digital Tuner](#)
- [2 Features](#)
- [3 Technical Specs](#)
- [4 Precautions](#)
- [5 Controls and Functions](#)
- [6 Troubleshooting](#)
- [7 FCC](#)
- [8 MORE INFORMATION](#)
- [9 FAQs](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

PYLE

PYLE ACCPGATNR20 Digital Tuner



Features

- Tuning Instrument
- Automatic Shut-off Function
- Clear LCD Digital Display with a Good Backlight
- Easy to Read and Use
- 360 Degree Rotatable
- Easy One-Button Operation
- Convenient Clip-on Design

Technical Specs

- Tuning Range: A0 – C8 (27.5 – 4186 Hz)
- Response Time: <20ms
- Used for Stringed Instruments: Guitars, Bass, Violins, Ukuleles
- Battery Powered Tuner: Requires (1) x Button Cell (CR-2032), Included
- Tuner Size: 3.2" x 1.8" x 1.3 inches


Precautions

- Avoid using the tuner in direct sunlight, extreme temperatures, high humidity, or areas with excessive dust, dirt, or vibration. Also, keep it away from magnetic fields.
- Ensure the tuner is powered off when not in use. Remove the battery if the tuner is inactive for extended periods.
- Radios and televisions placed nearby may experience reception interference.
- Avoid applying excessive force to the switches or controls to prevent damage.
- Use a clean, dry cloth for cleaning. Do not use flammable liquid cleaners such as benzene or thinner.
- To prevent fire or electrical shock, do not place liquids near this equipment.

WARNING: Cancer and Reproductive Harm – www.P65warnings.ca.gov

Controls and Functions

1. Power Button: Press and hold for 2 seconds to turn the tuner on or off. Use the power button to switch between tuning modes (Chromatic/Guitar/Bass/Violin/Ukulele).
2. Battery Compartment: Located at the back of the tuner.
3. Clip: Used to attach the tuner to your instrument.
4. Display:
 - a. Note Name: Displays the note name for all tuning modes.
 - b. String Number: Displays the string number for Guitar, Bass, Violin, and Ukulele modes.
 - c. Tuning Mode: Indicates the current tuning mode.
 - d. Meter: Shows the tuning status.

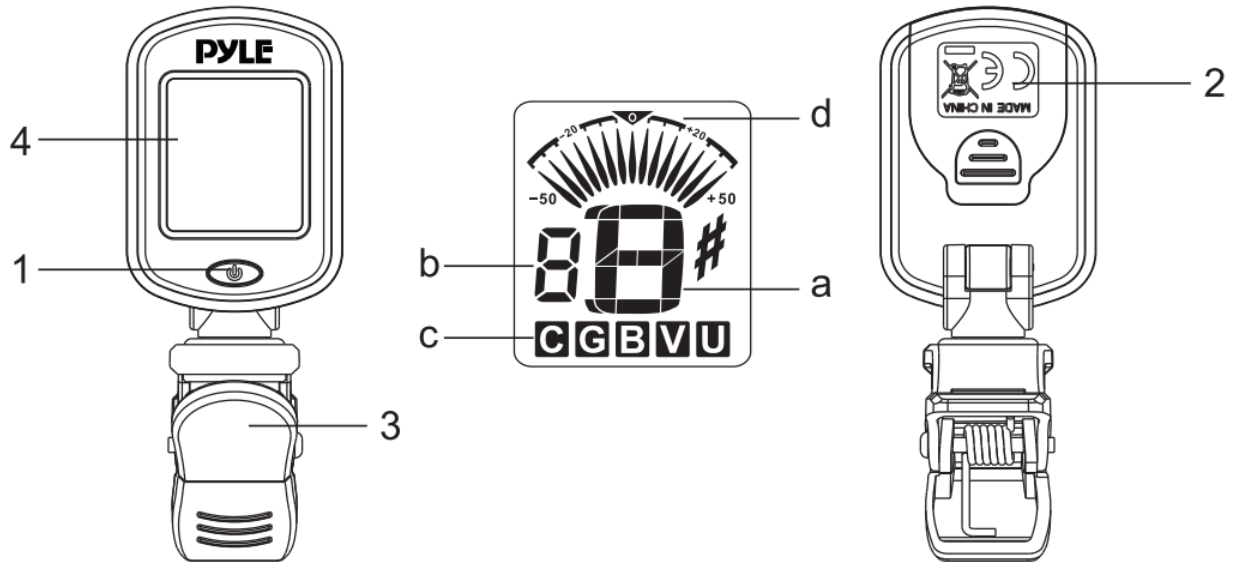

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

PyleUSA.com/register



Tuning Procedure

- **Power On/Off:** Press and hold the power button for 2 seconds to turn the tuner on or off.
- **Select Tuning Mode:** Press the power button continuously to cycle through tuning modes (Chromatic, Guitar, Bass, Violin, and Ukulele).
- **Clip the Tuner:** Attach the tuner to your instrument.
- **Play a Note:** Play a single note on your instrument. The note name (and string number) will appear on the display. The screen color and meter will indicate the tuning status:
 - Green Backlight & Center Meter: Note is in tune.
 - White Backlight & Meter Left/Right: Note is flat or sharp.
 - In Chromatic mode, the display shows the note name.
 - In Guitar, Bass, Violin, and Ukulele modes, the display shows the string number and the note name.

Power Saving Function

If no signal is detected for 3 minutes after the tuner is powered on, it will turn off automatically.

Installing the Battery

- **Open the Battery Compartment:** Press the marked area on the back of the tuner to open the case.
- **Insert Battery:** Insert a CR2032 coin battery, ensuring the correct polarity.

Note: Battery life may vary based on usage conditions.

Troubleshooting

- If the tuner malfunctions, turn it off and on again. If the problem persists, remove the battery, wait 5 minutes, and reinstall it.
- The included battery is for testing purposes. Replace with a high-standard battery when necessary.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the

body

FCC

FCC Statement

This equipment has been tested and complies with the limits for a Class B digital device, per part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this equipment does cause harmful interference to radio or television reception, determined by turning the equipment off and on, the user is encouraged to correct the interference with one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the distance between the equipment and the receiver. Connect the equipment to an outlet on a different circuit from the one the receiver is connected to. Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not explicitly approved by the manufacturer could void your authority to operate this equipment.

Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information:

The device meets general RF exposure requirements and can be used safely.

MORE INFORMATION

Questions or Comments?

- We are here to help!
- Phone: 1.718.535.1800
- [PyleUSA.com/ContactUs](https://www.pyleusa.com/contact-us)



Visit Our Website SCAN ME

- [PyleUSA.com](https://www.pyleusa.com)




- www.PyleUSA.com

FAQs

- **Q: How do I reset the tuner to factory settings?**
 - A: To reset the tuner to factory settings, locate the reset button on the back of the device and press it using a small pointed object such as a paperclip. This will restore the tuner to its original settings.
- **Q: Can I use this tuner with external speakers?**
 - A: Yes, you can connect the digital tuner to external speakers using the audio output ports located on the back of the device. Ensure to use appropriate cables for a secure connection.

Documents / Resources

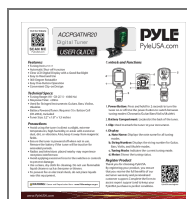

[PYLE ACCPGATNR20 Digital Tuner](#) [pdf] User Guide
ACCPGATNR20 Digital Tuner, ACCPGATNR20, Digital Tuner, Tuner

References

- P65warnings.ca.gov
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.