



# PYLE PBKSRB40 Desktop Wireless BT Bookshelf Speakers User Guide

[Home](#) » [Pyle](#) » PYLE PBKSRB40 Desktop Wireless BT Bookshelf Speakers User Guide 

## Contents

- [1 PYLE PBKSRB40 Desktop Wireless BT Bookshelf Speakers](#)
- [2 Box Contents](#)
- [3 LED Indicators and Button Introduction](#)
- [4 Know Your Remote](#)
- [5 Connection Diagram](#)
- [6 Connecting with a TV Active Speaker](#)
- [7 Connecting a Wireless BT Device](#)
- [8 Troubleshooting No sound](#)
- [9 Specifications](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

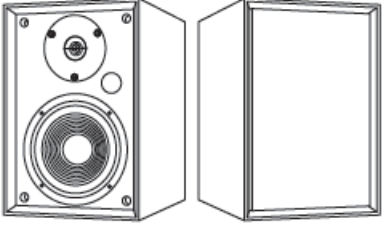 


 
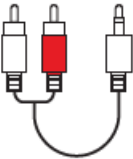 
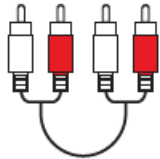 
 
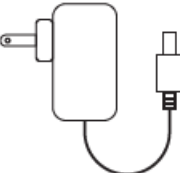 
# PYLE

**PYLE PBKSRB40 Desktop Wireless BT Bookshelf Speakers**

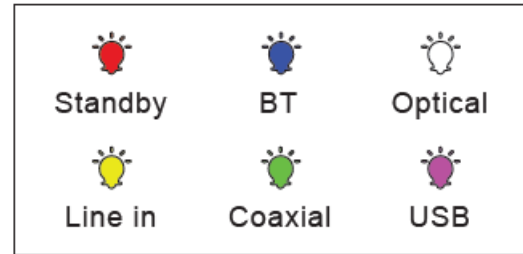 
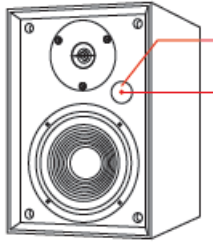 


Please read all instructions before use for the best performance of this product. Save these instructions for future reference.

## Box Contents

			
Bookshelf Speaker		Remote Control	Quick Start
			
RCA to RCA audio cable		Stereo RCA to 3.5mm audio cable	
			
Digital Optical cable		Power Adapter	

## LED Indicators and Button Introduction



- Infrared receiver
- LED Indicators
- Active Speaker

1. Power switch
2. Input selection

Press in to navigate between audio sources: BT -> Optical -> Coaxial -> LINE IN -> USB

3. Sound effects

Press in to navigate between audio sources: Music -> Dialogue -> Movie

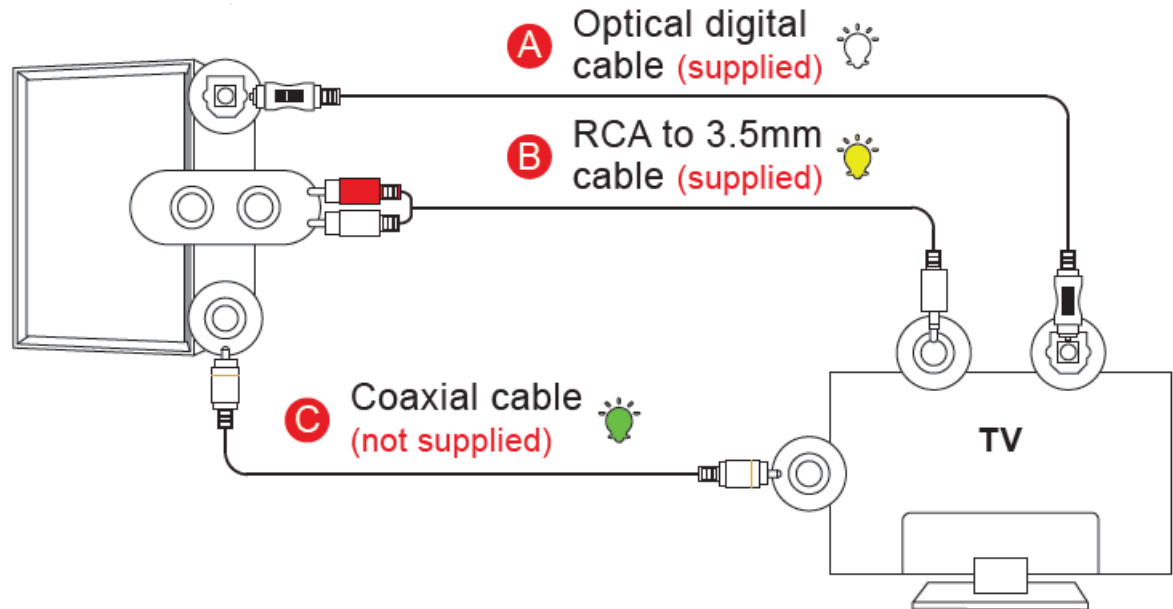 
4. Volume control
5. Treble control
6. Bass control
7. Optical input port
8. Coaxial input port
9. Line in input port
10. USB input port
11. Left speaker audio output
12. Power port
13. Left speaker audio in

## Know Your Remote



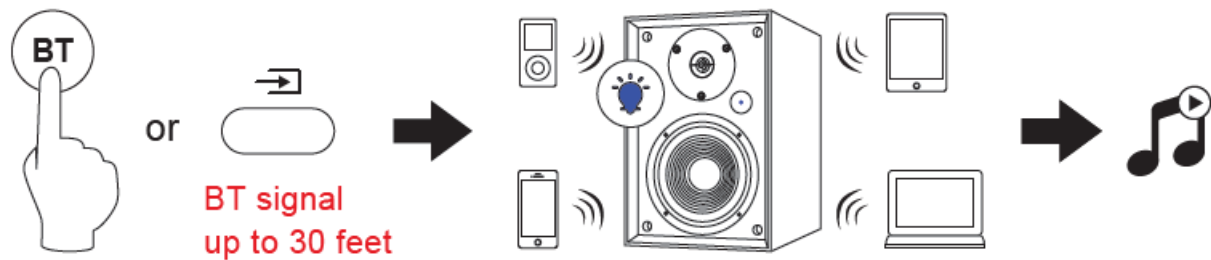 
	Power button		Mute/Unmute
	Volume up		Volume down
	Previous track		Next track
	Play/pause		Optical mode
	Coaxial mode		BT mode
	USB mode		Line mode
	Movie mode		Music mode
	Dialogue mode		

## Connection Diagram



- **a** Coaxial cable (not supplied)
- **b** Digital Optical cable (supplied)
- **c** USB (not supplied)
- **d** BT
- **e** Stereo RCA to 3.5mm audio cable (supplied)
- **f** RCA to RCA audio cable (supplied)
- **g** Power Adapter (supplied)

## Connecting with a TV Active Speaker



**Method 1.** Connecting using an Optical cable.

Select Optical mode and set the TV's audio output to "PCM". (More information on PCM page)

**Method 2.** Connecting using a RCA to 3.5mm cable. Select RCA mode.

**Method 3.** Connecting using an Coaxial cable.

Select Coaxial mode and set the TV's audio output to "PCM". (More information on PCM page)

## Setting "PCM" on your TV

When all cables are connected properly, and LED indicator lights properly, if there is no sound from tv or Soundbar, please set your tv as below:

1. Press "Menu" on the TV's remote control.
2. Press the arrow keys on the remote to scroll to "Audio Settings."
3. Press "OK" on the remote control.
4. Scroll to "Advanced Audio" and press "OK". Some televisions may not have an "Advanced Audio" menu and

may list various audio settings instead.

5. Scroll to “Audio Output Mode” or “Digital Audio Output Mode” and press “OK”.
6. Scroll until “PCM” is displayed as the current audio output.
7. Press “OK” to save the settings.

## **Connecting a Wireless BT Device**

- **a.** Press the “BT” button on the remote or press the “ ” button on back panel of the active speaker, the LED indicator blinks blue.
- **b.** Turn on Wireless BT on the BT device.
- **c.** Select “PyleUSA” and connect it. When your BT device is connected, the LED indicator blinks blue slowly.
- **d.** Play music files from the device, connected via BT, through the bookshelf speaker.

## **Troubleshooting No sound**

- Check if the power indicator light is ON.
  - Try to turn up the volume using either the master volume control or remote control.
  - Ensure the audio cables are firmly connected and the input is set correctly on the speakers.
  - Check if there is signal output from the audio source.
- Cannot connect via Wireless BT
- Make sure the speaker is switched to BT input, in other audio input mode BT can not be paired or connected.  
Disconnect from any BT device by press and hold the volume dial in BT mode, then try again.
  - Effective BT transmission range is 10 meters, make sure operation is within the range.
  - Try another BT device for connection.

## **The PBKSRB40 Bookshelf Speaker does not turn on**

Check if mains power is connected or if the wall outlet is switched on.

## **Specifications**

<b>Power output:</b>	L/R: 30W + 30W
<b>Signal to noise ratio dB(A):</b>	L/R: ≥85dB (A)
<b>Input sensitivity:</b>	LINE IN: R/L: 650±50mV
	Coaxial: R/L: 500±50mV
	OPT: R/L: 500±50mFFS
	BT: R/L: 700±50mFFS
<b>Frequency response:</b>	40HZ-18KHZ
<b>Bass unit:</b>	4 inch (116mm)
<b>Tweeter unit:</b>	Φ13mm silk dome tweeter

#### Questions? Comments?

We are here to help!

**Phone:** (1) 718-535-1800

**Email:** [support@pyleusa.com](mailto:support@pyleusa.com)

[www.PyleUSA.com](http://www.PyleUSA.com)

**Documents / Resources**



[PYLE PBKSRB40 Desktop Wireless BT Bookshelf Speakers](#) [pdf] User Guide  
PBKSRB40 Desktop Wireless BT Bookshelf Speakers, PBKSRB40, Desktop Wireless BT Bookshelf Speakers, Bookshelf Speakers, Speakers, Desktop Wireless, Wireless

## References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)