



PYLE PBMSG1BK Wireless BT Portable Speaker Radio System User Manual

[Home](#) » [Pyle](#) » PYLE PBMSG1BK Wireless BT Portable Speaker Radio System User Manual 

Contents

- [1 PYLE PBMSG1BK Wireless BT Portable Speaker Radio System](#)
- [2 Product Information](#)
- [3 Wireless BT Streaming](#)
- [4 Product Safety Information](#)
- [5 FEATURES](#)
- [6 INSTRUCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

PYLE

PYLE PBMSG1BK Wireless BT Portable Speaker Radio System



Product Information

The PBMSPG1BK is a Wireless BT Portable Speaker Radio System. It features various modes including Wireless BT, USB disk, Micro SD, FM radio, and AUX-IN. The speaker has a power button, play/pause button, mode button, backward/volume down button, forward/volume up button, USB port, micro SD slot, charging jack, and AUX IN.

Wireless BT Streaming

1. Turn the power button to ON. You will hear a Bluetooth Device Ready To Pair tone and the LED light will blink quickly.
2. Activate Wireless BT on your mobile phone and search for the device name to pair.
 1. Turn the power button to "ON", then you will hear a "Bluetooth Device Ready To Pair" tone. The LED light blinks quickly. The speaker is now in pairing mode.
 2. Activate Wireless BT of your mobile phone and search for the device name "PyleUSA" then connect it. Once paired successfully, the Blue LED will blink slowly, and you will hear a tone "Bluetooth Device Connected Successfully" once connected.
 3. Play the music from your mobile phone and enjoy.
 4. Press Forward or Backward button on the device or on Mobile phones to select songs you like.
 5. Press Play/Pause button on the device or on Mobile phones to play/pause the music.
 6. Press and hold Forward or Backward button to adjust volume up and down or adjust the mobile phones' volume.

Playing Music from USB Disk & Micro SD Card:

1. Turn the power button to ON.
2. Insert a Micro SD card or USB flash disk into the slot. The speaker will make a tone indicating Music Play Mode and play the stored music automatically.
3. Under playing mode, short press the forward or backward button to select songs and press and hold to adjust the volume up and down.
4. Press the play/pause button to play or pause.

Remark: Under Wireless BT playing mode, insert Micro SD or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the MODE button to switch to Wireless BT mode again.

Note: Under Wireless BT playing mode, inserting a Micro SD card or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the mode button to switch back to Wireless BT mode.

FM Radio:

1. Under FM radio state, insert the provided audio cable as an antenna to get the best FM signal.
2. Turn the power button to ON and press the mode button to enter FM state. The speaker will prompt "The Radio Mode".
3. Under playing mode, short press the play/pause button to auto search the FM channel and store it automatically.
4. Press the forward or backward button to change the stored FM channel.

TWS Function:

1. Turn ON two identical speakers you want to pair.
 1. Turn ON two identical speakers you want to pair, please be noted that they must have the same BT pairing name, both under BT mode. You only need to set up one of the two units;
 2. Press and hold "PLAY/PAUSE" button for around 4 seconds, speaker will make a tone "di" to start pairing, and will make "di" voice for 3 times once successfully paired;
 3. Connect Wireless BT with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
 4. If you want to exit the TWS mode, press and hold "TWS" button (of the unit that you set at beginning) again to exit the TWS function.

Remark: You can connect the TWS function through either Wireless BT or AUX, but if you connect your mobile phone via the provided audio cable, you can not switch to Wireless BT mode by pressing the Mode button.

Note: You can connect the TWS function through either Wireless BT or AUX. If you connect your mobile phone via the provided audio cable, you cannot switch to Wireless BT mode by pressing the Mode button.

AUX-IN:

For other compatible music devices or MP3/MP4 players, use the supplied audio line cable to connect from the device's Line Out to the Aux In of this device. You will hear an Aux input mode tone once the cord is inserted. When using an external device, all functions can be controlled by the external device except pause.

Remarks:

1. To turn the unit ON, press and hold the Power button for 3 seconds.
2. Press the Mode button to switch between different modes: Wireless BT, USB disk, Micro SD, FM radio, and AUX-IN.
3. The default volume is set at 50% of the maximum volume.
4. Turn the power button to off if not in use.

Charging:

1. The charger is not included in the accessories. Please use a Universal 5V/1A charger to charge the speaker.

Product Safety Information

This product can expose you to a chemical or group of chemicals, which may include Cadmium (Cd), known in the state of California to cause cancer, birth defects, or other reproductive harm. For more information, visit <https://www.p65warnings.ca.gov/>.

Contact Information:

If you have any questions or issues, please contact us:

- **Phone:** (1) 718-535-1800


- Email: support@pyleusa.com

Please take the time to read this manual carefully before you begin using your new device. Any content revision of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES

- Compact Boom Box Stereo Style
- Portable Travel-Friendly Speaker Design
- Digital Streaming FM Radio
- Built-in Rechargeable Battery
- MP3 Digital Audio File Playback
- Ported Enclosure for Extended Bass
- Full Range Stereo Sound Reproduction
- Rugged & Durable 'Super Tube' Speaker Housing

INSTRUNCTION

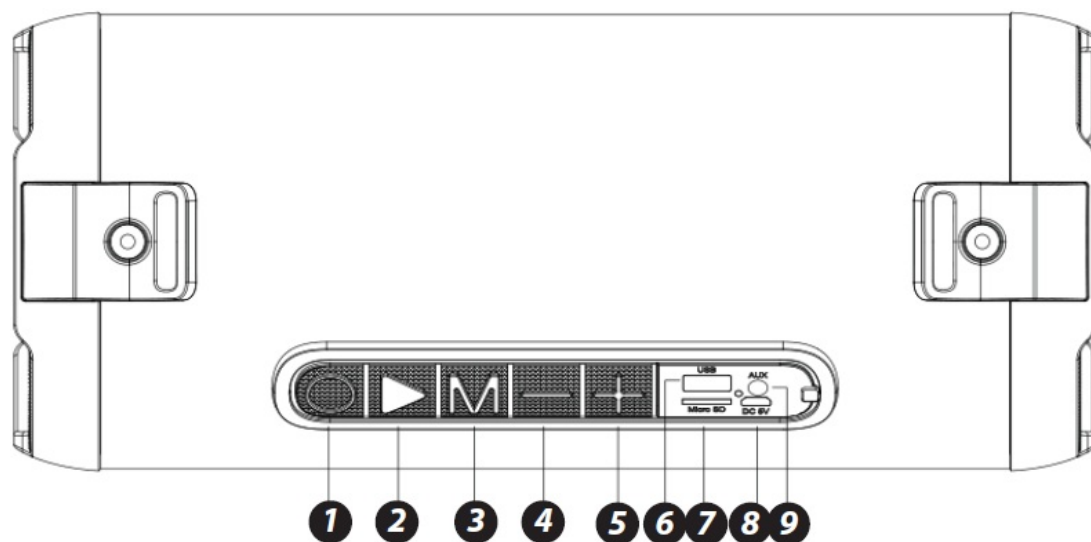

1. Power ON/OFF
2. Play/Pause
3. MODE (Wireless BT Switch, USB disk, FM and AUX-IN state)
4. Backward/Volume down
5. Forward/Volume Up
6. USB port
7. Micro SD slot
8. Charging Jack
9. AUX IN

How to charge:

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device,

and we are not responsible for any damage caused by using other charger.

2. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to your PC or other charger with 5V output.
3. Charging time should be 3-5 hours. The light is red while charging, and the indicator light will switch off when fully charged. (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.)
4. In order to prolong the life of battery, please do not charge more than 8 hours.

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

Warning:

This product can expose you to a chemical or group of chemicals, which may include "Cadmium (Cd)" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to

<https://www.p65warnings.ca.gov/>.


VISIT US ON LINE:

Have a question?

Need service or repair? Want to leave a comment?

PyleUSA.com/ContactUs

Documents / Resources

	<p>PYLE PBMSG1BK Wireless BT Portable Speaker Radio System [pdf] User Manual PBMSG1BK Wireless BT Portable Speaker Radio System, PBMSG1BK, Wireless BT Portable Speaker Radio System, BT Portable Speaker Radio System, Portable Speaker Radio System, Speaker Radio System, Radio System</p>
---	---

References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)
- p65warnings.ca.gov/