

PYLE PBMSG3BK Bluetooth BoomBox Speaker System



PYLE PBMSG3BK Bluetooth BoomBox Speaker System User Guide

[Home](#) » [Pyle](#) » PYLE PBMSG3BK Bluetooth BoomBox Speaker System User Guide 

Contents

- [1 PYLE PBMSG3BK Bluetooth BoomBox Speaker System](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FEATURES](#)
- [5 BLUETOOTH CONNECTIVITY](#)
- [6 WHAT'S IN THE BOX](#)
- [7 TECHNICAL SPECS](#)
- [8 PRODUCT DESCRIPTION](#)
- [9 WIRELESS BT STREAMING](#)
- [10 TWS FUNCTION](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

PYLE

PYLE PBMSG3BK Bluetooth BoomBox Speaker System



Product Information

Specifications

- Model: PBMSPG3BK
- Type: Bluetooth BoomBox Speaker System
- Compatibility: Smartphones, Tablets, Laptops, Computers, etc.
- Manufacturer Website: www.PyleUSA.com

Product Usage Instructions

Unboxing and Setup

When unboxing the Bluetooth BoomBox Speaker System, ensure all components are included and undamaged. Place the speaker system on a stable surface.

Power On and Pairing

Press the power button to turn on the speaker system. Activate the Bluetooth function on your device and search for available devices. Select "PBMSPG3BK" to pair with the speaker system.

Playing Audio

Once paired, play audio on your device, and the sound will be transmitted to the BoomBox Speaker System wirelessly. Adjust volume and settings as needed.

Frequently Asked Questions (FAQ)

- Q: How do I charge the speaker system?
A: The speaker system can be charged using the provided charging cable. Connect one end to the speaker system and the other end to a power source.
- Q: Can I use the speaker system outdoors?
A: Yes, the Bluetooth BoomBox Speaker System can be used outdoors, but ensure it is not exposed to direct sunlight or water to prevent damage.

Please take the time to read this manual carefully before you begin using your new device. Any revisions to the manual will not be announced, and we are not responsible for consequences caused by misuse or oversight of this manual

FEATURES

- Portable Bluetooth Speaker
- Compact & Portable Stereo System
- Travel-Friendly Boom Box Speaker Style
- FM Radio
- Built-in Rechargeable Battery
- Full Range Stereo Sound Reproduction
- Ported Enclosure for Extended Bass
- MP3 Digital Audio File Playback
- Connect & Stream Audio from External Devices
- USB Flash & Micro SD Memory Card Readers
- Aux (3.5mm) Input Jack
- Built-in Digital Audio Amplifier
- Front Panel Button Audio Control Center
- Rugged & Durable Housing Design
- Home Speaker System for Indoor / Outdoor Use

BLUETOOTH CONNECTIVITY

- Built-in Bluetooth for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc.
- Bluetooth Version: 5.0
- Bluetooth Network Name: 'PyleUSA'
- Bluetooth Password, If Prompted: '0000' (4 Zeros)
- Wireless Range: Up to 35'+ ft.

WHAT'S IN THE BOX

- Portable Bluetooth Speaker
- USB Charging Cable
- Audio (3.5mm) Connection Cable
- Detachable Carry Strap

TECHNICAL SPECS

- Power Output: 8.5 Watt MAX
- Speaker Type: Portable Radio Boombox
- Sound System: 2.5" Tweeter Speaker
- Impedance: 4 Ohm
- Frequency Response: 120-12kHz
- S/N Ratio: 65dB, +/-2dB
- SPL: 89dB (1W/M)

- T.H.D.: <1%
- USB Interface Type: Micro, 2.0
- Digital Audio File Support: MP3, WMA
- Battery Life: Up to 2+ Hours
- Maximum USB/Micro SD Flash Memory Support: Up to 32GB
- Construction Material: Engineered LG, Metal Alloy
- Rechargeable Battery: 3.7V Li-iOn, 1500mAh – 5.55Wh – 41.5g
- USB Cable Length: 2.0' ft.
- Power Supply: USB, DC 5V
- Total Speaker Size (L x W x H): 9.8" x 3.6" x 4.1" -inches

California Prop 65 Warning

This product contains Cadmium (Cd) which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

PRODUCT DESCRIPTION



1. USB Port
2. Micro SD Slot
3. Charging jack
4. AUX IN
5. Backward/Volume Down
6. Mode (Wireless BT switch, USB disk, Micro SD, FM and AUX-IN state)
7. Power ON/OFF
8. Play/Pause
9. Forward/Volume Up

WIRELESS BT STREAMING

1. Turn the power button to "ON." The LED light turns blue and blinks quickly, then enters Wireless BT mode, and you will hear a "Bluetooth Device Ready to Pair" tone.
2. Activate the Wireless BT of your mobile phone and search for the device name "PyleUSA," then connect it. The blue LED light blinks slowly and will make a tone "Bluetooth Device Connected Successfully" once connected.
3. Play music from your mobile phone and enjoy.
4. Press the Forward or Backward button on the device or on mobile phones to select songs you like.
5. Press the Play/Pause button on the device or on mobile phones to play or pause the music.
6. Press and hold the Forward or Backward button to adjust volume up and down or adjust the mobile phone's volume.

PLAYING MUSIC FROM USB DISK & MICRO SD CARD:

1. Turn the Power button to "ON".
2. Insert a Micro SD card or USB flash disk into the slot; the speaker will make a tone "Music Play Mode" and play the stored music automatically.
3. Under playing mode, short press the Forward or Backward button to select songs you like; press and hold to adjust the volume up and down.
4. Press Play/Pause to play or pause the music.

Remark:

Under Wireless BT playing mode, inserting a Micro SD card or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card.

You can press the MODE button to switch to Wireless BT mode again.

FM RADIO:

1. In FM radio mode, the provided audio cable acts as the antenna. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON," and press the "MODE" button; the speaker will prompt "The Radio Mode" when entering FM state.
3. Under playing mode, short press the "Play/Pause" button to auto-search the FM channel and store it automatically.
4. Press the Forward or Backward button to change the stored FM channel.

TWS FUNCTION

1. Turn on the two identical speakers you want to pair. They must have the same Bluetooth pairing name and both should be in BT mode. You only need to set up one of the two units.
2. Press and hold the "PLAY/PAUSE" button for about 4 seconds; the speaker will make a tone "di" to start pairing and will make the "di" sound three times once successfully paired.
3. Connect Wireless BT with your mobile phone to play music through the two paired speakers to create a more powerful surround sound effect.

4. To exit TWS mode, press and hold the “PLAY/PAUSE” button (of the unit that you set up at the beginning) again to exit the TWS function.

Remark:

In TWS mode, if you connect your mobile phone to the unit (you set up at the beginning) via the provided audio cable, it will start to play AUX via the TWS function. In this status, you cannot switch to Wireless BT mode by pressing the Mode button.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device. Then, press the “MODE” button; the speaker will prompt “Aux Input Mode,” then enjoy.

When using an external device, all functions can be controlled by the external device.

Remarks:

1. To turn the unit on, press and hold the Power button for 3 seconds.
2. Press the MODE button to switch between different modes: BT, USB disk, Micro SD, FM radio, and AUX-IN.
3. When the speaker’s Wireless BT is connected with one mobile device, you can press and hold the Mode button to disconnect the previous device and then connect Wireless BT to another mobile device.
4. The default volume is set at 50% of the maximum volume.
5. When the battery voltage is low, the speaker will prompt “Battery Is Low, Please Recharge in Time.”
6. Turn the power button to “OFF” when not in use.

HOW TO CHARGE:

1. The charger is not included in the accessories. Please use a Universal 5V/1A charger to charge this device. We are not responsible for any damage caused by using a different charger.
2. Power off the unit and insert the provided charging cable into the charging slot of the unit. Connect the other end to your PC or another charger with a 5V output.
3. Charging time should be 3-5 hours. The light will turn red while charging, and the indicator light will turn off when fully charged. (When playing music during charging, please keep the volume at medium because, for some music with heavy bass, the charger may not be able to handle the high current temporarily at maximum volume.)
4. To prolong the life of the battery, please do not charge for more than 8 hours.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

[PyleUSA.com/register](https://www.pyleusa.com/register)



Questions or Comments?



We are here to help

Phone: 1.718.535.1800

PyleUSA.com/ContactUs

Visit Our Website



SCAN ME

PyleUSA.com

Documents / Resources



[PYLE PBMSG3BK Bluetooth BoomBox Speaker System](#) [pdf] User Guide
PBMSG3BK Bluetooth BoomBox Speaker System, PBMSG3BK, Bluetooth BoomBox Speaker System, BoomBox Speaker System, Speaker System

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.