



# PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller User Guide

[Home](#) » [Pyle](#) » PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller User Guide 

## Contents

- [1 PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller](#)
- [2 Contents](#)
- [3 A complete guide for beginners to pair and operate](#)
- [4 How To Use the Wing Button](#)
- [5 How To Use The Wing Button](#)
- [6 Overview](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

# PYLE

**PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller**



Please read this instruction manual thoroughly before using the unit. Please keep for future reference.

## Contents

- 1\*PS4 Wireless Controller
- 1\*Charging Cable
- 1"User Manual

## A complete guide for beginners to pair and operate

### There are two pairing methods for this product:

Wireless BT pairing and wired direct connection (data cable included can also be used charging cable)

### Wireless Pairing on PS4 Operation Steps

1. Using the **PGMC3WPS4** controller on Playstation 4 console for the first time, connect the PGMC3WPS4 controller to the console using USB cable included to complete device registration.  
The **PGMC3WPS4** controller will connect to the Playstation 4 console automatically in the future.
2. Press "**SHARE+HOME KEY**" simultaneously for 2 seconds, the blue light will flash quickly, now you can pair the controller with the console.
3. If it still does not work, you may need to restart it or charge it fully.

### Wired Operation Steps

PC can be connected directly with the data cable.

The driver will install automatically (The wireless connection also supports PS3, but does not support mobile phones, TV Box).

## How To Use the Wing Button

1. The four-wing buttons on the back can replace the function of any button within 1, 2, 4, and 3.
2. First, make sure to format the controller first with this process:
  - Press the share and any wing button together, then release the wing button and share button in sequence (the wing button must be released first).
3. Now you can set any button you want to be replaced by the wing button with this process:
  - Press the share and any button within 1, 2, 4, 3 then press any wing button, finally release the wing button first then other buttons. The setting will be successful.




1. L1 L2 PC MODE
2. R1 R2 PC MODE
3. ACTION KEYS
4. ARROW KEY

### How To Use The Wing Button

- Those four wing buttons on the back can replace the function of any button within 1, 2, 4, and 3.
- Make sure to format the controller first with this process.
- Press the share and any wing button together, then release the wing button and share button in sequence.  
(wing button must be released first)
- Now you can set any button you want to be replaced by the wing button with this process.
- Press the share and any button within 1, 2, 4, 3, then press any wing button, finally release the wing button first then other buttons, and the setting will be successful.



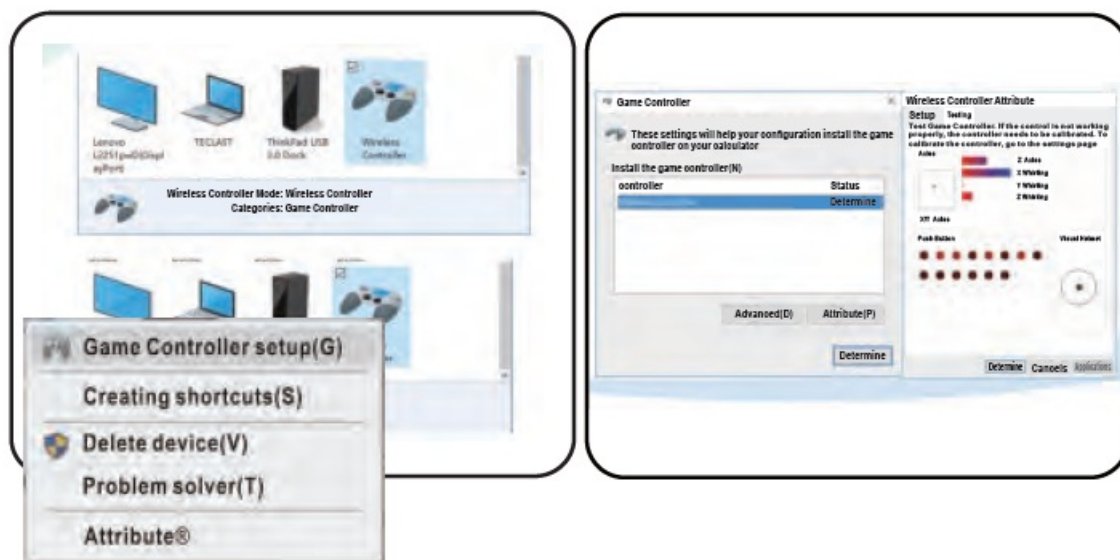

## California Prop 65 Warning

### WARNING:


This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest. For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

### Controller button corresponding table

PS4					L1	R1	L2	R2	share	option	L3	R3	P4	T-PAD
f	1	2	3	4	5	6	7	8	9	10	11	12	13	14
b	L4	R4	r5	L5	-----									

## Overview

### FRONT

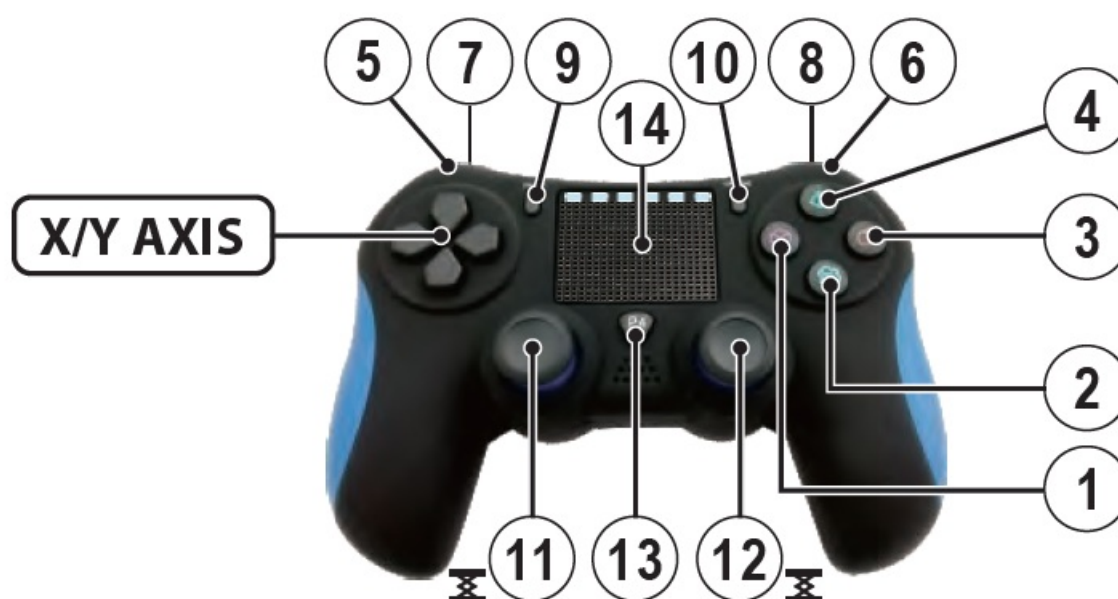

### BACK



## Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800 Email: [support@pyleusa.com](mailto:support@pyleusa.com)

## Documents / Resources



[PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller](#) [pdf] User Guide  
PGMC3WPS4, PS4 Game Console Handle Wireless Controller, PGMC3WPS4 PS4 Game Console Handle Wireless Controller, Console Handle Wireless Controller, Wireless Controller



**[PYLE PGMC3WPS4 PS4 Game Console Handle Wireless Controller](#)** [pdf] User Guide  
PGMC3WPS4, 2A5UW-PGMC3WPS4, 2A5UWPGMC3WPS4, PGMC3WPS4 PS4 Game Con  
sole Handle Wireless Controller, PS4 Game Console Handle Wireless Controller, Game  
Console Handle Wireless Controller, Handle Wireless Controller, Wireless Controller, Controller

## References

- [Pyle USA Electronics](#) | [Home Audio](#) | [Car Audio & More](#)