



PYLE PHPD212A Dual 12" Portable PA Party Speaker User Guide

[Home](#) » [Pyle](#) » PYLE PHPD212A Dual 12" Portable PA Party Speaker User Guide 





 

 



 

PHPD212A

Dual 12" Wireless BT Portable PA Party Speaker

Portable PA & Karaoke Party Audio Speaker, with Built-in Rechargeable Battery, Flashing Party Flame Lights,
MP3/USB/FM Radio (600 Watt MAX)

USER GUIDE

WARNING

 
	1. DO NOT place objects on top of the device, as objects may scratch the device.
	2. DO NOT expose the device to dirty or dusty environments.
	3. DO NOT insert any foreign objects into the device.
	4. DO NOT expose the device to strong magnetic or electrical field.
	5. DO NOT use the device in the rain
	6. Please check with your Local Authority or retailer for proper disposal of electronic products.
	7. DO NOT disassemble the device. Only a certified service technician should perform repair.
	8. The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.

ILLEGAL OPERATION MAY CAUSE PERSONAL INJURY, WHICH COULD BE FATAL. ILLEGAL OPERATION MAY CAUSE DAMAGE TO PROPERTY

Wireless BT Connectivity:

 
- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices
- Smartphones, Tablets, Laptops, Computers, etc.
- Wireless BT Version: 5.1
- Wireless BT Network Name: `PYLEUSA`
- Wireless Range: Up to 32' ft.

TOP PANEL FUNCTIONS

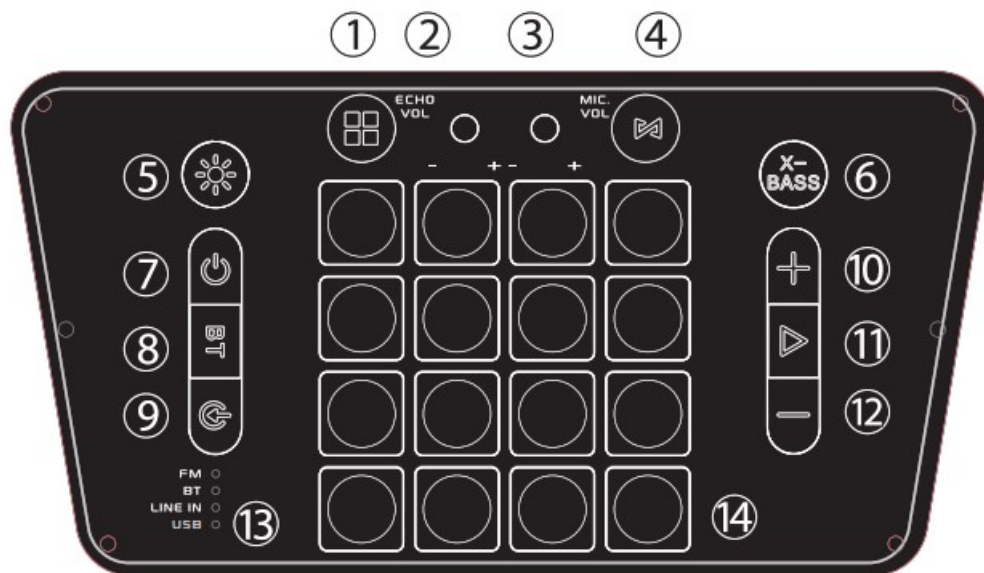

1. 4 group of DJ effect change button: red group, blue group, yellow group, green group
2. Microphone echo volume knob
3. Microphone volume knob
4. TWS wireless connection for one pair unit
5. Front LED light mode change and turn off light button
6. Increase bass effect directly button
7. Power on/off button, long press 3 second for setting
8. Choose BT signal directly
9. Choose different input signal USB/AUX/BT/FM
10. Increase sound on USB/BT mode, next channel on FM mode
11. Play/Stop on USB/BT mode, scan FM channel automatically
12. Decrease sound on USB/BT mode, last channel on FM mode
13. Input signal LED indicator
14. DJ effect button area

BACK PANEL FUNCTIONS

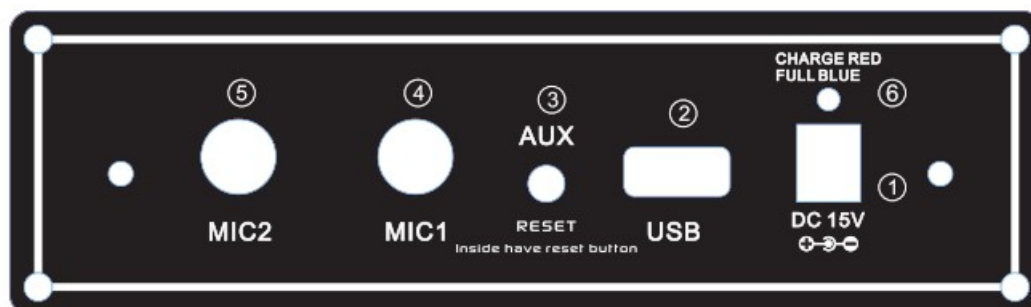

1. DC 15V input
2. USB input
3. AUX input, there is a reset button inside, when the unit crashes, use a toothpick to insert and restart unit
4. 6.5MM microphone-1 input
5. 6.5MM microphone-2 input
6. Charge LED indicator, red is charging, blue is full charge

CHARGING THE SPEAKER

When the unit is in low battery situation, you will hear a “low battery” voice. Connect a matched power adapter to AC100V-AC240V.

Charging time is approximately 4-6 hours. Once fully charged, charged LED indicator will change into blue color, unplug the adapter as leaving a full battery on charge may cause damage to the battery.

Low Battery icon flashes, please power off and promptly charge to avoid damage to the battery. When charging, the lines inside the battery icon flashes. All lines stops blinking when fully charged.

Warning: If the battery is under voltage, please fully charge it within 48 hours. If the speaker has to be left unused for a long time, please let the battery fully charge, otherwise it will cause damage to the battery. In the process of playing, keep the unit away from high-temperature environments, high magnetic fields and high frequencies.

TROUBLESHOOTING

Fault	Possible Cause	Solution
No sound	1.No input sound source. 2. Volume is too low.	1. Use a better music signal. 2. Adjust volume.
Distortion of sound	1. Volume too high. 2. Speaker may be damaged	1. Turn down the volume. 2. If speaker is damaged, repair or replace it.
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is at the lowest position. 4.The wireless microphone battery is low	1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Adjust microphone volume properly. 4. Replace battery
MP3 does not play	1. The audio format in the USB is incorrect. 2. Improper operation has caused a process disorder.	1. Convert audio format into Mp3 format. 2. Reboot the machine.

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

Step-1: Turn ON BT mode on your device and connect the machine.

Step-2: Press and hold each control board “TWS” button more than 3’s, and you will see “ON” on display, unit will start to connect the other unit automatically, now you can enjoy stereo sound, and adjusting one unit volume will affect the other unit.

Remark:

1. After connection, press and hold again one of control board “TWS” button more than 3’s, you will see “OFF” on display, unit’s TWS dis-connection.

This product can expose you to a chemical or group of chemicals, which may include “Lead and lead compounds” which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.



www.PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

www.PyleUSA.com

Documents / Resources



[PYLE PHPD212A Dual 12\"/>](#)

PHPD212A Dual 12 Portable PA Party Speaker, PHPD212A, Dual 12 Portable PA Party Speaker, Portable PA Party Speaker, Party Speaker, Speaker

References

- **P** [Pyle USA Electronics | Home Audio | Car Audio & More](#)
-  p65warnings.ca.gov/

Manuals+.