



## PYLE PHPD82A Dual 8-Inch Wireless BT Portable PA Party Speaker User Guide

[Home](#) » [Pyle](#) » PYLE PHPD82A Dual 8-Inch Wireless BT Portable PA Party Speaker User Guide 

# PYLE

PyleUSA.com

**Dual 8" Wireless BT Portable PA Party Speaker  
Portable PA & Karaoke Party Audio Speaker,  
with Built-in Rechargeable Battery, Flashing Party Circular Rotary Lights,  
MP3/USB/ /FM Radio (300 Watt MAX)  
User Guide**











PHPD82A



PHPD82B


**PHPD82A Dual 8-Inch Wireless BT Portable PA Party Speaker**

**WARNING**

	1. DO NOT place objects on top of the device, as objects may scratch the device.
	2. DO NOT expose the device to dirty or dusty environments.
	3. DO NOT insert any foreign objects into the device.
	4. DO NOT expose the device to strong magnetic or electrical field.
	5. DO NOT use the device in the rain
	6. Please check with your Local Authority or retailer for proper disposal of electronic products.
	7. DO NOT disassemble the device. Only a certified service technician should perform repair.
	8. The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.


**ILLEGAL OPERATION MAY CAUSE PERSONAL INJURY, WHICH COULD BE FATAL.  
ILLEGAL OPERATION MAY CAUSE DAMAGE TO PROPERTY**

## CONTROL BOARD FUNCTIONS

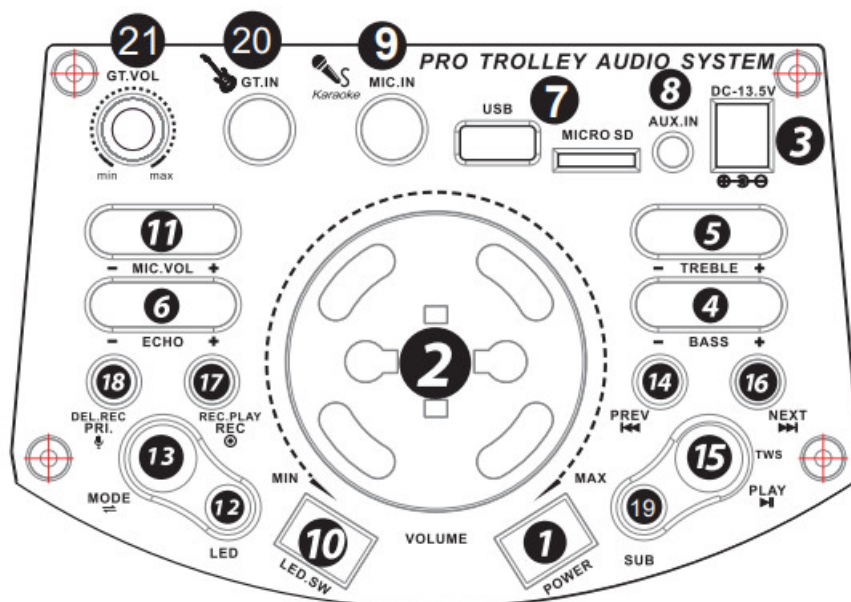

<ol style="list-style-type: none"> <li>1. Power Switch</li> <li>2. Master volume control</li> <li>3. DC 13.5V input jack</li> <li>4. Bass volume control knob</li> <li>5. Treble volume control knob</li> <li>6. Microphone Echo control knob</li> <li>7. USB and Micro SD Memory Card Slot</li> <li>8. 3.5MM AUX input jack</li> <li>9. 6.5MM microphone input jack</li> <li>10. LED light switch</li> <li>11. Microphone volume control knob</li> </ol>	<ol style="list-style-type: none"> <li>12. LED MODE</li> <li>13. Mode button: Short press to choose BT, FM, AUX, USB, SD mode</li> <li>14. Previous</li> <li>15. Play/Pause/press and hold for TWS function</li> <li>16. Next</li> <li>17. Short press to start recording, and short press again to save and play recording Press and hold press to play recording files, and press and hold again to quit recording</li> <li>18. Microphone priority button: Short press to start microphone priority. When playing the recorded file, press and hold to delete current recording.</li> <li>19. X-BASS</li> <li>20. Guitar input</li> <li>21. Guitar Volume</li> </ol>
---	---

## REMOTE CONTROL FUNCTIONS

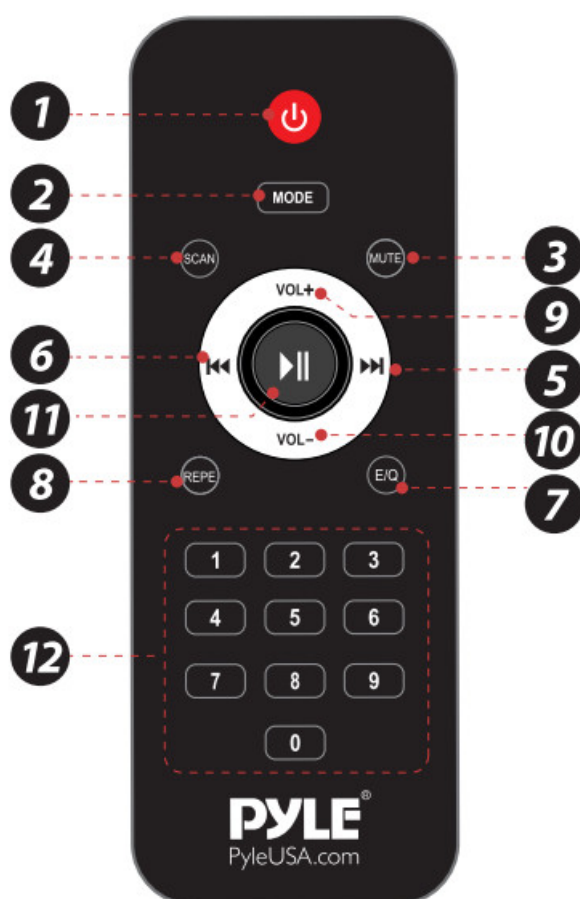

1. <b>Power:</b> Used to turn on/off the MP3 player power. 2. <b>MODE:</b> Used to switch the AUX/USB/BT/ Radio 3. Mute button 4. In FM mode, press to search radio station automatically and save. 5. Next song of USB/In FM mode, short press to select next frequency, press and hold to fast-forward frequency 6. Previous song in USB//In FM mode, short press to select last frequency, press and hold to fast backtrack frequency.	7. EQ solution 8. Repeat song 9. Increase volume 10. Decrease volume 11. Play/Pause/In FM Mode, press to select saved radio station. 12. Choose song number directly/In FM mode, choose FM frequency directly.
--	---

## TWS FUNCTION

**For increase sound effect, our unit provides TWS function as follows:**

**Step-1:** Turn ON BT mode on your device and connect the machine.

**Step-2:** Press and hold each control board "TWS" button more than 3's, and you will see "ON" on display, unit will start to connect the other unit automatically, now you can enjoy stereo sound, and adjusting one unit volume will affect the other unit.

**Remark:**

1. After connection, press and hold again one of control board "TWS" button more than 3's, you will see "OFF" on display, unit's TWS dis-connection.

## TROUBLESHOOTING

Fault	Possible Cause	Solution
No sound	1.No input sound source. 2.Volume is too low.	1.Use a better music signal. 2.Adjust volume.
Distortion of sound	1.Volume too high. 2.Speaker may be damaged	1.Turn down the volume. 2.If speaker is damaged, repair or replace it.
Karaoke does not work	1.Microphone plug is not fully inserted. 2.Microphone switch is not on. 3.Microphone volume knob is at the lowest position.	1.Plug microphone properly into the socket. 2.Turn on microphone switch. 3.Adjust microphone volume properly.
MP3 does not play	1.The audio format in the USB is incorrect. 2.Improper operation has caused a process disorder. 3.USB disc is disconnected.	1.Convert audio format into Mp3 format. 2.Reboot the machine. 3.Insert USB disc properly.

## Wireless BT Connectivity:

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices
- Smartphones, Tablets, Laptops, Computers, etc.
- Wireless BT Version: 5.1
- Wireless BT Network Name: 'PYLEUSA'

- Wireless Range: Up to 32' ft.



This product can expose you to a chemical or group of chemicals, which may include “Lead and lead compounds” which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.



**VISIT US ONLINE: Have a question?**

**Need service or repair?**

**Want to leave a comment?**

[PyleUSA.com/ContactUs](https://www.pyleusa.com/ContactUs)

**Questions? Issues?**

**We are here to help!**

**Phone: (1) 718-535-1800**

**Email: [support@pyleusa.com](mailto:support@pyleusa.com)**

## Documents / Resources



[PYLE PHPD82A Dual 8-Inch Wireless BT Portable PA Party Speaker](#) [pdf] User Guide  
PHPD82A, PHPD82B, Dual 8-Inch Wireless BT Portable PA Party Speaker

[Manuals+.](#)