



Pyle PLCD43MRB Car In Dash AM/FM MPX Receiver User Manual

[Home](#) » [Pyle](#) » Pyle PLCD43MRB Car In Dash AM/FM MPX Receiver User Manual 

Contents

[1 Pyle PLCD43MRB Car In Dash AM/FM MPX Receiver](#)

[2 Receiver Models:](#)

[2.1 Product Usage Instructions](#)

[2.2 INSTALLATION](#)

[2.3 INSTALLATION DIAGRAM](#)

[2.4 Wiring Connections](#)

[2.5 CONTROL PANEL BUTTON LOCATIONS](#)

[2.6 GENERAL OPERATION](#)

[2.7 RADIO OPERATION](#)

[2.8 DISC / USB OPERATION](#)

[2.9 Introduction Scan](#)

[2.10 AUXILIARY INPUT OPERATION](#)

[2.11 BLUETOOTH OPERATION](#)

[2.12 REMOTE CONTROL](#)

[2.12.1 Button Names and Locations](#)

[2.13 SPECIFICATIONS](#)

[2.14 TROUBLESHOOTING](#)

[3 Documents / Resources](#)

PYLE

Pyle PLCD43MRB Car In Dash AM/FM MPX Receiver



Product Information:

The Car In-dash AM/FM MPX Receiver is a versatile audio system designed for use in cars. It features CD, CD-R/RW, and MP3 playback capabilities, allowing you to listen to your favorite music while on the go. The receiver also includes USB and AUX inputs, providing convenient options for connecting external devices.

Receiver Models:

- PLCD43MRB
- PLCD43BTM

Product Usage Instructions

Precautions:

1. Avoid tightly gripping the display and buttons to prevent damage.
2. Do not insert any foreign objects into the openings of the car radio, such as the disc compartment, USB jack, AUX IN, or connections, as this may cause damage.
3. Avoid switching on the car radio for long periods of time when the motor is switched off, as it may drain the car battery and prevent the vehicle from starting.

Installation:

Before installing the Car Radio, follow these steps:

1. Ensure the ignition is turned off and disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and antenna.
3. Lift either the left or right top corner of the plastic outer trim ring and pull it out to remove it.
4. Insert the two bracket keys into the left and right side of the chassis to separate it from the housing.
5. Insert the mounting sleeve into the dashboard and bend the mounting tabs out with a screwdriver. Ensure that the lock lever is flush with the mounting sleeve.
6. Insert the car radio into the mounting sleeve.
7. Use a metal strap to secure the rear part of the chassis using the provided hardware.
8. Make wiring connections according to the Wiring Diagram.
9. Install the plastic outer trim ring.

Wiring Connections:

Refer to the Wiring Diagram for proper wiring connections:

- Radio Antenna Socket
- White: Left CH Auxiliary RCA Audio Input
- Red: Right CH Auxiliary RCA Audio Input
- White: Front Left CH RCA Audio Output
- Red: Front Right CH RCA Audio Output
- Red: Rear Right CH RCA Audio Output
- White: Rear Left CH RCA Audio Output
- GND – (Black)
- Power B+ (Yellow)
- +12V DC NEGATIVE GROUND
- ACC + (Red)
- ANT + (Blue)
- FUSE 15A
- Purple
- Purple/Black
- Gray
- Gray/Black
- White
- White/Black
- Green
- Green/Black

Removal of the Main Unit:

1. Remove the metal strap from the main unit.
2. Remove the plastic trim out from the main unit.
3. Insert a bracket key into the left and right side of the main unit and draw the unit out of the mounting.

Car In-dash AM/FM MPX Receiver with C D,CD, CD-R/RW, MP3 Playback & USB/AUX

Inputs

PRECAUTIONS

How to Handle Discs

- Handle a disc by its edges. Do not touch the playing side.
- Before inserting a disc, wipe the disc outward from the disc center with a clean, soft, dry and lint-free cloth. Do not use solvents or thinners such as petrol/benzene or cleaners.
- After removing a disc from the disc slot, place the disc in a sleeve or case to keep it clean and prevent scratches.
- Do not stick paper or tape on the disc surface. If there is glue (or adhesive) on the disc surface, remove it

before using the disc.



Precautions & Warnings

- To reduce the risk of fire, electric shock, and interference, do not attempt to repair this unit yourself. Refer all service to a qualified technician.
- Some MP3/WMA files may not be playable.
- Keep the volume at a reasonable level to avoid distracted driving. High volume levels may make it difficult to concentrate on traffic and road conditions while driving.
- If the car has been in direct sunlight for an extended period, you may need to reduce the temperature inside the car before turning on and using the unit.
- If the battery is disconnected, discharged, or changed, the preset memory of the unit will be lost and require reprogramming.
- The unit is designed to be installed in a level, horizontal position.
For optimal performance, avoid installing the unit at an angle.
- Never use excessive force when removing or attaching the faceplate.
Do not tightly grip the display and buttons to avoid damage.

Lithium Battery Cell Warnings

- Cell leakage may cause damage to the remote control
- Do not throw cells into as this may cause an explosion.
- Keep battery cells out of reach of children.

Drives and connections

Never place any foreign objects into the openings of the car radio (disc compartment, USB jack, AUX IN, connection). Otherwise you might damage the slots and connections.

Others Warnings

Do not switch on the car radio for long periods of time when the motor is switched off.
This could cause the car battery to discharge and the vehicle can no longer be started.


INSTALLATION

Installation Procedures

First complete the electrical connections and then check for correctness.


Installation Opening

This unit can be installed in any dashboard Having an opening as shown the right figure.

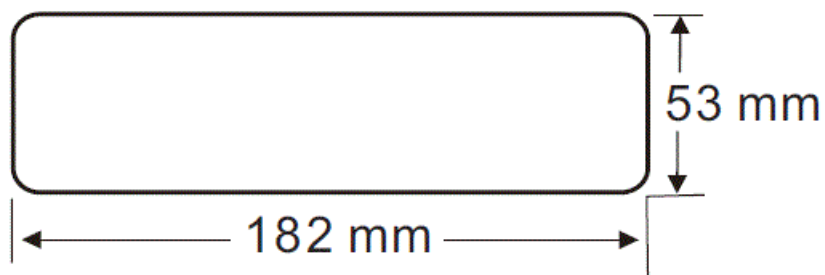

Important:


Remove the transport CD deck screws before use.

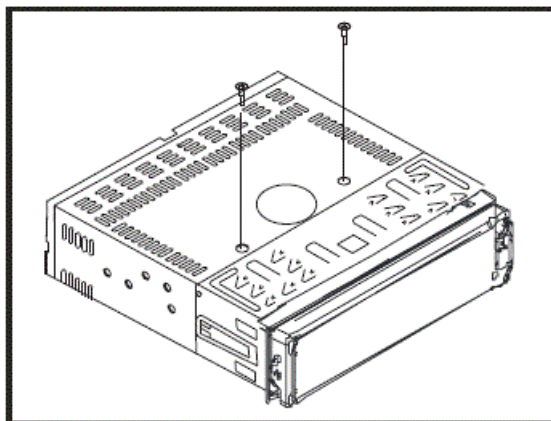

To Install the Car Radio


Be sure you test all connections first, and then follow these steps to install this unit.

1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and the antenna.
3. Lift the left or right top corner of the plastic outer trim ring then pull it out to remove it.
4. Insert the two bracket keys into the left and right side of the chassis, as shown the below figure to separate the chassis from the housing.

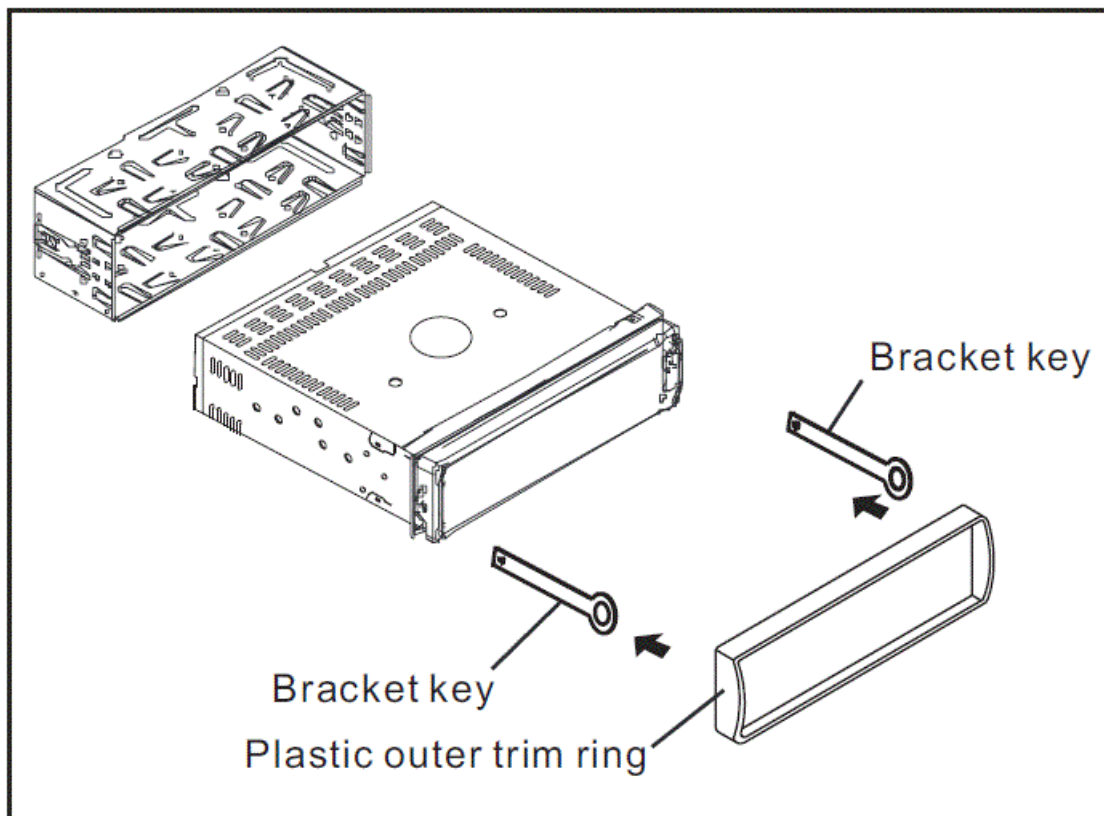


5. Insert mounting sleeve into the dashboard and bend the mounting tabs out with a screwdriver.
Make sure that the lock lever is flush with the mounting sleeve and is not projecting beyond.
6. Insert car radio into the mounting sleeve.
7. Use a metal strap to secure the rear part of the chassis using the hardware indicated.
8. Make wiring connections, as illustrated in the "Wiring Diagram."
9. Install the plastic outer trim ring.

INSTALLATION DIAGRAM

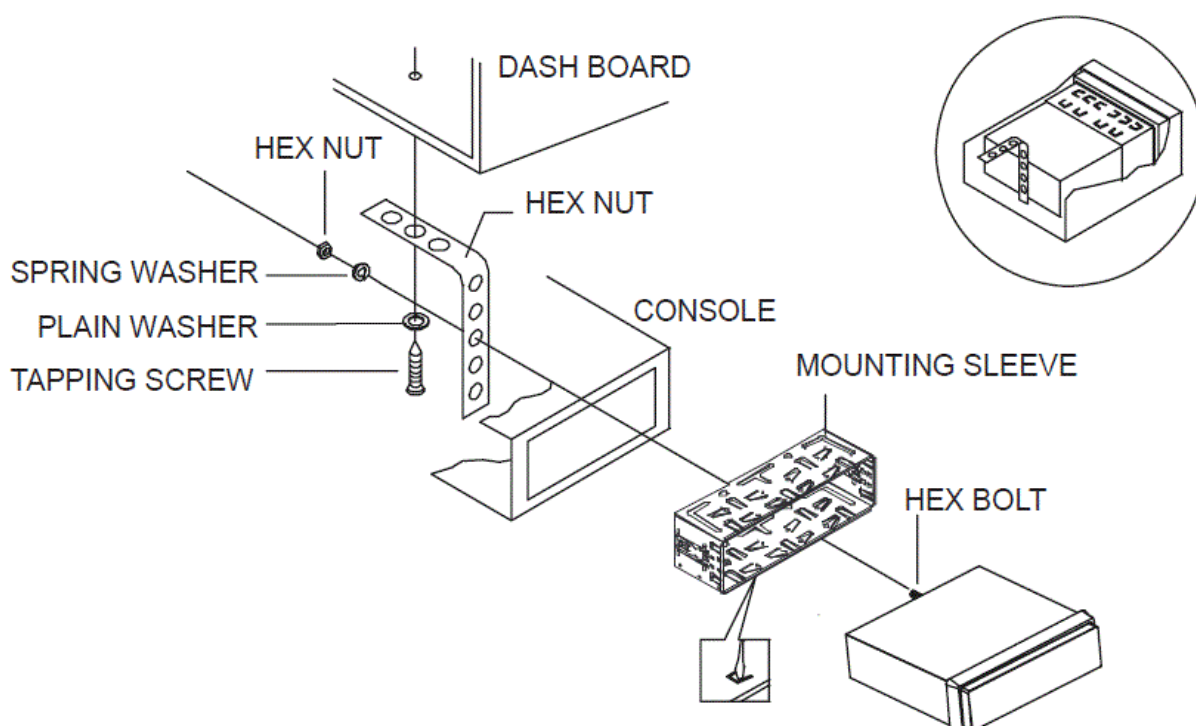

- Only use speakers with 4 ohms impedance.
- Do not attach the control panel to the chassis before wiring is complete.
- The maximum current of the auto antenna is 200mA.


Wiring Connections

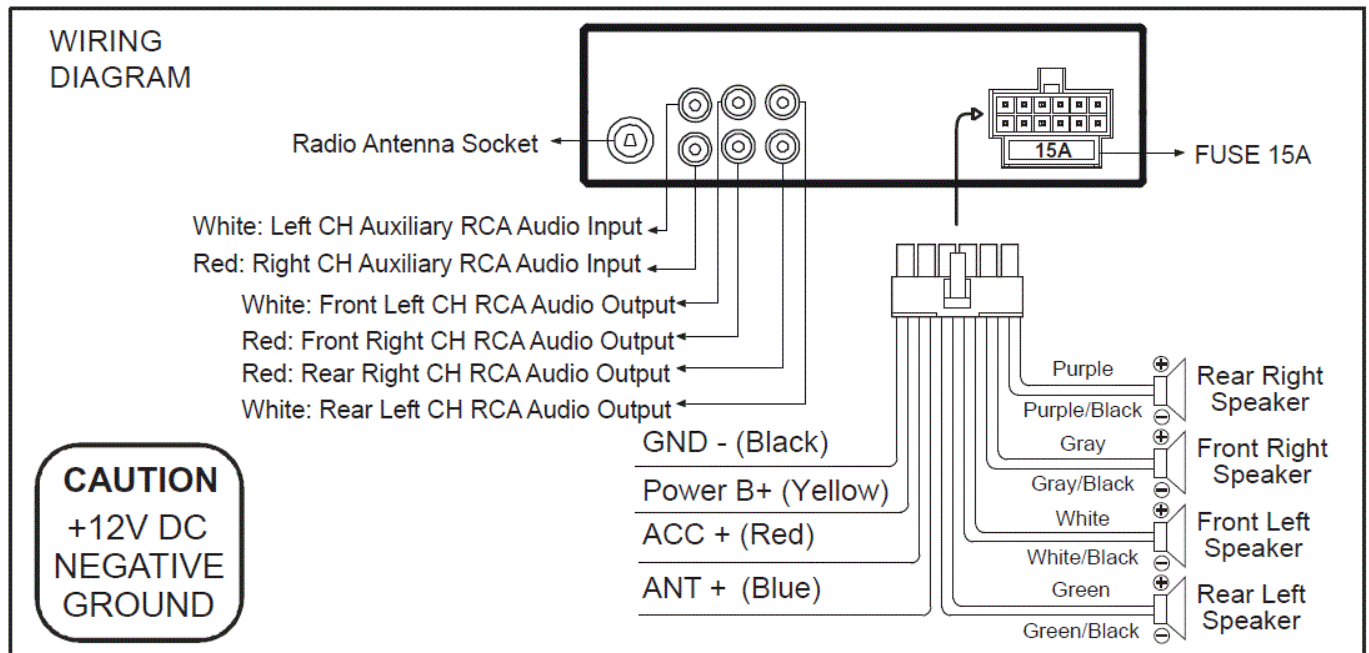







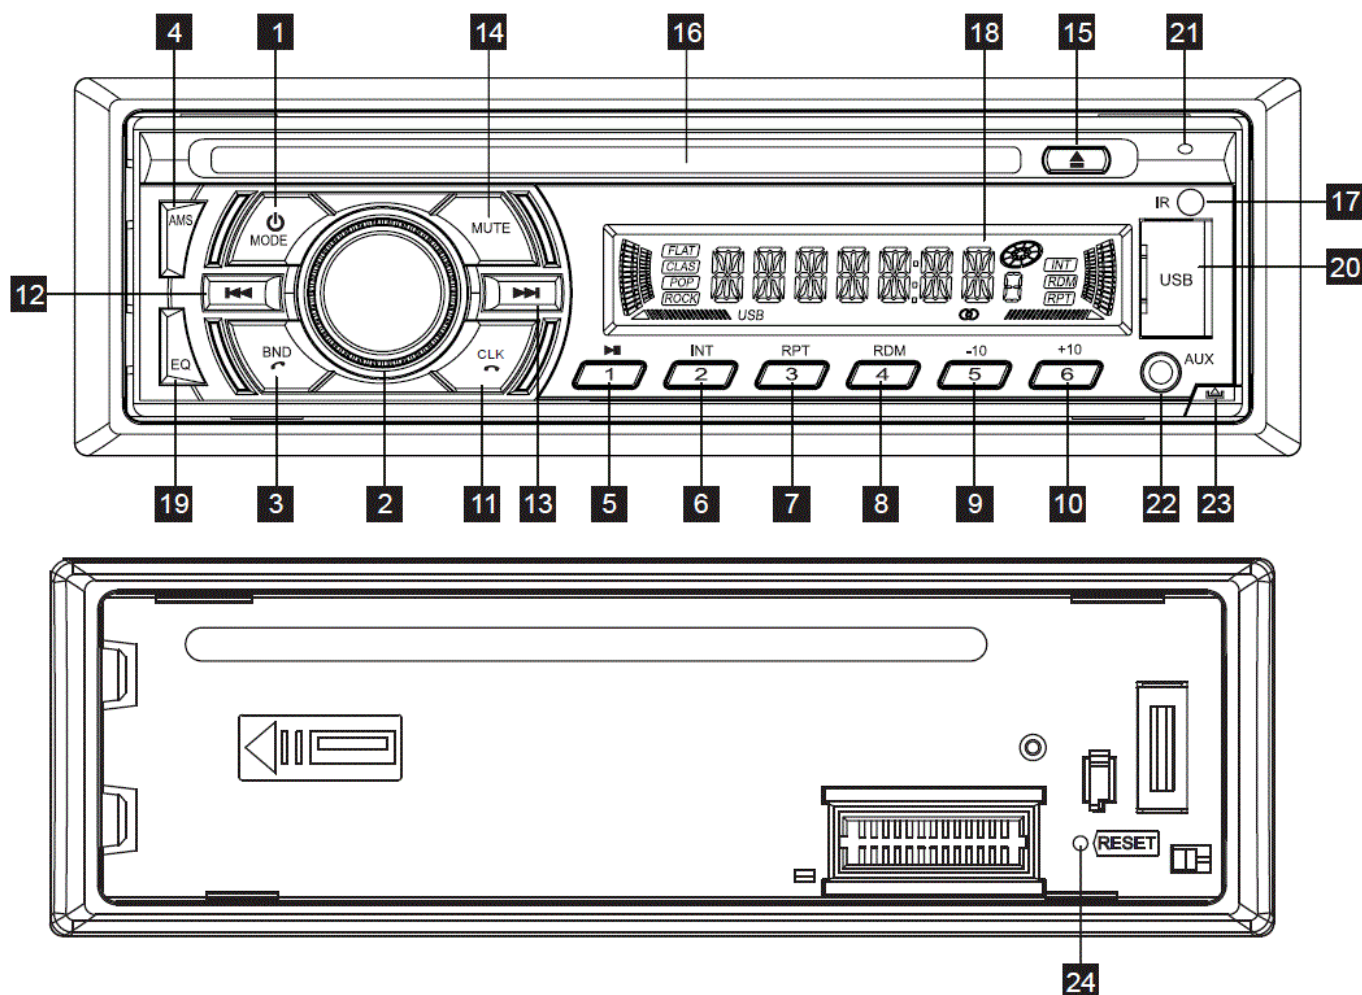

Removal of the Main Unit

1. Remove the metal strap from the main unit.
2. Remove the plastic trim out from the main unit.
3. Insert a bracket key into the left and right side of the main unit and draw the unit out of the mounting sleeve.

CONTROL PANEL BUTTON LOCATIONS





1.  (power)/MODE (source) button
2. SEL (select/menu) button and VOL (volume) knob
3. BAND(band) button,  button
4. AMS (automatic store / preset station scan, automatic music search) button
5.  (pause/play), Preset station1 button
6. INT (intro), Preset station 2 button
7. RPT (repeat), Preset station 3 button
8. RDM (random), Preset station 4 button
9. -10(previous 10 tracks), Preset station 5 button
10. +10(next 10 tracks), Preset station 6 button
11. CLK (clock setting) button,  button
12.  (tune down, seek down, track down, fast reverse) button
13.  (tune up, seek up, track up, fast forward)button
14. MUTE button
15.  (eject) button
16. Disc slot
17. IR remote control sensor
18. LCD Display
19. EQ(Equalizer Preset) Button



20. USB port
21. MIC hole(built-in Microphone)
22. AUX IN (auxiliary input) jack
23.  (Release) button
24. RESET button

GENERAL OPERATION



Turn Unit On/Off

- Press the power () /MODE button on the front panel to turn on the unit, and long press it again to turn off the unit.
- Press the power () button on the remote control to turn the unit on or off.

Adjust Volume (VOL)

Rotate the VOL knob on the front panel or press the VOL+  /  VOL- button on the remote control to increase or decrease the volume level.

Adjust Menu Options (SEL)

- Press the SEL button on the front panel or on the remote control repeatedly to cycle through the following adjustable audio functions: BASS, TREBLE, BALANCE, FADER, EQ OFF/ROCK/POP/CLASS/FLAT,LOUD ON/OFF, DX/LOC, STEREO/MONO and VOLUME.
- Rotate the VOL knob on the front panel or press the VOL+  /  VOL- button on the remote control to adjust the selected item.
 - BASS/TREBLE:-7,-6, ~, -1,0,+1,~, +6,+7
 - BALANCE:L10,L09,~, L1, R=L, R1,~,R09,R10
 - FADER:R10,R09,~,R1,R=F, F1,~,F09,F10
 - EQ(Equalizer) Setting: OFF, ROCK, POP, CLASSIC, FLAT
 - Loudness: LOUD ON/OFF
 - DX/LOCAL: Enables or disables the local broadcast mode (LOCAL).
 - Stereo/Mono: Switches between MONO and STEREO reception mode for radio frequencies.
 - Volume level:0,1,~,40
- Press and hold the SEL button on the front panel or press the SEL/ENTER button on the remote control to access these additional functions: VOL(LAS/ADJ), AREA EU/US, CLOCK 12/24, BEEP ON/OFF.
 - VOL(LAS/ADJ):This option allows you to preset a volume level as the power-on memory volume level.
 - VOL LAST: In this mode, the unit switches on at the actual volume it had when it was last switched off.
 - VOL ADJ: In this mode, the unit power on at the actual volume that you presetted a constant switch-on volume level.

Press the SEL button to enter the constant switch-on volume adjusting mode and the “A-VOL XX” will be shown on the LCD display.

Then you can adjust a constant switch-on volume level by rotating the VOL knob.

 - AREA EU/US: This car radio is equipped the Europe / USA frequency.

Rotate the volume knob to switch between USA and Europe frequency.



The system will change the frequency setting in about 3 seconds.

- **CLOCK 1 2/ 2 4:**





This unit is equipped with two types of clock display formats, 12 and 24 hours.

Rotate the volume knob to choose 12 hours format or 24 hours format.

- **BEEP ON/OFF:** Enables or disables the “BEEP” signal to confirm use.

- Rotate the VOL knob on the front panel or press the VOL+  /  VOL- button on the remote control to adjust the selected item.

Set the Clock (CLK)

1. To display clock time, press the CLK button.
2. To set clock time, press and hold the CLK button and the hour will flash.
3. Press the  or  button on the front panel or on the remote control to adjust the hour.
4. Press the CLK button and the minutes will flash.
5. Press the  or  button on the front panel or on the remote control to adjust the minute.
6. Finally press the CLK button to confirm the time adjustments.

Change the Source (MODE)

Press the MODE button to switch between RADIO, BT(Bluetooth), DISC(with a CD/MP3 disc inside the disc slot), USB(with USB device inserted) and AUX -IN(auxiliary input) modes.

Mute on/off

In power on mode, briefly press the MUTE button to toggle mute on or off. The muted state will be also released when the volume knob is used.


Loudness on/off

Press the LOUD button on the remote control to turn on the loudness to reinforce the output of bass frequencies, press again to turn it off.

Preset Equalizer(EQ)

Press the EQ button on the front panel or on the remote control to toggle between EQ OFF, ROCK, POP, CLASS, FLAT.

Release the detachable front panel

Press the  (Release) button to detach the detachable front panel, then the front panel can be removed from the chassis.

USB port

The USB port of this car radio is designed for media playback from flash memory devices and charging for iPhone / android mobile phone. The charging current consumption is 1 ampere.

Built-in Microphone

To receive your voice when you calling by using this Bluetooth hands-free system.


Aux input connector

The 3.5mm auxiliary input stereo connection is designed for devices with 3.5mm line-out or headphone output.

Reset System (RESET)

The RESET button is used to reset all parameters to factory default settings.

This function may be used when the LCD does not display normally or sound is distorted, or when any of the controls are disabled.

Press the  button to release the front panel and remove it, then use a thin object with a pointed end to depress the RESET button.

RADIO OPERATION

Switch Between USA area and Europe area Frequency

In radio mode, press and hold the VOL/SEL button to enter switch state of the EU(USA) and EU (Europe) frequency, then rotate it to switch between US(USA) and EU(Europe) frequency.





The system will change the frequency setting in about 3 seconds.

Change Bands (BAND)

Press the BAND button to switch between the FM1, FM2, FM3, AM1 and AM2 bands.

Each band stores up to six preset stations.

Manual Tuning (/)



Press and hold the  or  button on the front panel or on the remote control to enter manual tuning mode. In manual tuning mode, press the  or  button to move the radio frequency number up or down one step.

Auto Seek Tuning (/)

In standby mode or while not in manual tuning mode, quickly press the or button to move to the next/previous available station automatically.

To Store / Recall Preset Stations

The radio can be stored 6 preset stations for each band (FM1, FM2, FM3, AM1 and AM2) for a total of 30 preset stations.

- To memorize a station:
- Turn the radio on and select the desired band and station.
- Select a station by  or  button.
- Press and hold the desired preset button (numbered 1-6 on the face of the radio) for more than 2 seconds to save the station to that preset number.
- To recall a preset station:
- Select the desired band.
- Briefly press a preset button (numbered 1-6) to recall the corresponding preset station.

Automatic Store station/ Preset station scan (AMS)

Press and hold the AMS button for more than 2 seconds to select six strong stations and store them in the current band. The radio will automatically scan the current frequency and enter the six strongest stations into the preset memory positions for that band.

Briefly press the AMS button on the remote control to recall each preset station that saved in the memories in each band.

LOCAL/DX

In urban areas, most stations are strong enough and "LOCAL ON" mode should be selected.

Switch to LOCAL OFF mode to search for stations with weaker signals.
Press the LOC button on the remote control to choose local or distant reception mode.




STEREO/MONO

FM station is received in stereo mode. However, if the signal is weak or reception is not as good as you would like, switching to MONO mode usually improves the overall sound quality.
Press the ST button on the remote control to choose FM STEREO or MONO audio effect.




DISC / USB OPERATION

To insert DISC / USB

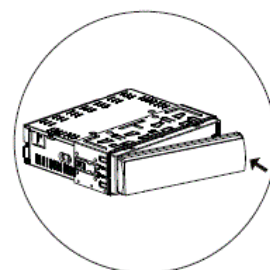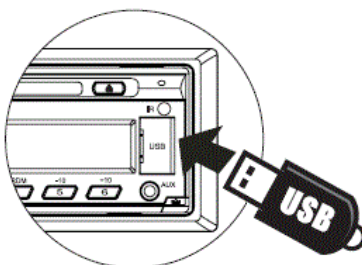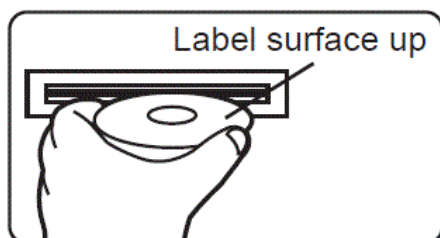- To play files on a disc, insert a disc with the label surface facing upward into the disc slot.
Playback will begin automatically.
- To play files on a USB device, open the USB port cover and insert the USB storage device into the USB port.
Playback will begin automatically.





Eject Disc/USB

- To eject a disc, press the  button to stop playback. Press the  (eject) button to eject the disc and then remove it
- To eject a USB device, press the  button to stop playback, then remove the USB device.

Play/Pause

- Press the  (play/pause) button to pause or resume playback.

Next/Previous Track

- To play the next track, press the  button.
- To play the previous track, press the  button.

Fast Forward/Backward

- To fast forward, press and hold the button.
- To fast backward, press and hold the button.

Introduction Scan

Press the INT button to play the first 10 seconds of each track, press again to stop the introduction scan, and play the current track.

Repeating the same track

Press the RPT button to toggle between RPT ALL (Play all track), RPT FLR(Continuously repeats all tracks in current folder), and RPT ONE (Continuously repeats current track).

Playing all tracks in random

Press the RDM button to play all tracks in random order, press again to cancel this function.

Track/Folder Navigation

- During a disc, USB mode, press the 5/-10 button to go backward 10 tracks.
Press the 6/+10 button to jump forward 10 tracks.
- During a MP3 disc, USB mode, press and hold the 5/-10 button to go back the previous folder.
Press and hold the 6/+10 button to go to the next folder.
You can repeat this function depending on the number and level of folders.
- These buttons have no this function if the USB device has no folders.


Select the track or file for playback in MP3 format

During CD, USB playback, press the AMS button to enter the track search modes:

- In playback of CD or files with MP3 format, press the AMS button to access the track or file number searching mode which allow you to quickly find a specific track or MP3 file by its serial number, and the "TRK SCH" and "TRK ****" will appear on the LCD display in sequence.
- Rotate VOL knob to select the number of your favorite track or file with high speed.
You can also press the numerical keys on the remote control to select a specific track by its serial number.
- Finally press the SEL/ENTER button to confirm and play the track that you selected.

AUXILIARY INPUT OPERATION

This car radio has an external auxiliary input jack, it is compatible with audio output from an MP3 music player. So you can listen to sounds and music from external devices, if you have plugged such a player into the AUX IN jack with a audio cable. Press the MODE button to switch to the AUX input mode on or off.

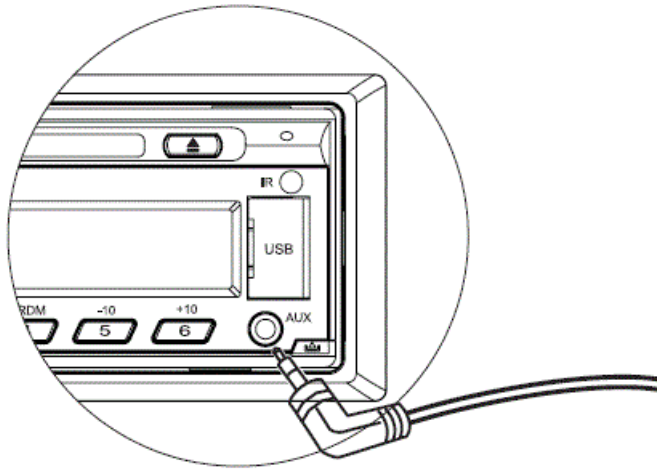




BLUETOOTH OPERATION

Pair and Connect

Prior to using the Bluetooth device as a hands-free system for a Bluetooth-enabled mobile phone for the first time, you must pair and connect the two devices as follows:

1. In any mode, prior to pairing and connecting, the BT logo in the LCD indicating that no device is connected. To begin pairing, enable BT mode on your mobile phone.
2. When the phone finds the car audio system, the "PYLE" name will be displayed.
3. Choose the "PYLE" from the device list to pair and connect with the car audio system. Upon confirming, the BT logo will stop flashing.
4. When pairing is complete, the mobile phone audio will automatically transfer to the car audio system whenever a call is made or received, or when the mobile phone plays music.


Make a Call

- To make a call, dial the call directly from the paired mobile phone.
- To make a call with this bluetooth hands-free system:
 - When linking up the Bluetooth-enabled mobile phone to this bluetooth hands-free system, press the  button to access the dial telephone number mode, then press the "0~9", * and # button on remote control to input the telephone number, and the entered number will be shown on the LCD display.
 - If a number has been incorrectly inputted, press the DEL button or  button to delete it.
 - Press the  button to make outgoing call.

Redial Last Dialed Number

Press and hold the  button on the control panel to redial the last dialed phone number.

Answer a Call

- When the mobile phone is called, the incoming telephone number displays on the LCD.
- To receive the call, press the  button on the control panel.

Reject a Call

To reject the call, press the  button on the control panel.





End a Call

- To end an active call, press the button.
- Switch Audio Between Car Audio and Mobile Phone
- During a call, press the VOL knob/button to switch the audio source from the car audio system back to your mobile phone.

Adjust Talk Volume

- During a call, use VOL knob or VOL+  /  VOL- button to adjust the volume level.
- Use the MUTE button to mute sound.

Audio Streaming (A2DP)

1. Press the  /MODE button to enter BT mode and display pause in the LCD display.
2. When a mobile device is paired, music played through that device will automatically be heard through the car audio system.
3. Press the  or  button to play the next or previous on the mobile phone.
4. Press the  button to pause or resume music playback.


REMOTE CONTROL

Remove Insulating Sheet

The remote control comes with an insulating sheet attached to the underside of the remote control, as illustrated on the right. The remote control will not work until the insulating sheet is removed.

Replace Lithium Battery Cell

1. When the lithium cell battery becomes weak, replace it as illustrated on the right.
2. Press and hold the movable block in the direction indicated by arrow 1. At the same time, pull the cell holder out of the remote control in the direction indicated by arrow 2.
3. Replace the old cell with a new one, making sure the (+) polarity is facing upward.
4. Re-insert the cell holder into the remote control.

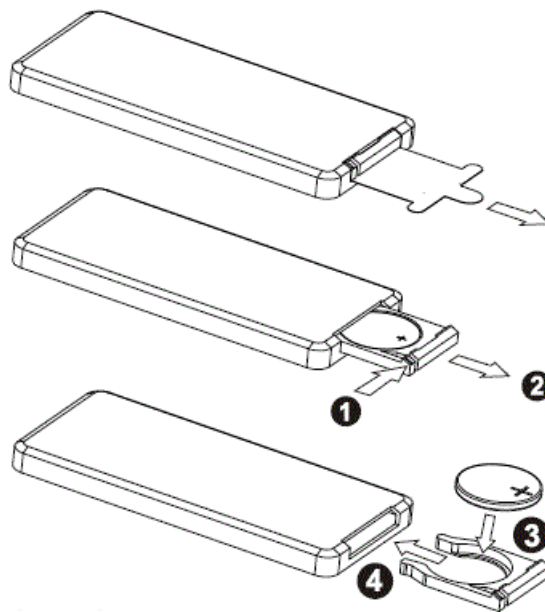


- Cell leakage may cause damage to the remote control.
- Do not throw cells into as this may cause an explosion.
- Keep battery cells out of reach of children.







Remote Control Operation

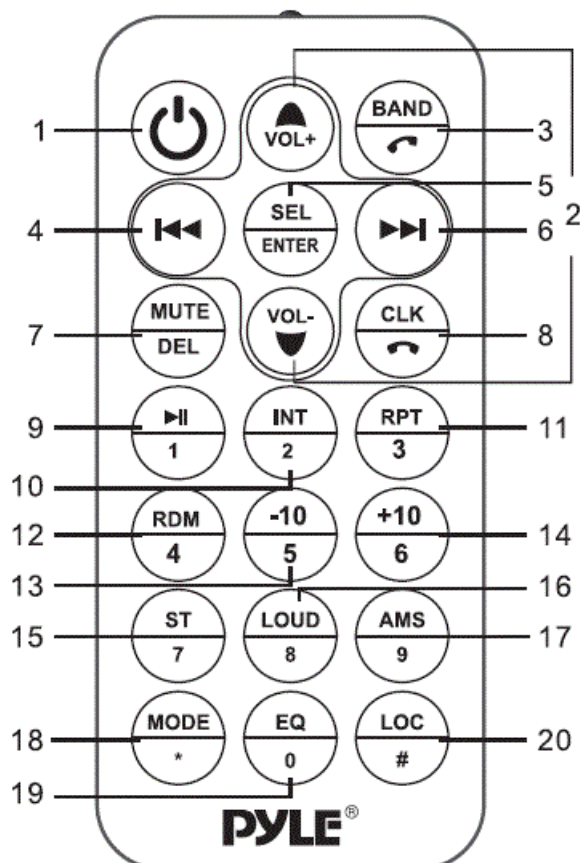Position the emitting window of the remote control toward the sensor window of the unit.

- The operation angle for front panel remote control reception is about 30 degrees.
- The distance between the emitting window of the remote control and the sensor window of the unit should remain less 5 meters.

Button Names and Locations



1.  (Power on/off) button
2. VOL+/VOL-(volume increase/decrease) button
3. Band button,  (answer call) button
4.  button: Tune down, seek down; Track down, fast reverse
5. SEL(selection/Enter) button
6.  button: Tune up, seek up; Track up, fast forward
7. Mute button, DEL(Delete) button
8. CLK(clock setting) button,  (end call) button
9.  button, preset station 1 button, keypad 1
10. INT(intro) button, preset station 2 button, keypad 2
11. RPT(repeat) button, preset station 3 button, keypad 3
12. RDM (random), preset station 4 button, keypad 4
13. -10(previous 10 tracks), preset station 5 button, keypad 5
14. +10(next 10 tracks), preset station 6 button, keypad 6
15. ST (stereo) button, keypad 7
16. LOUD(loudness) button, keypad 8
17. AMS (automatic music search) button, keypad 9
18. MODE button, keypad *
19. EQ(Equalizer) button, keypad 0
20. LOC (local)/DX button, keypad #

Note: When using the remote control for the first time, you must pull out the protective plastic tab from the battery compartment found on the back of the remote control.

SPECIFICATIONS

General

- Chassis Dimensions.....178(W) x 160(D) x 50(H) mm
- Power Supply RequirementDC 12V
- Current Consumption15A (max.)
- Maximum Power Output75W x 4CH

Radio

- FM
- USA/ Europe Frequency Range.....87.5 – 107.9 MHz (200KHz/Step)
- 87.5 – 108.0 MHz(50KHz/Step)
- Usable Sensitivity30 dBu
- I.F. Frequency10.7 MHz

AM

- USA/ Europe Frequency Range.....530 – 1710KHz (10KHz/Step)
- 522 – 1620 KHz (9KHz/Step)
- Usable Sensitivity20 dBu
- I.F. Frequency450 KHz

CD/USB

- Usable Audio FormatsCD/MP3/WMA
- USB Port Type.....2.0
- Pre-amp OutputFront and Rear
- Frequency Response20 Hz – 20 KHz
- S/N Ratio60dB

BT

- BT Profile supportsA2DP, AVRCP,HSP, HFP
- Range of frequency2.4GHz spectrum

TROUBLESHOOTING

The following chart will help in solving most problems that may occur.

If you still have questions after going through the checklist, please consult your local customer service representative. Before going through this check list, refer the wiring and operating procedures.

Symptom	Cause	Solution
No power	The car ignition switch has not turned on.	If the power supply is connected to the car accessory circuits, but the engine is not moving, switch the ignition key to "ACC".
	The fuse has been blown.	Replace a new one.
Disc can not be loaded or ejected.	Presence of CD disc inside the player.	Remove the disc from the player, and insert a new one.
	Inserting the disc in reverse direction.	Insert the CD with the label facing upward.
	The surface of CD is extremely dirty or has been scraped.	Clean the disc or try to replace a new one.
	Temperature inside the car is too high.	Cool off or until the ambient temperature returns to normal.
	Condensation	Leave the player off for an hour or so, and then try again.
No sound	Volume is in minimum.	Adjust volume to a desired level.
	The wiring is not properly connected.	Check wiring connection.
Sound skips	The installation angle is more than 30°.	Adjust the installation angle less than 30°.
	The surface of CD is extremely dirty or has been scraped.	Clean the disc or try to replace a new one.
The operation keys do not work	1. The built-in micro-computer is not operating properly due to noise.	1. Press the RESET button to restore the program.
	2. The front panel has not properly installed.	2. Fixed the front panel into its place.
No radio reception.	The antenna cable is not connected.	Insert the antenna cable firmly into the antenna socket of this radio player.
In automatic search mode the radio does not stop at a transmitting station.	The transmission signals are too weak.	Select a radio station manually.

Documents / Resources

<p>PYLE</p> <p>Car In-Dash AM/FM MPX Receiver with CD, CD, CD, 6/9W, MP3 Playback & USB/AUX Input</p>  <p>USER'S MANUAL Receiver Model: PLCD43MRB/PLCD43MRB</p> <p>PYLE PyleUSA.com</p>	<p>Pyle PLCD43MRB Car In Dash AM/FM MPX Receiver [pdf] User Manual</p> <p>PLCD43MRB Car In Dash AM FM MPX Receiver, PLCD43MRB, Car In Dash AM FM MPX Receiver, Dash AM FM MPX Receiver, FM MPX Receiver, MPX Receiver, Receiver</p>
--	---