



PYLE PPHP2694B, PPHP2894B Portable PA Party Audio Speaker User Guide

[Home](#) » [Pyle](#) » PYLE PPHP2694B, PPHP2894B Portable PA Party Audio Speaker User Guide 



PYLE PPHP2694B, PPHP2894B Portable PA Party Audio Speaker



WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. Meanwhile, please observe all the indications about safe operating.



1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.

3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plug from the outlet on the wall.
Contact the sell shop or nearest repairing center.

PRODUCT FEATURES

1. High-Powered PA Loudspeaker
2. Wireless Microphone for Home Karaoke Style Fun
3. Bass & Treble Adjust Knobs
4. Connect & Stream Audio from External Devices
5. Wireless Music Streaming Ability
6. Multi-Color Flashing LED Party Lights
7. Aux (3.5mm) Input Connector Jack

What's in the Box

- PA Speaker System
- Remote Control
- Power Adapter
- Wireless microphone

REMOTE CONTROL FUNCTIONS




1. Power: Standby button.
2. MODE: Used to switch the BT, FM, AUX, USB, SD
3. MUTE: Mute button
4. REC: Recording, press once to start recording, press again to play the current recording.
5. VOL + : Main volume increase
6. Next song/Next channel
7. Previous song/Previous channel
8. Play/Stop Auto-search by press and hold the FM button, press and hold the BT button to turn on TWS
9. VOL – : Main volume decrease
10. REPEAT: Single repeat/repeat all
11. EQ: Choose from EQ1, EQ2, EQ3, EQ4...
12. Choose song number directly/channel directly.

UNIT DESCRIPTION

1. POWER ON/OFF
2. USB port
3. Micro SD port
4. CHARGE: Charge indicator

5. DC 9V IN: DC 9V charging port
6. AUX: AUX input
7. MIC 1: Mic 1 input
8. MIC 2: Mic 2 input
9. LED. SW: LED ON/OFF
10. MODE: Mode Switch for BT FM AUX USB MicroSD
11. MENU: Menu key to enter treble, bass, microphone volume/ECHO adjustment increase and decrease
12. MIC. PRIORITY: Microphone priority
13. CH- : Previous song channel
14. SCAN: Play/stop. Press and hold to auto-search FM channel.
Press and hold in BT mode to turn on TWS.
15. CH+ : Next song next channel
16. VOL: Main volume knob

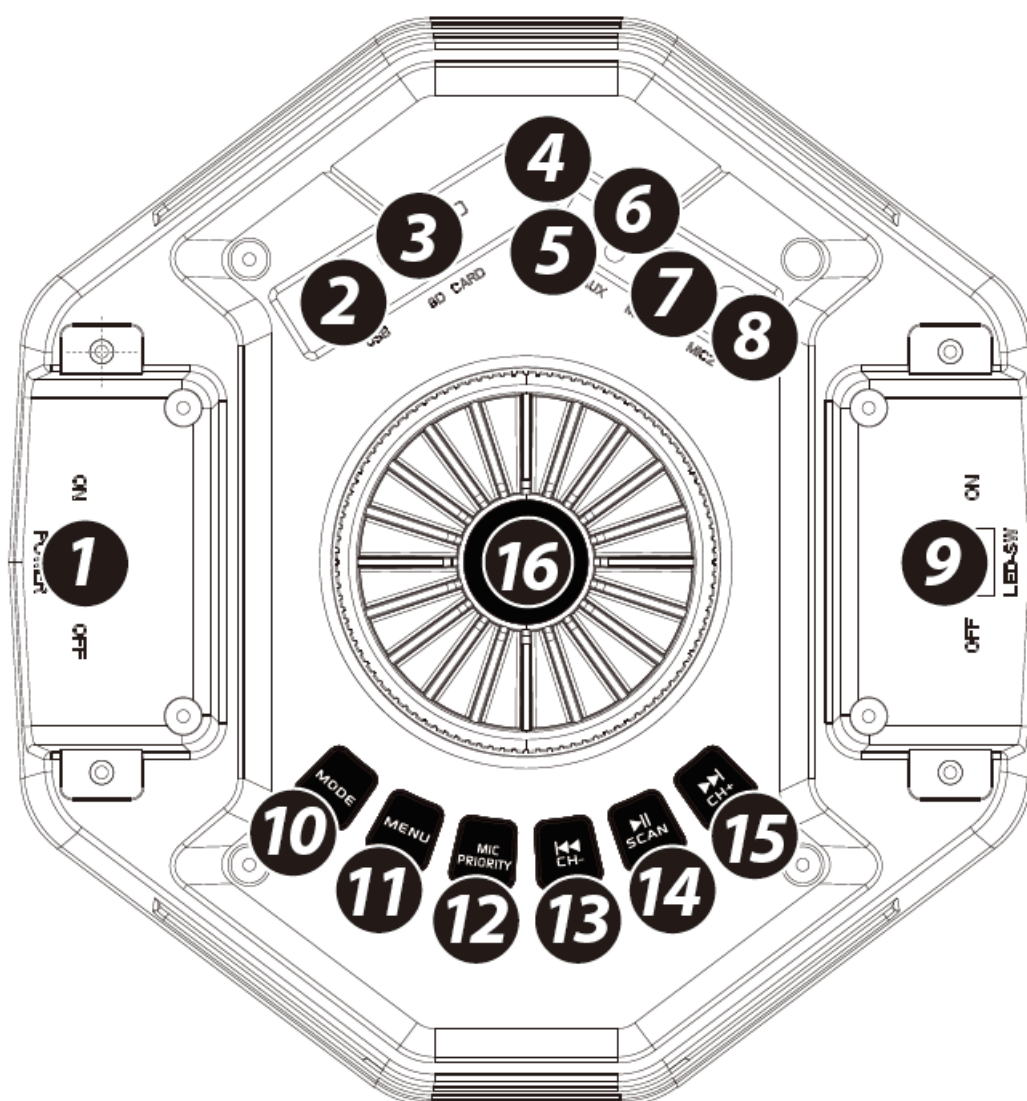

GETTING STARTED

1. Ensure the Portable PA Speaker is turned off. Ensure all volume controls are turned all the way down. Next, connect one side of the included power cable to the Portable PA Speaker's power inlet and the other to a grounded power outlet.

2. Ensure that the power supply complies with the power requirements listed on the identification sticker located on the bottom of your product. Turn on the power to the Portable PA Speaker using the power switch.
3. Slowly turn up the function keys until the desired level is reached.

WIRELESS BT CONNECTION

Switch the Portable PA Speaker to MODE, then switch to BT (BT MODE) pairing mode and connect to a new BT device using BT Network Name: 'PYLE USA'.

Warning: To prevent the risk of fire or electric shock, do not expose this appliance to rain or moisture. To prevent electric shock do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

Safety: Prior to connecting mains, ensure that the supply voltage is correct and the mains lead is in good condition. Avoid ingress of water or particles into the enclosure.


Placement: Keep the unit out of direct sunlight and away from heat sources.

Place the unit in an upright position during use and storage. Keep the unit away from moisture or dusty environments.

Cleaning: Use a soft cloth with a neutral detergent to clean the cabinet, panel and controls. To avoid damage, do not use solvents to clean this equipment.

www.PyleUSA.com

Documents / Resources

	PYLE PPHP2694B, PPHP2894B Portable PA Party Audio Speaker [pdf] User Guide PPHP2694B PPHP2894B Portable PA Party Audio Speaker, PPHP2694B, PPHP2894B, Portable PA Party Audio Speaker, PA Party Audio Speaker, Portable Party Audio Speaker, Party Audio Speaker, Audio Speaker, Speaker, Party Speaker
---	--

References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)