



PYLE PSUFM1288B Portable Bluetooth PA Speaker System User Manual

[Home](#) » [Pyle](#) » PYLE PSUFM1288B Portable Bluetooth PA Speaker System User Manual 

Contents

- [1 PYLE PSUFM1288B Portable Bluetooth PA Speaker System](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Control Panel Function](#)
- [5 Control Panel Function](#)
- [6 REMOTE CONTROL FUNCTIONS](#)
- [7 INSTRUCTIONS](#)
- [8 SIMPLE TROUBLESHOOTING](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

PYLE

PYLE PSUFM1288B Portable Bluetooth PA Speaker System



Product Information

Specifications

- **Model:** PSUFM1288B
- **Type:** Portable PASpeaker System and Microphone System with Flame light
- **Power Output:** 40 Watt
- **Speaker Size:** 8 inches
- **Power Source:** Rechargeable Battery
- **Connectivity:** Wireless BT Streaming
- **Additional Features:** Handheld Microphone, MP3/USB/Micro SD/FM Radio

Product Usage Instructions

Important Safety Instructions

- Before using the speaker, please read the user manual carefully and retain it for future reference.
- Adhere to all warnings on the speaker and in the user manual.
- Do not use the speaker near water.
- For ventilation purposes, do not remove the cover on the speaker as there are no user-serviceable parts inside. Refer all servicing to a qualified technician.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to humans. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this manual.

Control Panel Functions

The control panel of the speaker includes various buttons and ports. Here is a brief description of each

1. **DC 9V IN:** Input port for DC power supply.
2. **Control Panel Functions:** Various buttons and controls for operating the speaker.
3. **REMOTE CONTROL FUNCTIONS:** Functions available on the remote control.
4. **MODE:** Button for selecting different modes of operation.
5. **LED ON/OFF:** Button to control the lighting feature.
6. **REPEAT:** Button to repeat a specific action or segment.
7. **REC:** Button to start recording.
8. **PLAY:** Button to start playing recorded content.
9. **ECHO-:** Button to decrease the echo volume.
10. **ECHO+:** Button to increase the echo volume.
11. **BASS-:** Button to decrease the bass volume.
12. **BASS+:** Button to increase the bass volume.
13. **MIC Volume-:** Button to decrease the microphone volume.
14. **MIC Volume+:** Button to increase the microphone volume.
15. **EQ:** Button to select different equalizer modes.
16. **TWS:** Button for TWS (True Wireless Stereo) functionality.
17. **POWER ON/OFF:** Button to turn the speaker on or off.
18. **MP3/FM Buttons:** Buttons for controlling MP3 playback and FM radio.
19. **Replay:** Button to replay a specific action or segment.
20. **Delete Record:** Button to delete recorded content.
21. **MIC FRI Mode:** Button to switch to microphone feedback reduction mode.
22. **Treble Volume-:** Button to decrease the treble volume.
23. **Treble Volume+:** Button to increase the treble volume.
24. **Volume+/-:** Buttons to increase or decrease the overall volume.

Wireless BT Connection

1. Set the On/Off Switch to the on position. If the speaker is in Standby mode, press the Power Button on the remote control to turn it on.
2. Press the MODE button on the unit or remote control repeatedly until 'BLUE' flashes on the display.
3. On your BT-enabled device, search for the speaker name 'PyleUSA' and choose it to connect.
4. When the device is connected, 'BLUE' will stop flashing and remain on the display. Your device will show as connected to 'PyleUSA'.

FM Radio Operation

1. Press MODE Button to switch to FM mode.
2. Press and release ` ' Button again to save a channel under auto scan.
3. Press and release ` ' or ` ' Button to select the previous or next channel.

USB/MicroSD Operation

1. Insert a USB or MicroSD card memory device into the corresponding slot to play mp3 files automatically.
2. Press and release ` ` Button to pause or play the music.
3. During music playing, press and release ` ` or ` ` Button to play the previous or next song.

FAQ

- **Q: How do I connect the speaker to a Bluetooth-enabled device?**

A: To connect the speaker via Bluetooth, follow the “Wireless BT Connection” instructions provided in the user manual.

- **Q: Can I use the speaker near water?**

A: No, it is not recommended to use the speaker near water to avoid any damage or safety hazards.

- **Q: How do I adjust the volume of the microphone?**

A: Use the “MIC Volume+” and “MIC Volume-” buttons on the control panel or remote control to adjust the microphone volume.

- **Q: Can I remove the cover on the speaker?**

A: No, the cover should not be removed as there are no user-serviceable parts inside. Refer all servicing to a qualified technician.

- **Q: How do I delete recorded content?**

A: Press the “Delete record” button on the control panel to delete recorded content.

Control Panel Function

To be sure you take maximum advantage of all the speaker has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference, should any questions or problems arise.

WARNING

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of “dangerous” voltage within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to humans. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this manual.

1. Before using, please read the user manual carefully. Retain for future reference.
2. All warnings on the speaker and in the user manual should be adhered to.
3. Do not use the speaker near water.
4. For Ventilation Purposes
 - Do not block any of the ventilation openings.
 - Do not install near any heat sources or fire
 - Do not install in an airtight location.

5. Keep the cord and plugs in good order.
6. The speaker may be wiped down with a damp cloth once the unit has been switched off and the plug removed
7. Unplug the speaker during lightning storms or when not in use for long periods of time.
8. Keep foreign objects and liquid from entering the unit to avoid a short circuit, fire and electrical accidents.
9. Keep the speaker in a dry location.
10. Refer all servicing to the agent or a similar qualified service center for repair.


Control Panel Function

1. MIC 1/2 input jack
2. Aux input jack
3. USB connector
4. Micro SD card connector (The max memory size is 32G)
5. DC output (5V Output can charge your mobile phone/iPad)
6. DC input
7. Charging light indicator
8. Mic volume adjustment
9. Recording/Recording play
10. Microphone priority/EQ
11. Mic sound effect (5 kinds of different Mic sound effect)
12. LED mode (6 kinds of different flame light effect in whole metal grill)
13. **MODE**: AUX/USB/Micro SD/FM/BT selected
14. MP3 last song/FM last frequency/Echo VOL-
15. MP3 pause or play/FM auto scan frequency/TWS
16. MP3 next song/FM next frequency/Echo VOL+
17. Volume adjustment/Power ON/OFF
18. Working status display window

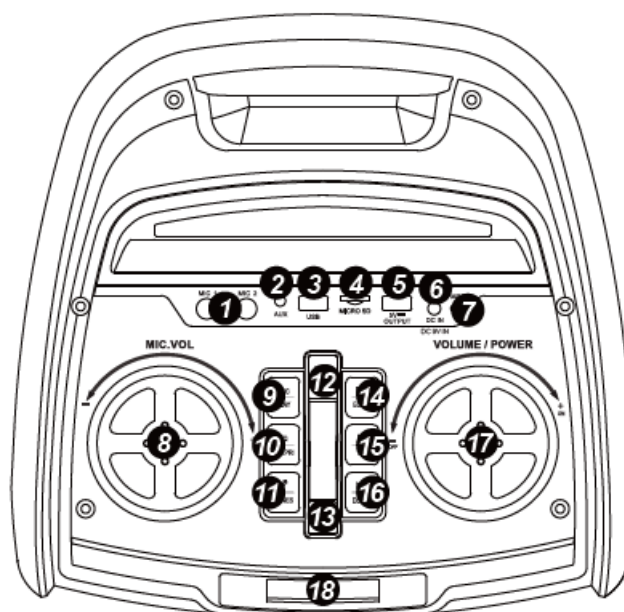

REMOTE CONTROL FUNCTIONS

1. Mute
2. MP3 previous song/FM last frequency
3. MP3 pause or play/FM auto scan frequency
4. AUX/USB/MicroSD/FM/BT input selected
5. LED ON/OFF
6. Record
7. Rec Play
8. Echo Volume –
9. Echo Volume +
10. BASS Volume –
11. BASS Volume +
12. MIC Volume +
13. EQ mode
14. TWS
15. MIC Volume –
16. POWER ON/OFF
17. MP3 next song/FM next frequency
18. Replay
19. Delete record
20. MIC FRI mode
21. Treble Volume +
22. Treble Volume –
23. Volume +
24. Volume –

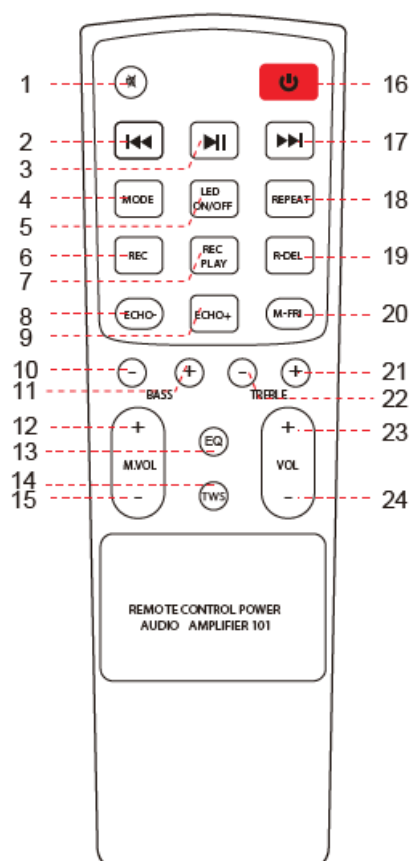




INSTRUCTIONS





Wireless BT Connection

1. Set the On/Off Switch to the on position. If the speaker is in Standby mode, press the Power Button on the remote control to turn it on.
2. Press the MODE button on the unit or remote control repeatedly until 'BLUE' flashes on the display.
3. On your BT-enabled device, search for the speaker name 'PyleUSA' and choose it to connect.
4. When the device is connected, 'BLUE' will stop flashing and remain on the display. Your device will show as connected to 'PyleUSA'

FM Radio Operation

1. Press MODE Button to switch to FM mode.
2. Press and release  Button again to save a channel under auto scan.
3. Press and release '144  or  Button to select the previous or next channel.

USB/MicroSD Operation

1. Insert a USB or MicroSD card memory device into the corresponding slot to play mp3 files automatically.
2. Press and release  Button to pause or play the music.
3. During music playing, press and release  or  'or'  Button to play the previous or next song.

Important: To avoid damaging the USB/Micro SD device, do not take it out while music is being played from it.


Auxiliary AUX Operation

1. Use the provided audio cable to connect your external device's (e.g. mp3 player) audio out to the AUX input on the speaker
2. Press MODE Button to switch to AUX mode.
3. Turn on your external device and start playback.

TWS Function

This function allows you to connect two speakers wirelessly and to reproduce the music from the same source at the same time.

The process to connect two speakers is as below

1. Take 2 speakers and name them A and B, In advance, A unit switch to Wireless BT and start the scan function from your device and the phone will directly connect. Then also switch B unit to Wireless BT function and then press and hold  'blll' button on A unit, it will change to TWS function and it will automatically connect to B unit. When the connection is successful, a "tick" tone will be heard on the B unit.
2. After connected successfully, on the B unit, the LED display will stop flashing, having static "Blue" word, then

you can hear the music from both the speaker, it becomes left and right channel, true stereo. Press the TWS button again to exit TWS.

SIMPLE TROUBLESHOOTING

Try the troubleshooting steps below if you are having problems while using your speaker. If problems still exist, please look for a qualified technician or contact our company. To prevent electric shock or expand the scope of the malfunction, do not repair by yourself.

Symptom	Possible problem	Solution
No function light & No sound	Low Battery	Insert the Adapter to charge the battery
	Speaker power button is not turned on	Turn on the button'
Function light on but no sound	Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack
	Speaker are not connected or misconnected	Power off, then check and confirm the cable connection again
	Audio signal is not transmitted to speaker	Check all the speaker if there is audio signal output

If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assumes no responsibility.

Wireless BT Connectivity

- Instant Wireless BT Music Streaming Ability
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices Smartphones, Tablets, Laptops, Computers, etc
- **Wireless BT Version:** 5.0
- **Wireless BT Network Name:** 'PyleUSA
- **Wireless Range:** Up to 30'+ ft.

What's in the Box

- Speaker
- Wireless Microphone
- Remote Control
- 3.5mm Audio Cable
- 2A Microphone Battery
- (2) 3A Remote Control Battery

Audio Recording Mode

- **It's Easy:** One Button Record Activation
- Record Vocals Via Microphone
- Ability to Record Vocals via Microphone
- Records to USB Flash & SD Memory Card
- **Audio File Type Created:** MP3

California Prop 65 Warning

Warning

This product contains Nickel carbonate which is known to the state of Colifornia to cause cancer birth detects and other reproductive harm For more info go to: www.P65warnings.ca.gov

System Features


- PA Loudspeaker System
- High-Powered Rechargeable Speaker Tower
- Hassle-Free, Quick Setup Audio & Vocal Projection
- Wireless BT Music Streaming
- Built-in Rechargeable Battery for Portability
- Includes Wireless Handheld Microphone
- **Mic Priority Control:** Automatic Vocal Talkover over Music
- FM Radio with Digital LED Display
- Connect & Stream Audio from External Devices
- USB Flash & Micro SD Memory Card Readers
- 1/4" Microphone Input
- Aux (3.5mm) Jack
- Treble Bass Echo Volume Controls
- Full Range Stereo Sound Reproduction
- Impressive Bass Response
- Convenient Carry Handle & Wheels
- **External Battery/Power Supply Support:** DC 5V
- Perfect for Karaoke, Crowd Control, Public Even Gatherings

Technical Specs

- **Power Output:** 40 Watt MAX
- **Sound System:** 8" Woofer with Piezoelectric Tweeter
- **Wireless Microphone Type:** VHF Band
- **Frequency Response:** 45Hz-20KHz
- **Sensitivity (1w/1m):** 650mV
- **Impedance:** 4 Ohm
- **Maximum SPL:** 128dB
- **Dispersion (@6dB):** H90 V50
- **Crossover:** 3kH LF: 120Hz-4kHz, HF: 4KHz-15KHz
- **LED Lights Power Switch:** ON/OFF

- **Maximum USB Flash / Micro SD Memory Card Support :** 32GB
 - **Microphone Battery Operated:** Requires (2) × ‘AA’ Batteries, Included
 - **Rechargeable Battery:** 7.4V Li-ion Battery, 3600mAh – 18W adapter
 - **Power Supply:** 110-220V
 - **Unit Dimensions (L x W x H):** 11.8” x 12.20” x 30.12” – inches DBL
-

Documents / Resources

	<p>PYLE PSUFM1288B Portable Bluetooth PA Speaker System [pdf] User Manual PSUFM1288B Portable Bluetooth PA Speaker System, PSUFM1288B, Portable Bluetooth PA Speaker System, Bluetooth PA Speaker System, Speaker System, System</p>
---	--

References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)
- [User Manual](#)