



# Pyle PBMSG3BK Wireless Portable Boombox Speaker User Manual

[Home](#) » [Support](#) » Pyle PBMSG3BK Wireless Portable Boombox Speaker User Manual 

## Contents

- [1 Pyle PBMSG3BK Wireless Portable Boombox Speaker](#)
- [2 FEATURES](#)
- [3 INSTRUCTION](#)
- [4 Wireless BT Streaming](#)
- [5 FM Radio](#)
- [6 AUX-IN](#)
- [7 How to charge](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)

# PYLE

## Pyle PBMSG3BK Wireless Portable Boombox Speaker




Please take the time to read this manual carefully before you begin using your new device. Any content revision of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

## FEATURES

- Compact Boom Box Stereo Style
- Portable Travel-Friendly Speaker Design
- Digital Streaming FM Radio
- Built-in Rechargeable Battery
- MP3 Digital Audio File Playback
- Ported Enclosure for Extended Bass
- Full Range Stereo Sound Reproduction
- Rugged & Durable 'Super Tube' Speaker Housing

## INSTRUCTION

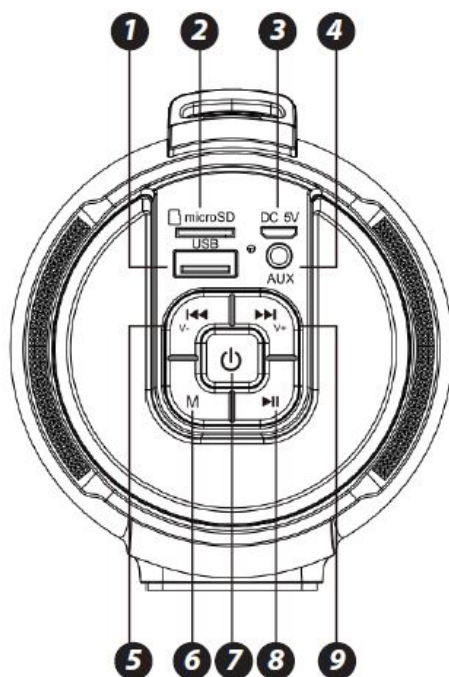

1. USB Port
2. Micro SD Slot
3. Charging jack
4. AUX IN
5. Backward/Volume Down
6. Mode (Wireless BT switch, USB disk, Micro SD, FM and AUX-IN state)
7. Power ON/OFF
8. Play/Pause
9. Forward/Volume Up

## Wireless BT Streaming

1. Turn the power button to "ON". The LED light turns blue and blinks quickly, then enter Wireless BT mode and you will hear a "Bluetooth Device Ready To Pair" tone.
2. Activate Wireless BT of your mobile phone and search for the device name "PyleUSA" then connect it. The blue LED light blinks slowly and will make a tone "Bluetooth Device Connected Successfully" once connected.
3. Play the music from your mobile phone and enjoy.
4. Press Forward or Backward button on the device or on Mobile phones to select songs you like.
5. Press Play/Pause button on the device or on Mobile phones to play/pause the music.
6. Press and hold Forward or Backward button to adjust volume up and down or adjust the mobile phones' volume.

### **Playing music from USB disk & Micro SD card**

1. Turn the Power button to "ON".
2. Insert Micro SD card or USB flash disk into slot, the speaker will make a tone "Music Play Mode", and play the stored music automatically.
3. Under playing mode, short press Forward or Backward button to select songs you like, press and hold to adjust the volume up and down.
4. Press Play/Pause to play or pause.

**Remark:** Under Wireless BT playing mode, insert Micro SD or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the MODE button to switch to Wireless BT mode again.

### **FM Radio**

1. Under FM radio state, the audio cable provided is the antenna. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button, the speaker will prompt "The Radio Mode" when entering FM state.
3. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

### **TWS Function**

1. Turn ON two identical speakers you want to pair, please be noted that they must have the same BT pairing name, both under BT mode. You only need to set up one of the two units;
2. Press and hold "PLAY/PAUSE" button for around 4 seconds, speaker will make a tone "di" to start pairing, and will make "di" voice for 3 times once successfully paired;
3. Connect Wireless BT with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
4. If you want to exit the TWS mode, press and hold "PLAY/PAUSE" button (of the unit that you set at beginning) again to exit the TWS function.

**Remark:** Under the TWS mode, if you connect your mobile phone to the unit (you set at beginning) via the provided audio cable, it will start to play AUX via TWS function, under this status, you can not switch to Wireless BT mode by pressing the Mode button.

## AUX-IN

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button, the speaker will prompt "Aux Input Mode", then Enjoy.. When using an external device, all functions can be controlled by the external device.

### Remarks

1. To turn the unit on, press and hold the Power button for 3 seconds;
2. Press the MODE button to switch for different modes, the order is BT, USB disk, Micro SD, FM radio and AUX-IN.
3. When the speaker's Wireless BT is connected with one mobile device, user can press and hold the Mode button to disconnect the previous device, then connect Wireless BT to your another mobile device;
4. Default volume is at 50% status of max volume;
5. When the battery voltage is low, the speaker will prompt "Battery Is Low, Please Recharge In Time";
6. Turn the power button to "OFF" if not in use.

### How to charge

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device, and we are not responsible for any damage caused by using other charger.
2. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to your PC or other charger with 5V output.
3. Charging time should be 3-5 hours. The light is red while charging, and the indicator light will switch off when fully charged. (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.)
4. In order to prolong the life of battery, please do not charge more than 8 hours.

### Questions? Issues?

We are here to help!

- **Phone:** (1) 718-535-1800
- **Email:** [support@pyleusa.com](mailto:support@pyleusa.com)
- [PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)
- [www.PyleUSA.com](http://www.PyleUSA.com)

This product can expose you to a chemical or group of chemicals, which may include "Cadmium (Cd)" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.

### FREQUENTLY ASKED QUESTIONS

Download the PDF Link: [Pyle PBMSPG3BK Wireless Portable Boombox Speaker User Manual](#)

[Manuals+](#)