



# Pyle PBMWP185 Wireless Portable Bluetooth User Manual

[Home](#) » [Support](#) » Pyle PBMWP185 Wireless Portable Bluetooth User Manual 

## Contents

- [1 Pyle PBMWP185 Wireless Portable Bluetooth](#)
- [2 FEATURES](#)
- [3 INSTRUCTION](#)
- [4 How to charge](#)
- [5 Frequently Asked Questions](#)
- [6 Video – Overview Of Speaker](#)
- [7 Related Posts](#)

# PYLE

## Pyle PBMWP185 Wireless Portable Bluetooth




Please take the time to read this manual carefully before you begin using your new device. Any content revision of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

## FEATURES

- Compact Boom Box Stereo Style
- Portable Travel-Friendly Speaker Design
- Digital Streaming FM Radio
- Built-in Rechargeable Battery
- MP3 Digital Audio File Playback
- Ported Enclosure for Extended Bass
- Full Range Stereo Sound Reproduction
- Rugged & Durable 'Super Tube' Speaker Housing

## INSTRUCTION

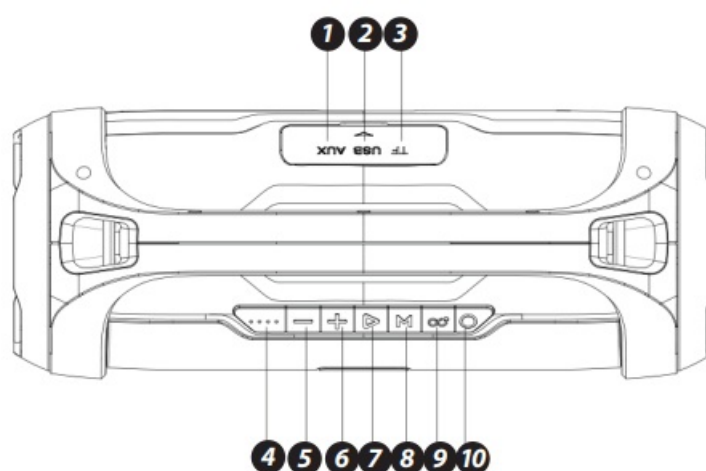

1. AUX Input
2. USB Port
3. Micro SD slot
4. Battery Indicator
5. Backward/Volume down
6. Forward/Volume Up
7. Play/Pause
8. MODE (Wireless BT Switch, USB disk, FM and AUX-IN state)
9. TWS Button
10. Power On/Off

### Wireless BT Streaming

1. Turn the power button to "ON". The LED light turns blue and blinks quickly, then enter Wireless BT mode and you will hear a "Bluetooth Device Ready To Pair" tone.
2. Activate the Wireless BT of your mobile phone and search for the device name "PyleUSA" then connect it. The power button will stop blinking and will make a tone "Bluetooth Device Connected Successfully" once connected.
3. Play the music from your mobile phone and enjoy.

4. Press the Forward or Backward button on the device or on Mobile phones to select songs you like.
5. Press the Play/Pause button on the device or on Mobile phones to play/pause the music.
6. Press and hold the Forward or Backward button to adjust the volume up and down or adjust the mobile phone's volume.
7. Press and hold Play/Pause button to activate the Mobile phone voice control function SIRI/GOOGLE ASSISTANT

#### **Playing music from a USB disk & Micro SD card:**

1. Turn the Power button to "ON".
2. Insert a Micro SD card or USB flash disk into the slot, the speaker will make a tone "Music Play Mode", and play the stored music automatically.
3. Under playing mode, short press the Forward or Backward button to select songs you like, and press and hold to adjust the volume up and down.
4. Press Play/Pause to play or pause.

#### **Remark**

Under Wireless BT playing mode, insert Micro SD or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the MODE button to switch to Wireless BT mode again.

#### **FM Radio**

1. Under the FM radio state, the audio cable provided is the antenna. Please insert the audio cable to get the best FM signal before using it.
2. Turn the power button to "ON", and press the "MODE" button, the speaker will prompt "The Radio Mode" when entering the FM state.
3. Under playing mode, short press the "Play/Pause" button to auto-search the FM Channel and store it automatically.
4. Press the Forward or Backward button to change the stored FM channel.

#### **TWS Function**

1. Turn ON two identical speakers you want to pair, please be noted that they must have the same BT pairing name, both under BT mode. You only need to set up one of the two units;
2. Press the "TWS" button for around 4 seconds, the speaker will make a tone "di" to start pairing, and will make a "di" voice 3 times once successfully paired;
3. Connect Wireless BT with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effects.
4. If you want to exit the TWS mode, press and hold the "TWS" button (of the unit that you set at the beginning) again to exit the TWS function.

#### **AUX-IN**

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button, the speaker will prompt "Aux Input Mode", then Enjoy. When using an external device, all functions can be controlled by the external device.

## Remarks

1. When using a Wireless BT connection with an iPhone mobile, there will be a battery icon indicating the speaker battery volume on your iPhone.
2. Press the MODE button to switch for different modes, the order is Wireless BT, USB disk, Micro SD, FM radio, and AUX-IN.
3. When the speaker's Wireless BT is connected to one mobile device, the user can press and hold the TWS button to disconnect the previous device, then make a Wireless BT connection with another mobile device;
4. The default volume is at 50% status of max volume;
5. Press and hold the Mode button to turn the RGB on/off;
6. When the battery voltage is low, the speaker will prompt "Battery Is Low, Please Recharge In Time";
7. Turn the power button to "off" while not in use.

## How to charge

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device, and we are not responsible for any damage caused by using other chargers.
2. Power off the unit put the provided charge cable into the charge slot of the unit, and connect the other end to your PC or other chargers with 5V output.
3. Charging time should be 4-6 hours. The light is red while charging, and the indicator light will switch off when fully charged. (When playing music during charging, please put the volume to the middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.)
4. In order to prolong the life of the battery, please do not charge more than 8 hours.



## Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800 Email: [support@pyleusa.com](mailto:support@pyleusa.com)

## WARNING

This product can expose you to a chemical or group of chemicals, which may include "Cadmium (Cd)" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>

## Frequently Asked Questions

Is it waterproof

It is not a marine-grade or waterproof speaker. It can handle a splash but you cannot completely submerge it to water.

Does it have two function?

No, that I know. But the sound quality is really good for the price. Also is not 500watts,

Does this radio have random play?

This unit doesn't have a random or shuffle-play feature. However, you do it using the device connected to this unit via Bluetooth.

The product says it's 4-6 hrs charging time, how long is the playing time?

The battery will last around 4 to 5 hours in mid-volume.

Can I play a flash drive in here?

Yes, you can play music from your thumb drive. This unit can handle up to 32 GB USB/SD.

Can this be connect to tv?

Yes, you can connect it using Bluetooth or a 3.5 mm cable.

Does it have an ac power cord? I dont need batteries

Yes, there's a power adapter included in the package.

Can it handle stay out in the weather?

I personally would not trust that. I would keep it away from water. It has great outdoor volume to enjoy with outdoor activities but I would always bring it back inside.

Will it play while charging?

Yes, you can use it while charging but we don't recommend that.

Is there a FM antenna?

The power cord is supposed to act as the antenna, but you would probably be better off if you smashed it with a hammer & tried to listen then. This speaker sucks. Plus you can turn it off.

## Video – Overview Of Sneaker



[Download this PDF Link: Boyle PBMWP18520234075W Portable Bluetooth Manual Boombox-Speaker-PBMWP185..mp4](#)

Manuals+.