



Pyle PKWMA210 Wireless Microphone Soundbar User Manual

[Home](#) » [Pyle](#) » Pyle PKWMA210 Wireless Microphone Soundbar User Manual 

Contents

- [1 Pyle PKWMA210 Wireless Microphone Soundbar](#)
- [2 What's in the Box](#)
- [3 Product Introduction](#)
- [4 Attention](#)
- [5 Panel Introduction](#)
- [6 Remote Control](#)
- [7 Operation Instruction](#)
 - [7.1 Wireless BT Mode](#)
- [8 Specification](#)
- [9 Troubleshooting](#)
- [10 California Prop 65 Warning](#)
- [11 Questions? Issues?](#)
- [12 FAQs](#)
- [13 Video- Product Overview](#)
- [14 Related Posts](#)

PYLE

Pyle PKWMA210 Wireless Microphone Soundbar



PKWMA210 Soundbar with Wireless Microphone Karaoke Microphone System, 10" Wireless BT, USB/AUX-IN/AUX Out, Remote Control

For full use of your player, please read this manual carefully before use, so as to grasp connection methods and operational key points of this system. You will also find our various explorations in design, manufacturing process and operational humanization, all to meet your requirements. Please keep this manual well for future reference.

Open the package

Please open the package carefully, confirm the following accessories, and put them in one place in case of loss.

What's in the Box

- Soundbar
- Remote Control
- (2) Wireless Microphone
- Type C Charging Cable

Product Introduction

1. Advanced Wireless BT function, can be paired with any device that has BT function (suitable for BT function products).
2. High-capacity battery, easy to use, more durable.
3. Support high-quality MP3 music files.
4. Support Karaoke function.
5. Strong speaker, 3D digital sound technology, amazing sound quality.
6. Can connect IPAD, IPOD, phone, computer, MP3, MP4 and other external audio device.

Attention

- Before use, please read this manual for the correct use of this product. For better services, the contents of this manual may change due to variations in product performance and functions without further notice.
- To maintain better performance, and to prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, more attention should be paid to the following circumstances:
 - Moisture or underwater environment
 - Heater or high-temp work environment
 - Exposure directly to sunlight
 - Easy to drop
 - DO NOT detach the combined audio by yourself, or the warranty will be void.


WARNING

1. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. To avoid accidents such as fire or electric shock, please check whether the grid voltage is exactly the same as required by this device.


Panel Introduction

Definitions of buttons and jacks:

There are 8 buttons and jacks in total, defined as follows:

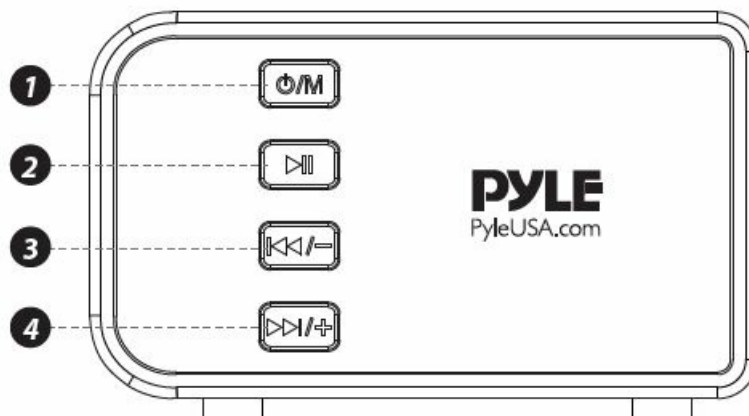



1. : Press and hold to power on/off, short press to switch modes;
2. : Press to play or pause music
3. : Press and hold to decrease volume, short press to the previous song.
4. : Press and hold to increase volume, short press to next song.

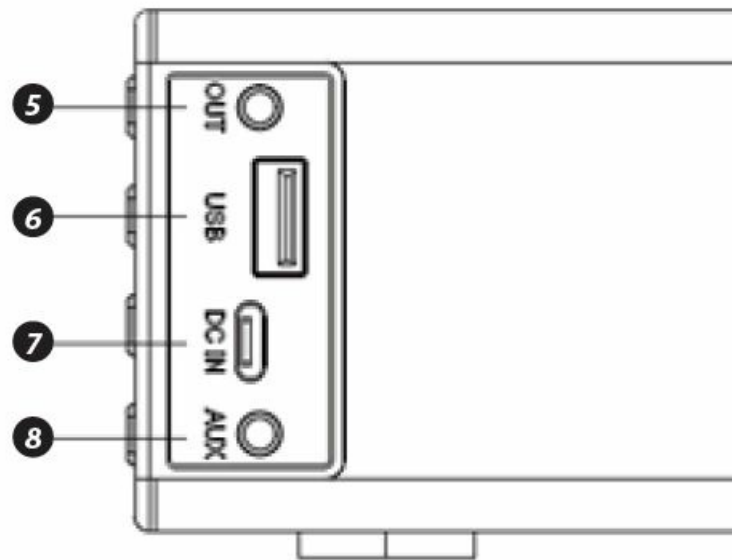

- 5. OUT: Audio output
- 6. USB: USB playback
- 7. DC IN: Type C charging
- 8. AUX: Audio input

Remote Control

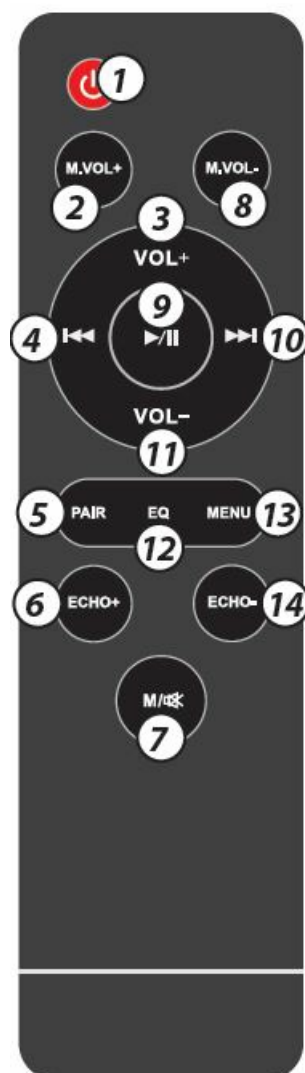

- 1. : Short press to power off.

2. M.VOL+: Press to increase the Mic volume
3. VOL+: Press to increase volume
4. ⏮: Previous track in BT/USB mode
5. PAIR: Press to wireless BT pairing or BT disconnecting
6. ECHO+: Press to increase Mic echo
7. M/🔊: Short press to change between BT/AUX-in/USB mode, press and hold to mute on/off
8. M.VOL-: Press to decrease Mic volume
9. ▶/⏸: Press to play or pause music
10. ⏭: Next track in BT/USB mode
11. VOL-: Press to decrease volume
12. EQ: Adjust EQ sound
13. MENU: Enter to adjust treble and bass effect
14. ECHO-: Press to decrease Mic echo

Operation Instruction

Wireless BT Mode

1. Press and hold /M to power ON the soundbar. It will enter the wireless BT mode in default and wait for pairing.
2. Turn ON the wireless BT function on your devices and the device will start to search for the Soundbar.
3. Select "PyleUSA" from the list of found devices.
4. If asked, enter the password "0000" and press OK.
5. When successfully paired with your device, the indicator light will be lit steadily.

Note: The wireless BT playback is controlled by your device and the buttons on the remote control.

• AUX IN Mode

- After power on, connect the external audio sources to the AUX IN jack of soundbar by using the 3.5mm audio cable, and then short press the " /M" button on the soundbar or the " " button on the remote control to switch to "AUX IN" mode.
- At this time, music from the external audio sources such as MP3/CD can be played. (adjust the volume of the external audio sources to be moderate and playing.)

• AUX OUT Mode

- After powering ON, connect the amplifier device to the AUX OUT jack of the soundbar by using the 3.5mm audio cable. At this time, the soundbar is an audio source to play music from an amplifier device.

• USB Mode

- After powering ON, insert the USB into the USB jack of the soundbar, and the machine automatically goes to USB playback mode and plays the music in USB. Press the " " button to play and pause the music. Press and hold to increase volume, short press to next song; Press and hold to decrease volume, short press to the previous song.

• Karaoke Function

- Karaoke function can be realized by turning on the microphone in any mode.

• Device Compatibility

- The machine theoretically supports all mobile phones with wireless BT function and any related

equipment connected to wireless BT and playing music.

Specification

Soundbar Features:

- Design with Plastic Cabinet
- Produce Less Vibration
- Dual Effect DSP Chip
- Two Full-range Speakers with a Powerful Bass Inversion Design
- Wired Connection Including AUX in (3.5mm) and USB
- 2.0 Channel Soundbar Designed with DSP Technology for Amazing Clarity
- Contain 2 Full-range Speakers
- Powered Full-range Drivers

Microphone Features:

- Includes (2) Mics
- Ultra-Wide Frequency Response
- High Signal Output for Vocals & Singing
- Rugged Construction & Steel Mesh Grills
- Integrated Low Noise Circuitry
- ON/OFF Switches for Stage Control
- Perfect for Stage Performances or In-Studio Use

Microphone Specs:

- Mic Element/Type: Dynamic
- Pickup/Polar Pattern: Uni-Directional
- Mic Body Material: Zinc Alloy Metal
- Frequency Response: 50Hz-12kHz
- Sensitivity (0dB=1vpa@1kHz): -55±dB
- Impedance: 600 Ohms, Output
- Microphone Dimensions: Φ1.57 " x 9.52"
- Single Microphone Weight: 0.15Kg (without battery)

Technical Specs:

- Output Power 10W x 2
- AC/DC Adapter 100-240V~50/60Hz
- Speaker Frequency 45Hz-15KHz
- Wireless BT Version 5.0, A2DP, AVRCP
- Wireless BT Range Up to 10m
- Audio Input Sensitivity: 500±100mV

- Construction Materials: PVC+Metal
- Remote Control Battery Operated, Requires (2) x 'AAA' Batteries
- Battery Type: 18650 7.4V 2200 mAh
- Battery Life: Up to 1.5 hours at maximum volume
- Dimensions Soundbar: 250*95*60mm

Troubleshooting

Problem	Solution
Volume is low or distortion	<ol style="list-style-type: none"> 1. Check the soundbar volume and adjust it to the proper volume. 2. Low battery, need to charge.
LED Indicator is not working under BT mode	<ol style="list-style-type: none"> 1. Low battery, need to charge. 2. Power OFF and power ON the device
Music breaks	<ol style="list-style-type: none"> 1. Obstruction exists between mobile devices and BT devices. Remove obstructions. 2. Exceed the valid connecting distance.
Pairing failed	<ol style="list-style-type: none"> 1. Check whether the mobile phone is under pairing status 2. Delete the device name on the mobile phone and re-pairing.

California Prop 65 Warning

WARNING:

- This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.
- For more info go to: www.P65warnings.ca.gov

Questions? Issues?

We are here to help!

- Phone: (1) 718-535-1800
- Email: support@pyleusa.com
- www.PyleUSA.com

FAQs

What accessories are included in the package?

The package includes the soundbar, remote control, (2) wireless microphones, and a Type C charging cable.

What devices can the soundbar be paired with?

The soundbar can be paired with any device that has Bluetooth function.

What are the attention points for using the product?

The product should not be exposed to rain or moisture, stored or operated near liquids, exposed directly to sunlight, or subjected to high temperatures. The combined audio should not be detached.

What precautions should be taken when using the product?

The apparatus should not be exposed to dripping or splashing liquids, and no objects filled with liquids should be placed on it. The grid voltage should be checked to avoid accidents.

How many buttons and jacks are there on the soundbar?

There are a total of 8 buttons and jacks on the soundbar.

How do I power on the soundbar in wireless BT mode?

Press and hold the power button (/M) to power on the soundbar. It will enter the wireless BT mode and wait for pairing.

How do I switch to AUX IN mode?

After powering on, connect the external audio sources to the AUX IN jack of the soundbar using a 3.5mm audio cable. Then, short press the /M button on the soundbar or the play/pause button on the remote control to switch to AUX IN mode.

How do I switch to USB mode?

After powering on, insert a USB into the USB jack of the soundbar. The soundbar will automatically go into USB playback mode. Press the play/pause button to play and pause music, and press and hold the volume buttons to adjust the volume.

How do I use the karaoke function?

The karaoke function can be realized by turning on the microphone in any mode.

What are the specifications of the soundbar and microphone?

The soundbar features a plastic cabinet, dual effect DSP chip, two full-range speakers, and wired connections. The microphone features ultra-wide frequency response, high signal output, and rugged construction.

What should I do if the volume is low or distorted?

Check the soundbar volume and adjust it to the proper level. If the battery is low, charge it.

Why is the LED indicator not working in BT mode?

It could be due to a low battery. Try charging the device or power it off and on again.

Video- Product Overview



[Download This PDF Link](#) [Cylex PKW 42/2020 685111 Pro MMA 19 Wireless User Manual](#)
[Microphone-Soundbar.mp4](#)

Manuals+,