



Pyle Wireless UHF Mic System User Guide







[Home](#) » [Pyle](#) » Pyle Wireless UHF Mic System User Guide



PDWM2232
Wireless UHF Mic System
UHF Dual Channel Wireless Microphone System,
Adjustable Volume Controls, Includes (2) Handheld Mics

1. Please read this manual before using this equipment in order to avoid damage through incorrect operation and to get the best performance from your purchase.

      2. Keep the manual for future reference.
3. Please pay due attention to the following symbols to help you use the product safely and properly and to avoid any personal injury or damage to the product.
4. Please read the entire manual strictly and follow these steps to use your product.
5. No user-serviceable parts inside transmitter or receiver – refer servicing to qualified service personnel.
6. To prevent the risk of fire or electric shock, do not expose any of the components to rain or moisture.
7. Please keep good ventilation and a dry environment around the entire unit.
8. Keep this system far away from hot objects.
9. Ensure that the correct adapter is used with an adequate current rating and that the mains voltage is as stated on the adapter.
10. Keep the system away from any ignition source such as the fireplace, heaters, or candles.
11. Do not throw used batteries into a fire or garbage bin with domestic rubbish. Be sure to dispose of used batteries in accordance with local waste disposal rules.
12. Do not place heavy objects or liquid on top of the system
13. Only the certified technician may disassemble the product.
14. Don't use the system under the following environment.

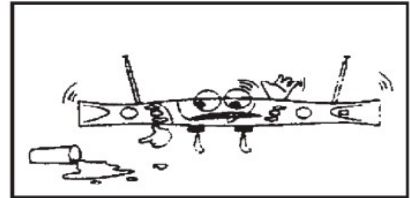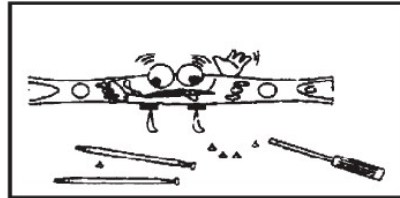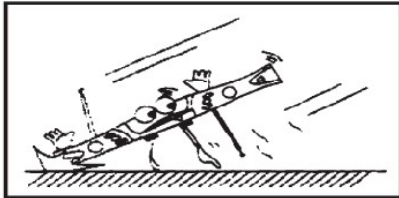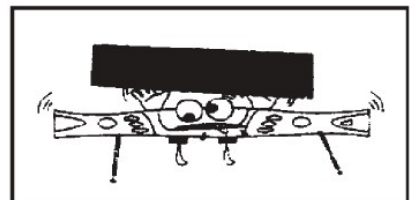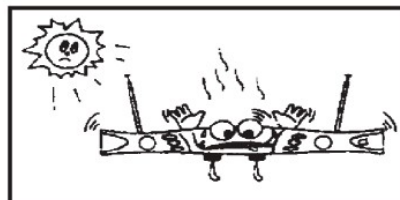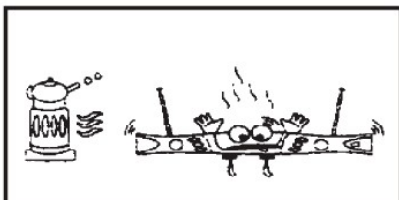

Contents [[hide](#)]

[1 HANDHELD MICROPHONE PARTS](#)

[2 HANDHELD MICROPHONE OPERATION](#)

[3 TRANSMITTER OPERATION](#)

[4 System Features:](#)

[5 What's in the Box:](#)

[6 Handheld Microphones:](#)

[7 System Receiver:](#)

[8 Documents / Resources](#)

 
[8.1 References](#)

[9 Related Posts](#)

HANDHELD MICROPHONE PARTS

1. Power ON/OFF switch
2. Power ON/OFF LED Indicator
3. Microphone Volume
4. Microphone Windscreen
5. Charging LED Indicator

6. Charging USB Input: a 5v, 1000mA Android Mobile Adaptor, and USB suitable

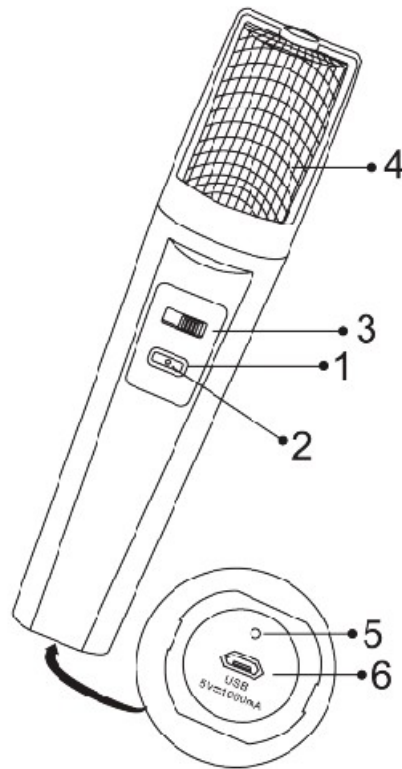

HANDHELD MICROPHONE OPERATION

1. For the Handheld Microphone, insert fully charged 3.7v, 640mA rechargeable batteries before using.
2. A fully charged Lithium battery can last up to 7 hours in continuously, but in order to ensure optimum performance, it is recommended that you recharge the batteries after every 6-7 hours of use.
3. Turn ON the handheld microphone by sliding the POWER SWITCH (1) to turn on the TX first. The RF LED (7) on the receivers should now be lit, indicating a received signal from the transmitter. The BATTERY INDICATOR LED (2) will be lit, indicating usable battery strength. In the case of a dead or low battery, it will either not power ON at all or will stay ON continuously, indicating that the batteries should be recharged. To preserve battery life, turn the transmitter OFF when not in use.
4. The microphone is now ready to use. Adjust the P.A volume per the Audio Output Microphone Connection section.
5. While in use, you can adjust the VOLUME (3) of the microphone
Note: Observe care in selecting P.A. volume, transmitter location, and speaker placement so that acoustic feedback (howling or screeching) is avoided.

 
 


When Charging, please make sure the power adaptor is in 5v, 1000mA

TRANSMITTER OPERATION

1. Antenna: Lifting up the Antenna (1) at both sides of the receiver lightly.
2. Power Input: Plug the AC/DC ADAPTER provided into the DC INPUT JACK (2) on the back of the receiver.
Then plug the power supply into an AC outlet which is 110~240V, 50/60Hz Note: Any 13.5V DC regulated

- source with 400mA capability can also be used. Press the POWER SWITCH (4) once to turn ON the receiver. The POWER ON LED (5) will be lit and the receiver is now operational.
3. Audio Output: The Receiver has an adjustable line-level UNBALANCED LINE/MIX 3.5mm jack (3) AUDIO OUTPUT. Connect the 3.5mm jack to the receiver using the 6.3mm Audio cable jack to the AMPLIFIER or Mixer.
 4. Power Switch: Press the POWER SWITCH (4) once to turn ON the receiver.
 5. The POWER ON LED: Turn OFF the receiver, the POWER ON LED (5) indicator light is lit and the receiver is operational.
 6. RF LED: When the receiver and the mic are turned ON, the RF LED (6) will be lit and operational.
 7. AF LED: The receivers are equipped with an AF LED indicator (7) showing the audio is present from the transmitter. If this LED light blinks continuously, decrease the Mic volume, or overload distortion may result. The RF LED DISPLAY (6) indicates the TRANSMITTER (TX) is ON. When it is lit up, the TX is in the usable range. If not lit up or flickering, either the TX is not ON or it is out of range. Move the TX closer to re-establish the connection.

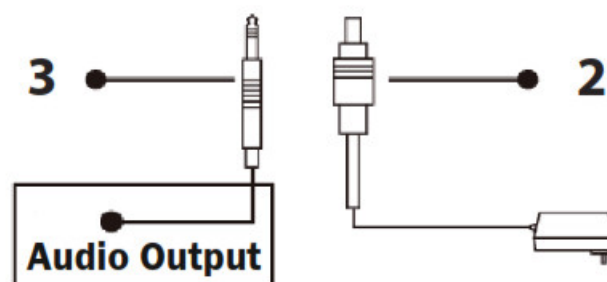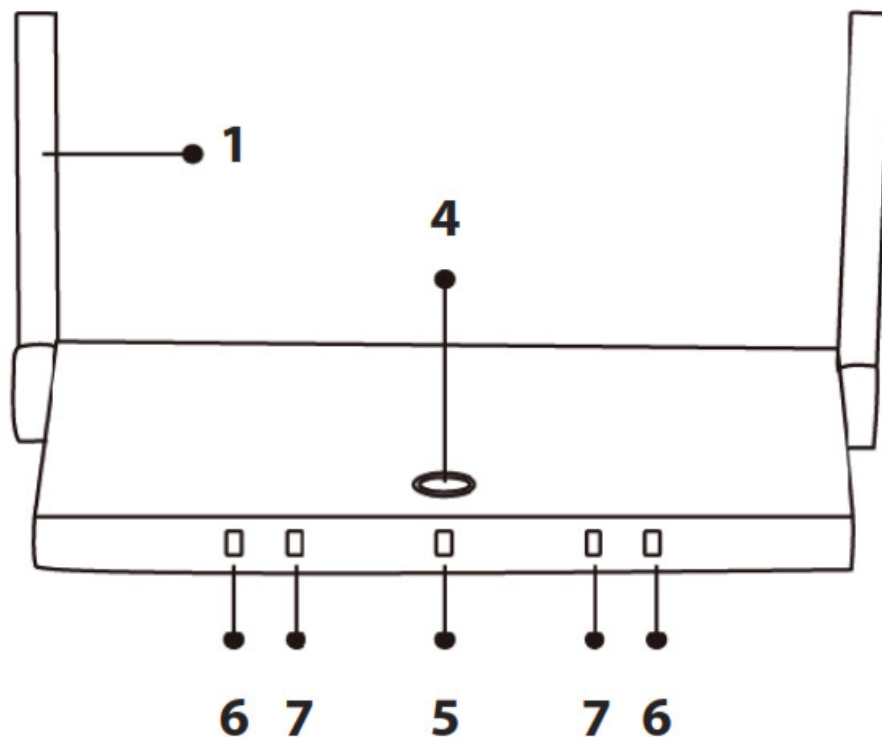

PDWM2232
Wireless UHF Mic System
 UHF Dual Channel Wireless Microphone System,
 Adjustable Volume Controls, Includes (2) Handheld Mics

System Features:

- UHF Narrow Band Receiver System
- Dual Frequency Design (Channel A/B)
- High Signal/Noise Ratio Performance
- Broad Frequency Response Range & Low Distortion
- Independent Adjustable Volume Control
- Dual Independent Channel Antennas
- RF Signal and AF Signal LED Indicators
- Radio Frequency and Audio Frequency
- Built-in Rechargeable Battery up to 5 Hours Life
- Working Distance Up to 200' Feet

What's in the Box:

- Receiver Base
- (2) Handheld Microphones

Handheld Microphones:

- RF Power Output: >10dBm
- Modulation Pattern: Digital
- Battery Powered, Transmitters Rechargeable 640mA Lithium Battery

System Receiver:

- Sensitivity: -94dBm (S/N:12dB)
- RF Image Rejection:>70dB
- Audio Dynamic Range: 110dB
- T.H.D.: <1%
- S/N Ratio: >70dB
- Neighboring Channel / Interference: >60dBc
- Receiver Dimensions (L x W x H): 5.90" x 3.93" x 0.78" -inches



PyleUSA.com

VISIT US ONLINE:


Have a question?

Need service or repair?

Want to leave a comment?
[PyleUSA.com/ContactUs](https://www.pyleusa.com/contact-us)

Questions? Issues?
We are here to help!
Phone: (1) 718-535-1800
Email: support@pyleusa.com

Documents / Resources

 <p>The image shows the Pyle PDWM2232 Wireless UHF Mic System. It includes a white base unit with two antennas and two handheld microphones. The Pyle logo and website are visible at the top. Text on the image reads: PDWM2232 Wireless UHF Mic System, UHF Dual Channel Wireless Microphone System, Adjustable Volume Controls, Includes 2 Handheld Mics, LASER CLONE.</p>	<p>Pyle Wireless UHF Mic System [pdf] User Guide Wireless UHF Mic System, PDWM2232, UHF Dual Channel Wireless Microphone System, Adjustable Volume Controls Includes 2 Handheld Mics</p>
--	--

References

- [P Pyle USA Electronics | Home Audio | Car Audio & More](#)