



Pyronix Wireless Arming Station Instruction Manual

[Home](#) » [Pyronix](#) » Pyronix Wireless Arming Station Instruction Manual 

Contents

1 Pyronix Wireless Arming Station

2 Operating Instructions

3 Setting and Unsetting

4 Activating the Outputs

5 Documents / Resources

5.1 References

6 Related Posts



Pyronix Wireless Arming Station




Operating Instructions


Up to four wireless arming stations can operate on a wireless alarm system.

Setting and Unsetting

- If you are using a proximity tag to set or unset the wireless alarm system, press any key first (except **D**), to 'wake' the wireless arming system before presenting a tag.

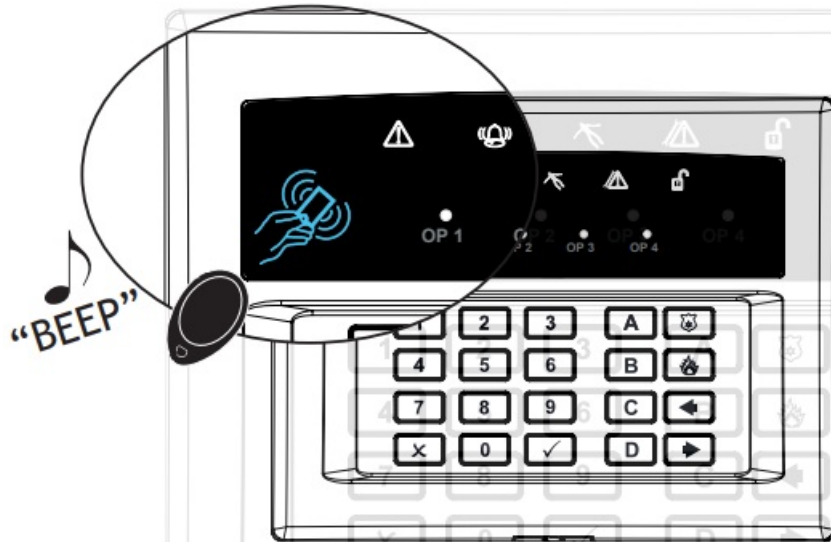


- Alternatively, if a user code is being used, then enter the code. The wireless arming station will automatically 'wake' once the first button is pressed.
- After a tag or code has been entered, select the area to set by pressing **(A)(B)(C)** or **(D)**. The key will illuminate indicating that area has been chosen to be set. Once confirmed, press the key.

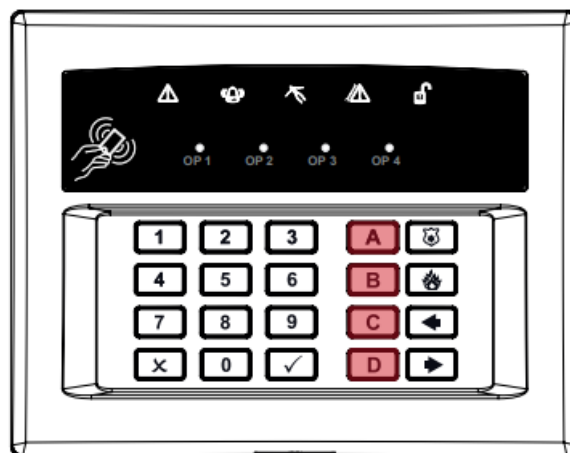

- To unset, enter the user code, or press any key then present the proximity tag.

Activating the Outputs

- Press the **(D)** key and enter the Master Manager code or user code.
- The keys **(1) (2) (3)** and **(4)** will illuminate.

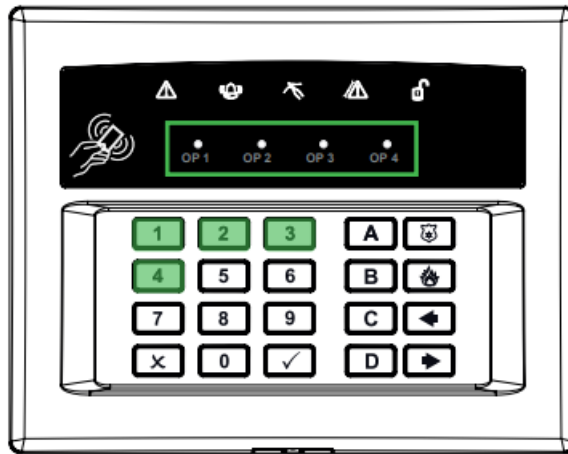

- The OP1-4 LEDs will illuminate once the 1-4 numeric keys have been pressed. Once illuminated, it signifies that the output has been triggered. Press the key again to deactivate the output.



<https://bit.ly/2pdjBQg>

Documents / Resources

	<p>Pyronix Wireless Arming Station [pdf] Instruction Manual Wireless Arming Station, Arming Station, Station</p>
--	--

References

- bit.ly/2pdjBQg