



Pytes E-Box 48100R Solar Storage System Installation Guide

[Home](#) » [Pytes](#) » Pytes E-Box 48100R Solar Storage System Installation Guide 

Contents

- [1 Pytes E-Box 48100R Solar Storage System](#)
- [2 Connect Power Cable & Ground Cable](#)
- [3 Connect Communication Cable](#)
- [4 Set the DIP Switch](#)
- [5 Start up the System](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Pytes


Pytes E-Box 48100R Solar Storage System




Connect Power Cable & Ground Cable

Warning: Ensure that the battery power switch is off

Single

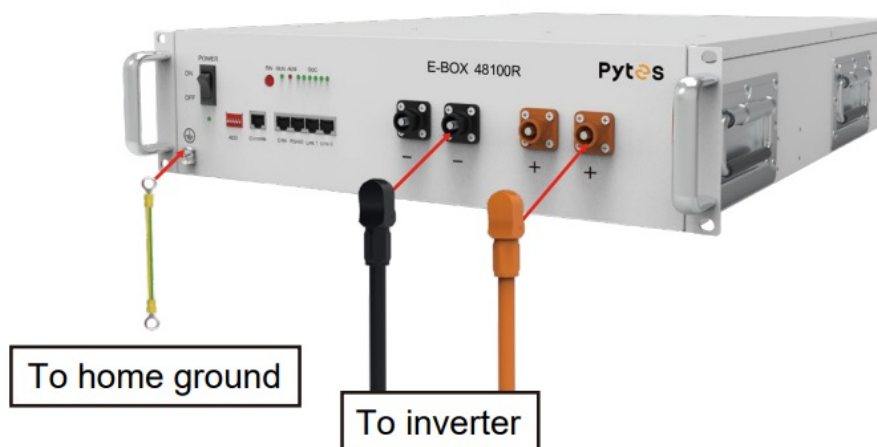

Multiple

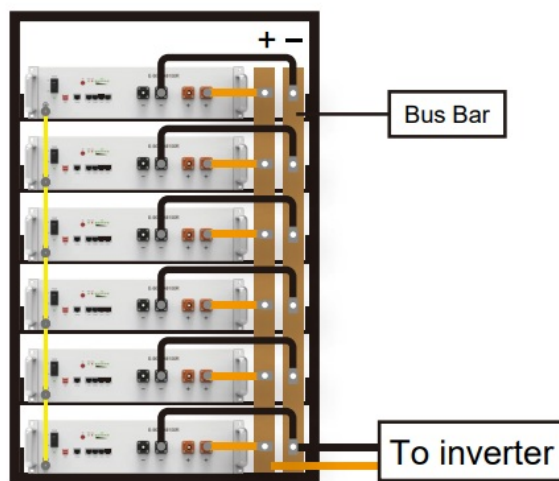


Note: Each battery should be connected to a Bus Bar when installing multiple batteries.


Connect Communication Cable

Note: Select CAN or RS485 port based on the communication type of inverter

Single

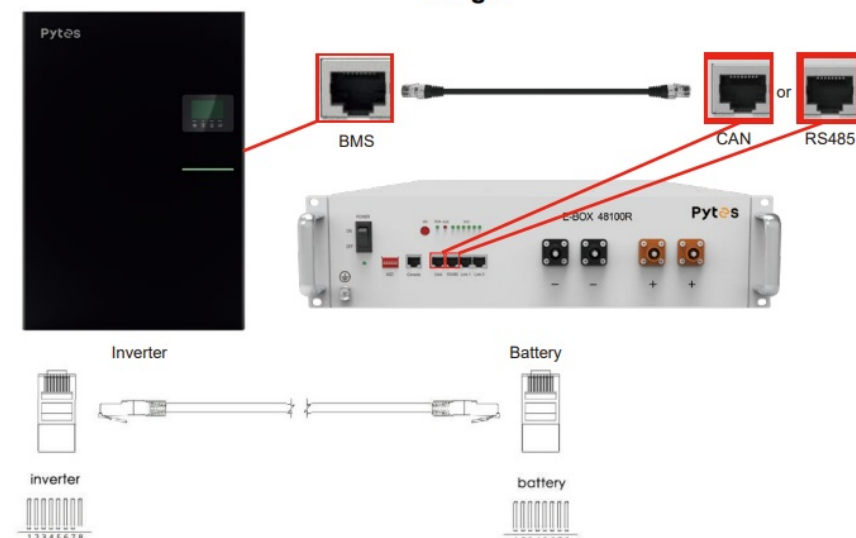


Note: Please connect the master battery and the inverter.

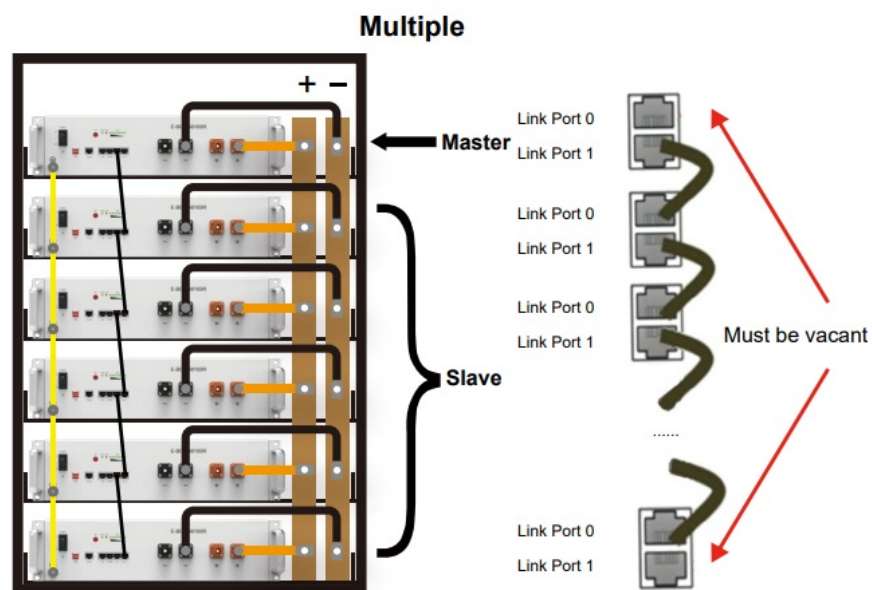

Note: Ensure the pin order of communication cable is correct.

Set the DIP Switch

Note: Set the DIP switch based on the inverter you installed.

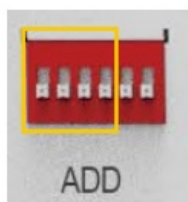


Compatibility list

Victron		Deye sol-ark		Afore		Solis	
Voltronic		Studer		SRNE		Empty	
Goodwe		KeLong		SMT		SMA	
Megarevo		Growatt		Empty		Luxpower	

Graphic The black part is the lever



Multiple

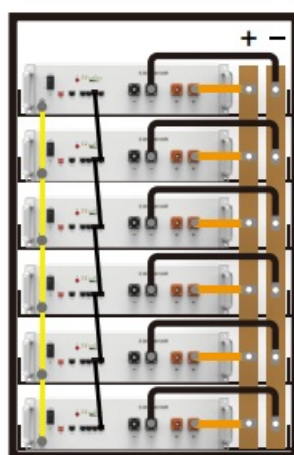

Start up the System

Note: Make sure the connection to the inverter is correct before starting the battery.

Single

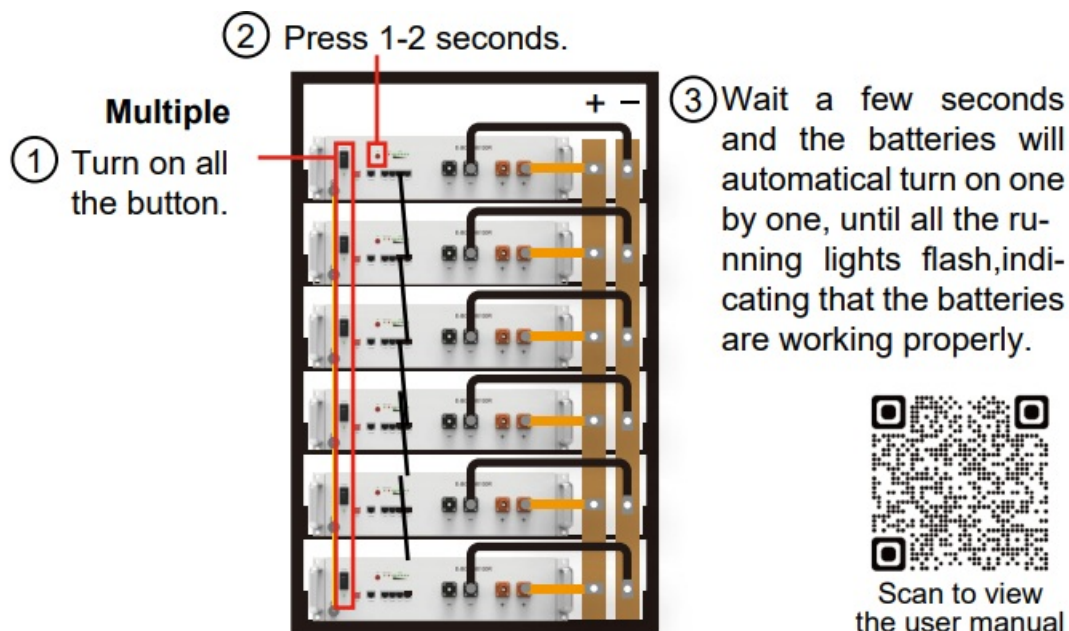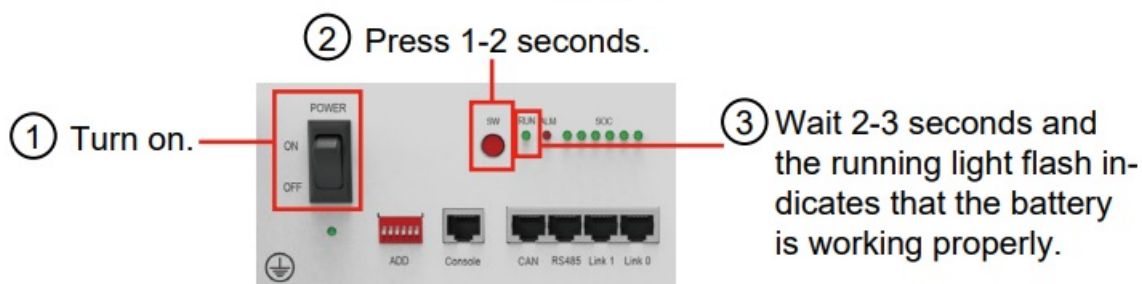

Documents / Resources

	<p>Pytes E-Box 48100R Solar Storage System [pdf] Installation Guide E-Box 48100R Solar Storage System, E-Box 48100R, E-Box, 48100R, 48100R Solar Storage System, Solar Storage System, Solar Storage, Storage System</p>
	<p>Pytes E-BOX-48100R Solar Storage System [pdf] Installation Guide E-BOX-48100R Solar Storage System, E-BOX-48100R, Solar Storage System, Storage System</p>