



## Qilive Q.5429 Automatic Espresso Machine User Manual

[Home](#) » [Qilive](#) » Qilive Q.5429 Automatic Espresso Machine User Manual 

# Qilive


Automatic  
espresso machine  
Q.5429



## Contents

- 1 Q.5429 Automatic Espresso Machine
- 2 SAFETY INSTRUCTIONS
- 3 PRODUCT DESCRIPTION
- 4 TECHNICAL SPECIFICATIONS
- 5 BEFORE FIRST USE
- 6 8
- 6.1 Documents / Resources
- 6.1.1 References

## Q.5429 Automatic Espresso Machine

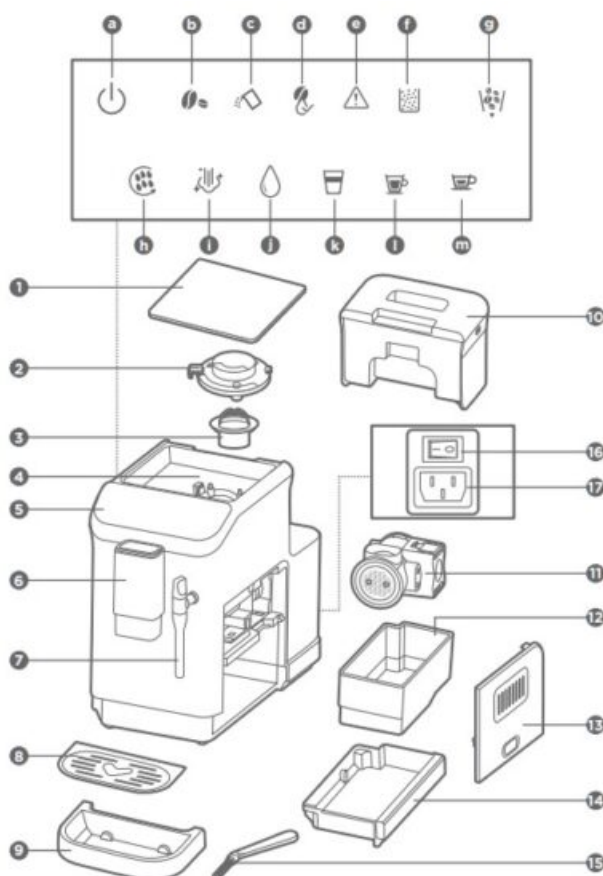





## SAFETY INSTRUCTIONS

Before using this electrical appliance, read the instructions below carefully and keep the user's manual for future reference:

1. Before plugging the appliance into an electrical socket, check that the specifications of the local electric current are consistent with those indicated on the appliance's nameplate. Always plug your appliance into an earthed wall socket.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way

and if they understand the hazards involved.

5. Children shall not play with the appliance. Close supervision is necessary when the appliance is used by or near children.
6. Unplug the power plug from the electrical socket when you are not using the appliance and before cleaning it.
7. **Warning!** Do not submerge the power cord, the electric plug or the appliance in water or in any other liquid! Never place the appliance under running water! The appliance must not be immersed.
8. **Warning!** Avoid spillage on the connector.
9. The appliance must not be used with an external timer or separate remote-control system or be connected to a circuit that is regularly switched on and off by the utility.
10. **WARNING:** Risk of burns! Be careful not to get burned by the steam during the brewing cycles. Some parts of the appliance are hot when operated, do not touch them. Use handles or knobs only. The surfaces are subject to residual heat after use. Allow to cool completely and disconnect from the power supply before cleaning, changing accessories, approaching parts that move in use, or when moving the appliance.
11. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments:
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - indoor areas for private homes and home environments;
  - places with an altitude of less than 2000 metres.
12. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph “Cleaning and Care” in manual.
13. Regarding the instructions for the use of accessories, operation times and speed settings, refer to the below paragraphs.
14. Place the appliance on a flat, stable and heat-resistant surface.
15. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
16. Always turn off the appliance before unplugging it.
17. Plug the power plug into an easily accessible electrical socket to be able to immediately unplug the appliance in the event of an emergency. Unplug the power plug from the electrical socket to completely power off the appliance. Use the power plug to fully disconnect from the power supply. Always hold the plug, never pull the cord.
18. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
19. Never use a damaged appliance! Unplug the appliance from the electrical socket and contact the retailer if it is damaged.
20. **WARNING:** Risk of electric shock! Do not try to repair the device yourself. In the event of a malfunction, repairs must be carried out by qualified personnel.
21. Do not use the appliance with wet hands or if you find yourself on a wet floor. Do not touch the power plug with wet hands.
22. Never under any circumstances open the appliance’s housing. Do not insert any foreign object in the housing.
23. Do not place any heavy objects on the appliance.
24. Do not place any objects that give off a flame (e.g. candles) on or near the appliance. Do not place any objects containing water (e.g. vases) on or near the appliance.

25. Risk of suffocation! Keep all packaging elements out of the reach of children and babies!
26.  Never misuse; otherwise, it may cause potential injury.
27.  This symbol indicates that the materials are approved for contact with food.
28.  The marking of this device (symbol of a crossed-out dustbin) complies with European Directive 2012/19/EU relating to “used electrical and electronic equipment”. This marking means that this equipment, at the end of its useful life, cannot be disposed of with other household waste. The user is required to deliver it to operators who collect used electrical and electronic equipment. Collection operators, including local collection points, shops and local authorities, create an appropriate system for collecting equipment. Appropriate collection of used electrical and electronic equipment helps avoid harmful impacts on human health and the environment, resulting from the presence of hazardous components, as well as from improper storage and treatment of this equipment.
29.  **WARNING:** Risk of injury! Never insert fingers in the grinding tray. Always unplug the machine before attempting to remove any blockages.
30. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
31. Do not hang the power cord over the edge of table or counter.
32. Ensure the power cord does not touch the hot surfaces of appliance.
33. Do not place the coffee maker on a hot surface or beside a heat source or open flame (such as a gas or electric hob or oven) to prevent it being damaged.
34. Do not use the appliance for anything other than its intended use.
35. Do not use the appliance outdoors.
36. Never place the coffee machine in a cabinet when it is in use.
37. This appliance should be placed or stored in an environment above 4°C to avoid freezing of the internal water pipe of the machine and prevent it from malfunctioning.
38. Never use the coffee machine without water.

## PRODUCT DESCRIPTION

1. Coffee bean tray cover
2. Coffee bean grinder setting dial
3. Coffee bean grinder
4. Coffee bean tray
5. Control panel
  - a. On/off button with indicator light
  - b. Empty coffee bean tray indicator light
  - c. Refill water tank indicator light
  - d. Brewing capsule cleaning indicator light
  - e. Warning indicator light
  - f. Coffee grinds bin full indicator light
  - g. Bean emptying button with indicator light
  - h. Cleaning button with indicator light
  - i. Steam button with indicator light

- j. Hot water button with indicator light
- k. American coffee button with indicator light
- l. Lungo espresso button with indicator light
- m. Single-cup espresso button with indicator light
- 6. Coffee outlet (height is adjustable)
- 7. Steam wand with steam handle
- 8. Drip tray cover
- 9. Drip tray
- 10. Water tank with lid
- 11. Brewing capsule
- 12. Coffee grinds bin
- 13. Door
- 14. Coffee grinds drip tray
- 15. Cleaning brush
- 16. Power on/off switch
- 17. Power socket

## TECHNICAL SPECIFICATIONS

Rated voltage:	220-240 V, 50-60 Hz
Power consumption:	1350 W
Pressure:	20 bar
Water tank capacity (Max.):	1.5 L
Auto-off function:	After 28 minutes
Weight:	7.6 kg
Dimensions (W x H x D):	440 x 190 x 325 mm
Protection class:	Class I

## BEFORE FIRST USE

### 4.1. UNPACKING



- Unpack the appliance and remove all packaging materials.
- Check the appliance has no visible damage and no parts are missing.
- Before using the appliance for the first time, or before using it after a period of prolonged storage, clean the appliance and accessories, following the instructions in the CLEANING AND CARE section.

---





Documents / Resources

<div>  Automatic espresso machine Q.5429 <ul style="list-style-type: none"><li>Machine à espresso automatique</li><li>Machine à espresso automatique</li><li>Machine à espresso de café espresso</li><li>Machine à espresso de café</li><li>Machine à espresso de café</li><li>Machine à espresso automatique</li><li>Machine à espresso automatique</li><li>Machine à espresso automatique</li></ul></div>	<p><a href="#">Qilive Q.5429 Automatic Espresso Machine</a> [pdf] User Manual</p> <p>Q.5429 Automatic Espresso Machine, Q.5429, Automatic Espresso Machine, Espresso Machine, Machine</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.