

# **Qlight SJ Cubic Stackable Warning Signal Lights User Manual**

Home » QLIGHT » Qlight SJ Cubic Stackable Warning Signal Lights User Manual

#### **Contents**

- 1 Qlight SJ Cubic Stackable Warning Signal Lights
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Precautions for Safety**
- **5 Product Specifications**
- **6 Dimensions**
- **7 Technical Certification**
- 8 Documents / Resources
  - 8.1 References



**Qlight SJ Cubic Stackable Warning Signal Lights** 



# **Product Information**

• Product Name: Cubic Stackable Warning/Signal Lights

• Model Numbers: SJ, SJP, SJL, SJLP

• Voltage Options: DC12V, DC24V, AC110V, AC220V - Bulb

• Specifications: 12V5W, 24V5W

• Certification: CE compliant for DC12V/24V models

• Weight Range: 0.63kg to 1.28kg

• Colour Options: Red, Green, Amber

# **Product Usage Instructions**

Before installation and operation, read the user manual carefully to ensure safe and correct use.

#### **Precautions for Safety:**

- Always turn off the power of the product during wiring or maintenance to avoid electric shock.
- Do not install the product in locations with excessive dust or water, unless specified by the IP protection.

#### **Precautions for Correct Use:**

Follow the proper instructions to prevent property damage, malfunction of the product, or voiding the warranty.

### **Ordering Specifications:**

- Model Number: Choose from SJ, SJP, SJL, or SJLP.
- Buzzer Option: Choose BZ for a model with a buzzer.
- Layer Option: Choose from 1, 2, or 3 layers.
- Voltage Option: Choose from DC12V, DC24V, AC110V, or AC220V.
- Color Option: Choose R for Red, A for Amber, or G for Green.

### **Product Specifications:**

Refer to the provided table for model-specific specifications such as current, bulb specifications, weight, and color options.

#### Wiring Instructions:

Follow the wiring diagram provided for your specific model (SJ/SJL-DC, SJ/SJL-AC, SJL(P)-DC, SJ(P)/SJL(P)-AC, SJ(P)/SJL(P)-DC with external contact, SJ(P)/SJL(P)-AC with external transistor-NPN, or SJ(P)/SJL(P)-AC with external transistor-PNP).

### Parts Definition/Installation/Light Function Selection:

- Refer to the provided diagram for parts definition and installation instructions for SJ/SJP and SJL/SJLP models.
- Choose the desired light function: L (steady) or LF (flashing).

### Mounting Hole Specifications/Bulb Replacement Instructions:

- Refer to the provided diagram for mounting hole specifications.
- Bulb replacement instructions are applicable only for SJ/SJP models.

For more detailed product information, please visit <u>www.qlight.com</u>.

Thank you for purchasing Qlight's products. Please read this user manual carefully before installation and operation to ensure safe and correct use. Precautions for

### **Precautions for Safety**

Failure to follow the instructions below may cause a loss of life or serious physical injury.

1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)


- 2. Do not install the product in locations that subject it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

### **Precautions for Correct Use**

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specifications.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

### **Ordering Specifications**

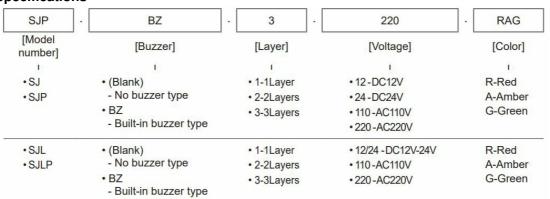

### **Product Specifications**

SJ/SJP

	Layer	Voltage	Current	Bulb specifications					
Model n umber				Volts/Wat ts	Configurati on	Part#	Certifica te	Weight	Colour
		DC12V	0.488A	12V5W		5			
SJ SJP	1	DC24V	0.310A	24V5W	T16x35 15 S	6		0.65kg	- R – Red
		AC110V	0.102A	12V5W		5		0.83kg	
		AC220V	0.051A	12V5W		5			
	2	DC12V	0.968A	12V5W		5		0.89kg	R – Red G – Gre en
		DC24V	0.620A	24V5W		6			
		AC110V	0.146A	12V5W		5		1.15kg	
		AC220V	0.073A	12V5W		5			
	3	DC12V	1.453A	12V5W		5		1.18kg	R – Red  A – Am ber G – Green
		DC24V	0.930A	24V5W		6			
		AC110V	0.191A	12V5W		5			
		AC220V	0.095A	12V5W		5		1.28kg	

• CE compliant: DC12V/24V


# SJL/ SJLP

Model number	Layer	Voltage	Current	Certificate	Weight	Colour	
		DC12V-24V	Max.0.185A		0.63kg		
	1	AC110V	0.065A		0.80kg	R – Red	
		AC220V	0.030A		0.80kg		
	2	DC12V-24V	Max.0.365A		0.76kg	R – Red G – Green	
		AC110V	0.080A		1.03kg		
		AC220V	0.040A	_	1.03kg		
SJL SJLP	3	DC12V-24V	MAx.0.545A		1.01kg	R – Red A -A mber	
		AC110V	0.095A		1.24kg		
		AC220V	0.045A		1.24kg	G – Green	

• Protection rating: IP44

• Ambient operating temperature : -20°C to +50°C

# **Dimensions**

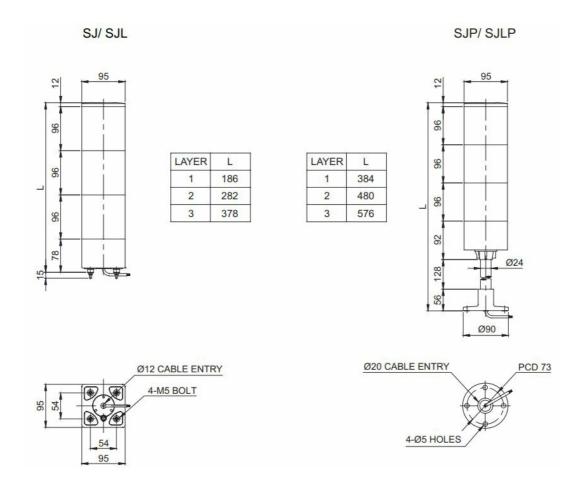


# Wiring Instructions

- SJL/ SJLP can be wired with either external contact or transistor.
- When using a transistor, please choose between the NPN transistor or PNP transistor which best matches the voltage and product type, then connect them correctly according to the wiring diagram below.


# SJ(P)/SJL(P)-DC

# SJ(P)/SJL(P)-AC

### **EXTERNAL CONTACT**

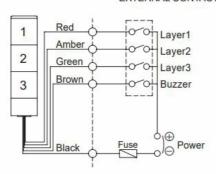


### **EXTERNAL CONTACT**

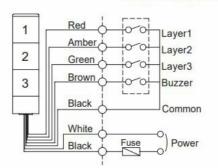


SJL(P)-DC






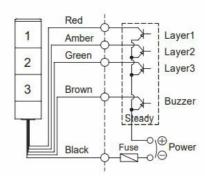

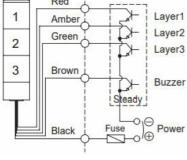

- External power line: UL1015 AWG18(0.75sq) × 2C 400mm
- External signal line: UL1007 AWG22(0.3sq) 400mm


# Parts Definition/Installation

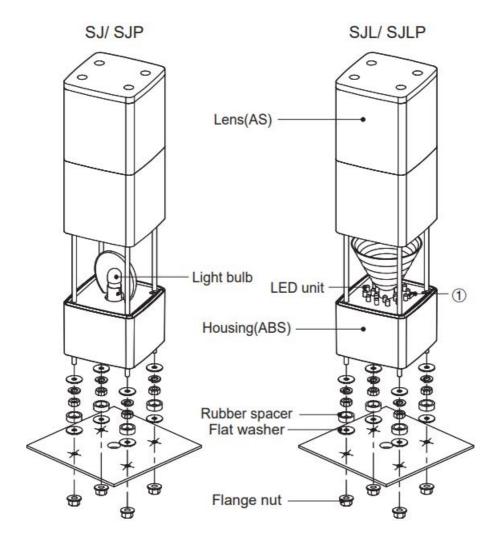

- First, remove the flange nuts from the bolts and place the product through the mounting surface holes.
- Fasten the flange nuts on the opposite side of the mounting surface until the product is tightened securely.

# **Light Function Selection**

• Please refer to the chart below to use the light function selection switch located inside the product.

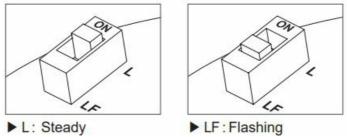


• The default function is set at steady LED. Select the desired function for your application during installation.


SJP/SJLP three(3) layers models supplied with not pre-assembled pole type to minimize package volume

### **Mounting Hole Specifications**

Machine holes on the mounting surface refer to the diagram below.

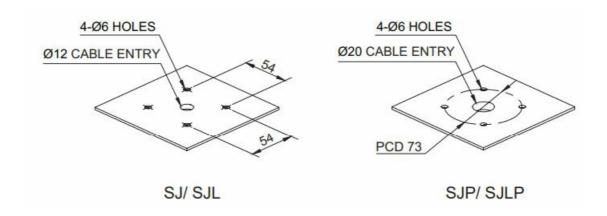

Bulb Replacement Instructions(SJ/SJP only)

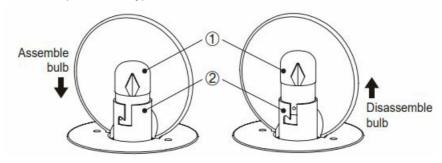

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- To dissemble the bulb, please push down the bulb(1) lightly and screw it counterclockwise.
- To put the bulb into the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

### **Installation Environment and Protection Rating**

- This product is designed for use with a protection rating of IP44.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP44), it may cause malfunction or damage to the product.
- In the case of outdoor applications, install the product in the upright position. Do not install the product in horizontal or upside-down positions where water can potentially penetrate the product and impact it's operation.
- For further information, please visit our website (www.qlight.com).

### **Technical Certification**

Qlight products are designed to meet strict quality and technical standards. Thus, the Qlight brand is widely recognized for its high quality and technical innovations from leading institutions around the world.



### For your safety

Specification and dimensions listed in this catalogue are subject to change without notice for product quality improvement. The newest product information is available on our website.(<a href="www.qlight.com">www.qlight.com</a>) Please read the instruction manual attached to the product carefully before installation and use.

- Qlight Co., Ltd. <u>www.qlight.com</u> <u>trade@qlight.com</u> Head Office Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154
- Factory 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea **Tel**. +82-55-328-1111(**Toll free**. +82-80-328-1111)
- Qlight OverSEAs Sales Dept 704 Nakdong-daero Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100
- Qlight Public Relations & Marketing Team Office 704 Nakdong-aero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017
- Qlight USA, Inc. <u>www.qlight.com</u> <u>www.qlightusa.com</u> <u>sales@qlightusa.com</u> 3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1 408 519 5740 Fax. +1 408 519 5739
- SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com qlightcn@qlight.com
- China Factory/ Shanghai Sales Office #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86 21 6651

- -7100 Fax. +86 21 6315 3929
- China Factory Site 2 (Qidong) #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong,
   Jiangsu Province, China Tel +86- 513- 8384- 9999 Fax +86- 513- 8384- 9910

Product Operation Inquiry / Customer Support +82-51-620-4100 You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

ALL PRODUCTS, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION DESIGN OR OTHERWISE.

**Head office**: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea ( **Postal Code**: 08507)

**Factory**: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (**Postal Code**: 50805)



Please scan the QR code for more detailed product information at www.qlight.com

## www.qlight.com

EN - SJ - 2106A

#### **Documents / Resources**



Qlight SJ Cubic Stackable Warning Signal Lights [pdf] User Manual SJ Cubic Stackable Warning Signal Lights, SJ, Cubic Stackable Warning Signal Lights, Stackable Warning Signal Lights, Warning Signal Lights

### References

- Q Qlight Warning Light, Beacon, Audible & Visual Signal, Tower Light
- Q (Qlighte) , ,
- Signal Tower Lights, Warning Lights & Electric Horns, Fully Enclosed Products, Explosion proof
  Products, LED Work Lights-Qlight

Manuals+