



Qlima SRE Series Portable Domestic Heater Instruction Manual

[Home](#) » [Qlima](#) » Qlima SRE Series Portable Domestic Heater Instruction Manual 

Qlima

Series Portable Domestic Heater
Instruction Manual



This product is not suitable for primary heating purposes

Contents

- 1 SRE Series Portable Domestic Heater
- 2 GENERAL DIRECTIONS FOR USE
- 3 WHAT YOU NEED TO KNOW IN ADVANCE
- 4 INSTALLING THE HEATER
- 5 L MAINTENANCE
- 6 SPECIFICATIONS
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

SRE Series Portable Domestic Heater

Dear Sir, or Madam,

Congratulations on your purchase of a portable domestic heater. You have purchased a quality product, which will serve you for many years to come. This, of course, provided you use the heater correctly. Please read these Directions for Use first, to ensure maximum life for your heater. Your heater comes with a 48-month manufacturer's warranty on all defects in materials or workmanship.

We wish you a warm and comfortable time with your heater.

Yours sincerely, PVG Holding b.v.

Customer Service Department

READ THE DIRECTIONS FOR USE FIRST.

IN CASE OF ANY DOUBT, CONTACT YOUR DEALER.

GENERAL DIRECTIONS FOR USE

Below you will find the main steps to be taken for using your heater. For more details, please refer to the MANUAL (pages 128 ff.).

1. Remove all packaging materials (refer to Section A, Fig. A).
2. Fill the removable tank 4 (refer to Section B, Fig. C-F).
3. Insert the plug into the wall socket.
4. Ignite the heater using the ON-OFF key 2020 (refer to Section D).
5. If required, change the temperature using the adjustment kS (refer to Section E).
6. Switch off the heater by pressing the ON-OFF key 2020.



As a fire precaution, the tank must be filled either when the heater has been switched off or in another room than the room where the heater is installed.

- Always ensure that the tank is closed properly after filling it at a safe distance from all sources of heat and open flames (see chapter B).
- The first time the heater is ignited it will smell like “new” for a short time.
- Store all fuel containers with their original caps and seals in a cool and dark place.
- Fuel ages. Use new fuel at the start of every heating season.
- The use of Qlima Premium Quality Fuels as a heating fuel assures you that you have good quality fuel.
- Before changing brands and/or types of fuel make sure that the mobile heater first completely empties all of the remaining fuel inside the heater.

MAIN COMPONENTS

| | |
|--|--|
| <ol style="list-style-type: none">1. Information display2. Operating keys3. Tank compartment lid4. Removable tank5. Metal cap6. Fuel filter7. Fixed tank8. Flame inspection9. window10. Hot air grille11 Air supply safety bracket | <ol style="list-style-type: none">12. Filter ventilator13. Plug14. Connecting lead15. Child safety catchy16. Green timer indicator17. Timer key18. Mode key19. Key to set temperature/time20. On/off key (red indicator on)21. SAVE key22. 3H OFF function |
|--|--|

WHAT YOU NEED TO KNOW IN ADVANCE

VENTILATE SUFFICIENTLY

Read this user manual carefully before using the appliance and keep it for future reference. Install this device only when it complies with local/national legislation, ordinances, and standards. This product is intended to be used as a heater in residential houses and is only suitable for use in dry locations, in normal household conditions, and indoors in the living room, kitchen and garage. Regardless of the model, you must always make sure that the heater is used in a room large enough to enable the heater to be used safely without extra ventilation. If the room is smaller than required, you must always open a door or window slightly (ensuring an opening of approx. 2.5 cm). It is important that every room where the heater is used has sufficient air intake and efficient air outflow (both openings must have a minimum cross-section of 50 cm²). No modifications to the safety system are allowed, as that will invalidate the guarantee that the air probe will work properly. Consult your dealer in case of doubt.

This product may not be used as a main heating device.

Especially for France: Your heater was designed to operate exclusively on fuel for liquid fuel-operated mobile heaters in accordance with the Decrees of 18-07-2002 and 25-06-2010. The use of other fuels is forbidden. Ask your dealer or check our website for the addresses of our retailers. The liquid fuel-operated mobile heater is intended as an extra heater, and not as a continuous source of heat.

Especially for the United Kingdom: Only use Class C1 paraffin fuel in accordance with BS2869; Part 2, or equivalent.

The user must comply with the following instructions for proper use:

DO NOT – use the liquid fuel-operated mobile heater in caravans, boats, and vehicle cabins;

– use the liquid fuel-operated mobile heater in insufficiently ventilated rooms (consult the table of properties for the minimum dimensions of the room to be heated), underground rooms, and/or at a height of over 1000 meters;


– modify the heater safety features. The use of this type of heating in public rooms is subject to prior regulatory permission. Obtain proper information on this in advance.

THE RIGHT FUEL


Your heater has been designed for use with high-quality water-free pure paraffin oil, such as Qlima Premium Quality Fuels. Only fuels of this kind will ensure clean and proper burning. Lower-quality fuel may result in:

- increased possibility of malfunctioning
- incomplete combustion
- reduced heater lifetime
- smoke and/or fumes
- deposits on the grid or mantle Using the right fuel is therefore essential for the safe, efficient, and comfortable use of your heater.

Damage and/or malfunctions of the heater due to the use of other than high-quality water-free pure paraffine oil is not covered by the warranty. Always refer to your local dealer for the right fuel for your heater.

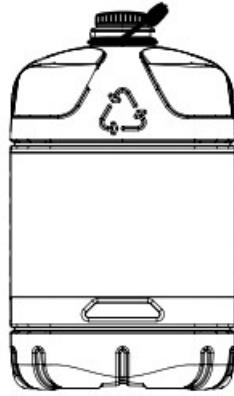



Only the use of the correct fuel will ensure the safe, efficient, and comfortable use of your heater.


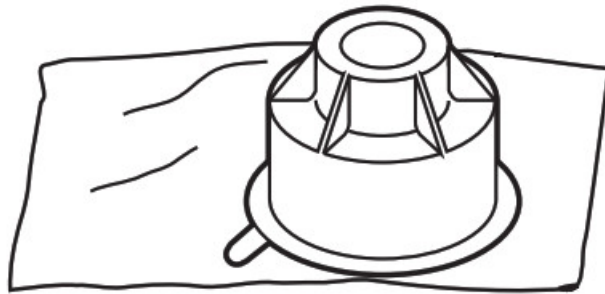




This transportation cap is packed separately in the box. Only this cap ensures troublefree transportation of the heater after use. Store it well!




MANUAL

 INSTALLING THE HEATER

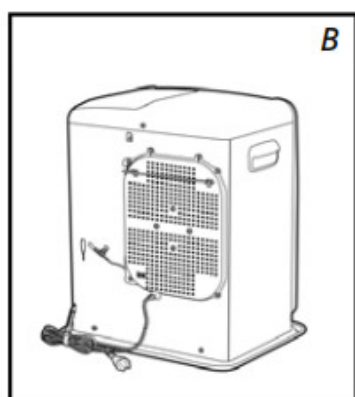
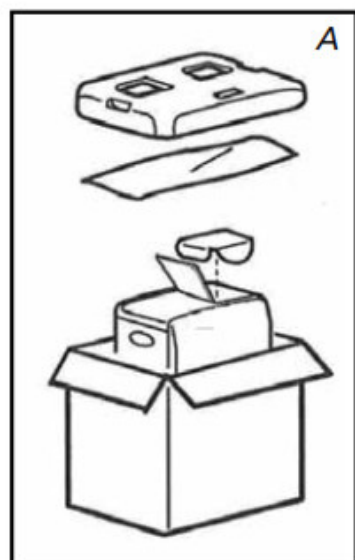


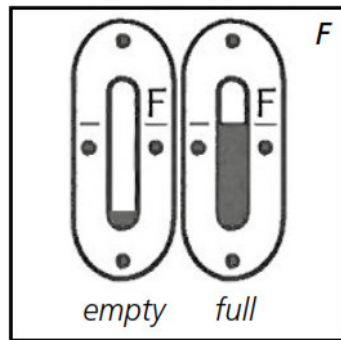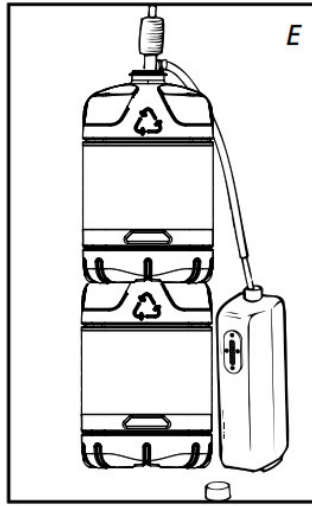

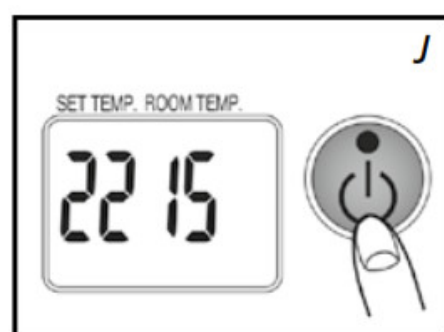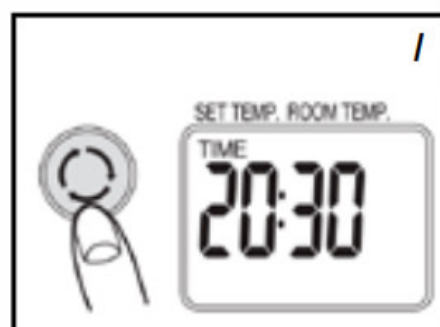


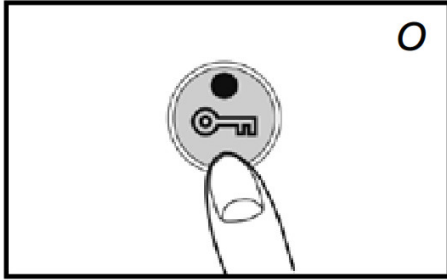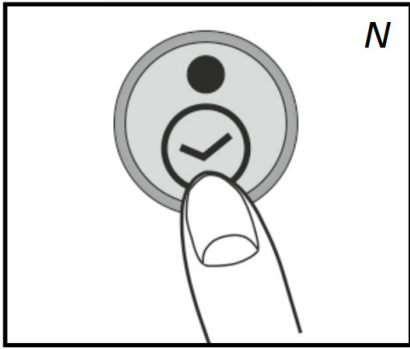

Fuel filter

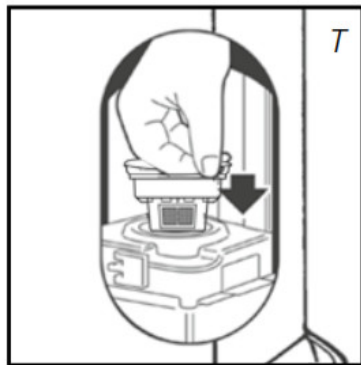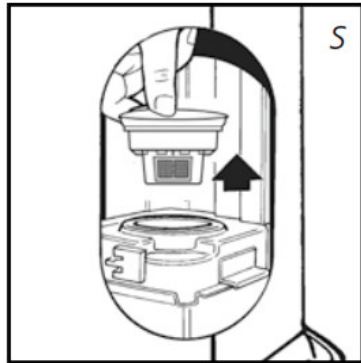

Tr

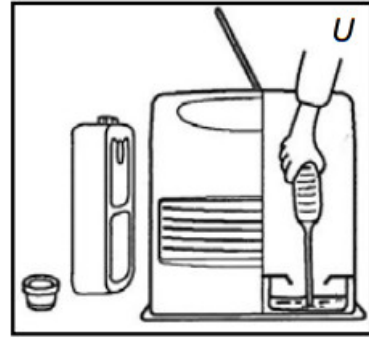

1. Carefully remove your heater from the box and check the contents. In addition to the heater you also need to have:
 - a manual fuel pump
 - a transportation cap
 - these directions for use Keep the box and the packaging materials (Fig. A) for storage and/or transportation.
2. Open the lid of tank compartment C and remove the piece of cardboard.
3. Fill the removable tank as indicated in Section B.
4. The floor should be firm and completely level. Reposition the heater, when it is not level. Do not try to correct the situation by placing books or other goods under the heater.
5. Use the horizontal safety bracket K to prevent the curtains from covering the ventilator (Fig. B.).
6. Insert plug M into the wall socket (230 Volts – AC / 50 Hz) and set the correct time using the adjustment keys S (refer to Section C).
7. Your heater is now ready for use.

B FILLING FUEL

Fill the removable tank in a suitable place since there can always be some spillage. Follow the procedure below:

1. Make sure that the heater is switched off.
2. Open the upper lid and lift the removable tank out of the heater (Fig. C). Note: Some drops may leak from the tank. Put down the removable tank (cap pointing upwards, handle it on the floor and take off the fuel cap.
3. Remove the metal cap. Easy to open by holding the outside (fig. D.).
4. Fill the removable tank using a fuel pump (refer to fuel pump operating instructions.) Make sure that it is in a higher position than the removable tank (Fig. E). Insert the ribbed hose into the opening of the removable tank.
5. Check the removable tank fuel gauge while filling the tank (Fig. F). Stop filling once the gauge indicates that the tank is full. Never overfill the tank, especially not when the fuel is very cold (fuel expands when it heats up).
6. Let the remaining fuel in the pump flow back into the jerrycan and
7. carefully check whether the fuel cap is straight and tightened properly. Reinstall the removable tank in the

heater (cap down). Close the lid.



- Do not move the heater after reinstalling the tank.

- Take care not to damage the cap while filling the tank. Deformation of the cap can lead to fuel leakage.

8. Turn the heater on again.

C SETTING THE TIME

Set the time to use the heater as a clock or if using the timer. You can even set the time when the heater is on.

1. Press the mode key R to set the time (fig. G). Time set and the time flash on the display.
2. Press the buttons (▼) or (▲) 1919 to set the time. The time displays the numbers 00:00 to 23:59. Press the (▲) button to go forwards and the (▼) button to go backward. The time will change in one-minute steps each time you press one of these 2 buttons. The time on the display will change in ten-minute steps if you keep the button pressed (fig. H.).
3. Press the mode key R again to activate the timer function. See chapter F.
4. Press the mode key R to display the time (fig. I.). If the time is not set, the display indicates.



The time must be set again after a power cut or if the plug has been removed from the socket.

D IGNITING THE HEATER



When used for the first time, a new heater may give out a smell for a short while. You should therefore provide extra ventilation.

Always ignite the heater with the ON / OFF button 2020. Never use matches or a cigarette lighter.

1. Press the ON / OFF button 2020. The ignition indicator will light up: the required temperature and the ambient temperature are displayed (fig. J.). The ambient temperature is displayed from 1°C. If the temperature is below 0°C, Lo is displayed. Ignition takes about 45 seconds.
2. **Normal combustion:**
 - The flames are blue
 - The burner grille can become red**Abnormal combustion:**
 - The flame is yellow and blue In this case take appropriate measures. This heater cannot be switched on continuously for more than 36 hours. After 36 hours it stops automatically, even if the tank has been refilled within this period.

E SETTING THE REQUIRED TEMPERATURE

If the heater is on, the required temperature can be changed using the adjustment buttons 2020 (fig. K). To increase the temperature, press the ▲ button. To decrease the temperature, press the ▼ button. Each time you press the adjustment button the temperature changes by 1°C. The temperature can be set to a minimum of 5°C and a maximum of 26°C.



- If the heater is used in a small space, in a well-insulated space or if the outside temperature is relatively high, the ambient temperature can become higher than the required temperature. In this case, turn the heater off.



- The displayed temperature is the mean ambient temperature. This temperature may not correspond with that indicated by a thermometer.

F USING THE TIMER

The timer allows you to switch on the heater automatically at a preset time. In order to switch on the timer, the correct time must have been set (refer to Section C) and the heater should be off. Follow the procedure below:

1. Check that the time is set properly (see chapter C).
2. Press the mode button R (fig. L) until Timer and Set appear in the display.
3. Press the (▼) or (▲) buttons S to set the required activation time for the heater. Press the (▲) button to go forwards and the (▼) button to go backward. The time will change in one-minute steps each time you press one of these 2 buttons. The time on the display will change in ten-minute steps if you keep the button pressed (fig. M).
4. Press the ON / OFF buttons 2020 to turn the heater on (the indicator will light up). It is not necessary to press this button if the heater is on.
5. Press the timer button Q. The indicator goes out. The time indicator will light up and the timer is set.



Take care not to press the ON / OFF button 2020 again after setting the timer, this will reset the timer.

6. The heater turns on at the time chosen.



- To cancel the timer, press the ON / OFF button 2020 (the timer indicator goes out).

- Set the timer and the clock again after a power cut.

- In case of an earthquake, or shocks, code E01 will appear in the display. Reset the error and repeat from point 4 to set the timer again.

3H OFF FUNCTION When the heater is working and button 2222 is pushed, the heater will switch off automatically after three hours of operation (after pushing the button). During the countdown period, this setting can be deactivated by pushing the button again. In the display, the status of this function is shown.

G TURNING THE HEATER OFF

1. Press the ON / OFF button 2020. The red lamp flashes for about 8 seconds and the heater is turned off. Always check that the flame goes out



The ventilator continues operating for about 3 minutes after turning off in order to cool the inside of the heater. If you turn off the power earlier, uncontrolled symptoms can occur (release of smoke, smell, etc.).

H IN CASE OF PROBLEMS

The symptoms mentioned above are not faults and are not abnormal. Check the list.

| | Symptoms | Causes |
|--------------------------------|--|---|
| While igniting | Igniting is tedious | Igniting takes about 45 seconds. After filling the tank, wait till the fuel has reached the fixed tank. Repeat ignition 2 or 3 times. |
| | Crackling sound | This sound is made by the electric ignition . |
| | White smoke | This can happen if the fuel does not circulate past the burner properly |
| During ignition or turning off | Smoke and an unpleasant smell during first use | That is the protective lacquer getting warm. This soon stops. Give the space more ventilation. |
| | The ambient temperature does not increase and the requested temperature is higher. | The space is too large. |
| | The flame glows red. | The ambient air is damp or salty or it contains too many input-cities. |
| | The ambient temperature does not decrease and the requested temperature is lower . | The heater is being used in a small insulated space or the outside temperature is relatively high. Turn the heater off. |
| | The displayed ambient temperature is not the same as indicated by a thermometer. | This is because the displayed ambient temperature is an indication of the average temperature of the space. |
| | Small knocking noises when the heater is in operation or immediately after turning off . | This is the sound of the metal expanding. |
| | Noise 8 seconds after turning off. | A ticking sound: can occur when the heater cools off. |

THE INFORMATION DISPLAY

The information display not only serves as an indicator of the (set) time and temperature (sections C, E, and F), but it also indicates any malfunctioning of the heater. The code on the information display tells you what is the matter:

| Code | Information | Action |
|---|---|---|
| Time | The heater has been automatically turned off by a power cut or bad connection. | Restore power or restore the connection. Press the ON / OFF key 20 again. |
| E01 | An earthquake (magnitude 5 or more), strong vibrations or a shock will ensure that the heater automatically turns off. (The safety system against shocks has worked). | Make sure there are no combustible materials around the heater or fuel leakages. Press the ON / OFF key 20 again. |
| E02 E03 | The heater has been automatically turned off after a fault or during ignition or due to the presence of water or dust in the fuel filter or in the fixed tank. | Remove the water and the dust in the fixed tank. Clean the fuel filter (see chapter L). Press the ON / OFF button 20 again. |
| E07 | An increase in ambient temperature has turned the heater off. (The temperature monitoring system has worked). | Ventilate the space. Let the heater cool off. Press the ON / OFF button 20 again. |
| Filter E09 | The heater has been automatically turned off because the hot air stream, the ventilator or the ventilator filter is blocked or hindered by something. (The safety system against overheating has worked). | Remove obstacles from the ventilator opening. Clean the ventilator filter (see chapter L) Press the ON/OFF button 20 again. If the problem occurs again after taking the above measures, contact your dealer. |
| 13 | The heater has been turned off in a closed space. (The safety system against incomplete combustion has worked). | Ventilate the space and press the ON / OFF button 20 again. Ensure the space is sufficiently ventilated. |
| The ON indicator flashes. Err lights up | The heater has automatically stopped because the ON / OFF button was kept pressed in or was blocked. | Remove obstacles around the buttons of the display panel. Press the ON/OFF button 20 again. |
| F00 – F30 | Poor functioning. Heater needs maintenance | Note the messages displayed and turn the heater off. Contact your dealer. |

| Symptoms | Causes | Measures to be taken |
|---|---|---|
| The heater doesn't ignite | The child safety catch lights up | Turn the child safety catch off |
| The fuel in- the indicator or lamp doesn't work | The tank is empty | Fill the tank |
| | The tank is deformed | Replace the tank |
| | Dirt particles dust or water on the filter and/or in the fixed tank | Clean the fixed tank and the fuel filter. |
| Power loss | The fuel indicator flashes | |
| | The fuel indicator flashes | Fill the tank |
| | Poor quality fuel has been used. | Remove the fuel from the two tanks, then rinse with the correct fuel. |
| Abnormal combustion | Poor quality fuel has been used. | |
| | Poor ventilation | Ventilate regularly |
| | Dust on the ventilator filter | Clean the ventilator filter |
| Unpleasant smells | A poor quality fuel has been used | Remove the fuel from the two tanks, then rinse with the correct fuel. |
| | No fuel in the tank | Fill the tank |
| | Fuel leakage or spilled fuel | Do not use any more and contact your dealer |
| Fuel leakage | Move the heater, the tank is not empty | |
| | Poor quality fuel has been used. | |

AUTOMATIC DEACTIVATION

This heater is fitted with a safety system that ensures that it switches off automatically after 36 hours of continuous operation. If desired, you can switch the heater on again by pressing the ON/OFF button 2020 (see section D).

CHILDPROOF LOCK

The childproof lock can be used to prevent children from accidentally changing the heater settings. When the heater is burning and the childproof lock is on, the heater can only be switched off. Other functions are blocked then. If the heater has already been switched off, the childproof lock also prevents accidental ignition of the heater. Activate the childproof lock by pressing the CHILD LOCK key O and holding it down for more than 3 seconds. The child lock indicator will appear on the information display (Fig. O), indicating that the childproof lock has been activated. Switch off the childproof lock by pressing the CHILD LOCK key O and holding it down for more than 3 seconds once again.

J THE CORRECT USE OF 'SAVE'

The 'SAVE' function allows you to limit the temperature. When this function is activated, the heater will automatically switch off, when the room temperature exceeds the set temperature by 3°C. Subsequently, when the room temperature has dropped again to the set temperature, the heater will automatically switch on again. Activate the 'SAVE' setting by pressing the appropriate 2121 key. The SAVE indicator light will light up. Switch off the function by pressing the SAVE key once again.



Without the 'SAVE' setting your heater will maintain the set temperature by approximation as well, by adjusting its heating capacity. 'SAVE' is an economy setting, which you can use when, for instance, you are not present in

the room or to keep it frost-free.

K THE 'OIL' INDICATOR

If the low fuel level indicator lights up in combination with a short tone, then the fuel tank is empty. The heater will automatically burn at its lowest setting for a period of about 80 minutes. The fuel tank must be replenished.

Remove the removable tank from the heater and fill it with new fuel (outside the living space in a safe place) (see chapter B). If you take no action, the fuel tank will be emptied and the display will indicate "E 03" (fig. Q). The heater is automatically turned off. To ignite the heater once more, fill the tank and wait a few minutes. Then press the ON / OFF button 2020.

L MAINTENANCE

Switch off the heater and let it cool down before you start any maintenance work. Also, disconnect the plug from the mains. Your heater needs hardly any maintenance. Clean the ventilator filter (Fig R).

Clean the fuel filter:

1. Remove the removable tank 4 from the heater and remove the fuel filter (Fig. S). Some drops may leak from the filter; keep a cloth at hand.
2. Remove the dirt by tapping the fuel filter upside-down against a hard surface. (Never clean it with water!)
3. Reinstall the fuel filter into the heater. We recommend that you remove dust and stains from time to time with a damp cloth, because otherwise, these may cause stains that are hard to remove.



Do not use solvents or alcohol to clean the heater: fire hazard. Clean very dirty components with a light synthetic cleaning agent.



Do not remove any heater components yourself. Always contact your dealer for repairs.



When the power cord is damaged, it may only be replaced by an authorized fitter. Use a new cord of the type H05 VV-F.

M STORAGE (END OF THE HEATING SEASON)

At the end of the heating season, you must store the heater in a dust-free place, if possible in its original packaging. Unused fuel cannot be used in the next heating season. We, therefore, recommend that you burn up all fuel. If there is still some fuel left, do not throw it away, but dispose of it in accordance with the local regulations for the disposal of domestic chemical waste. Always start the new heating season with fresh fuel. When you start re-using the heater follow the instructions again (starting from section A and as specified).

N TRANSPORTATION Take the following measures to avoid fuel leakage during the transportation of the heater:

1. Let the heater cool down.
2. Remove the removable tank 4 from the heater and remove the fuel filter. Some drops may leak from the filter; keep a cloth at hand. Store the fuel filter and the removable tank outside the heater.
3. Empty the fixed fuel tank (fig. U).
4. Place the transport cap.
5. Always move the heater in an upright position.



Make the fixed tank empty with a fuel pump before transportation or in case of wrong or dirty fuel. First, remove the fuel filter and then insert the fuel pump into the empty fixed tank. Follow the same procedure if the fuel tank contains water.

SPECIFICATIONS

| | SRE 3230 TC-2 | SRE 3531 TC-2 | SRE 3631 TC-2 |
|--|--------------------------------------|---------------|---------------|
| Ignition | electrical | | |
| Fuel | paraffin | | |
| Capacity (kW)* | 1.08 – 3.00 | 1.08 – 3.10 | 1.08 – 3.10 |
| Suitable space (m3)** | 48 – 120 | 50 – 120 | 50 – 120 |
| Fuel consumption (l/hr)* | 0.313 | 0.323 | 0.323 |
| Fuel consumption (g/hr)* | 250 | 258 | 258 |
| Burning time per tank (hr)* | 16 | 15.5 | 15.5 |
| Capacity removable tank (liters) | 5 | | |
| Weight (kg) | 7.7 | | |
| Dimensions (mm) (including the base plate) | width 371 | | |
| | depth 299 | | |
| | height 429 | | |
| Accessories | transportation cap, manual fuel pump | | |
| Mains | 230V – AC 50 Hz | | |
| Rated power consumption (at ignition / at operation) | 335 W / 250 W | | |
| Average power consumption (at operation) Min-Max | 78 W – 123 W | | |

* At maximum setting ** Specified values are indicative

The CE marking corresponds with compliance with the standards EN 60-335 part 1 (1995) and EN 50-165 (08/97)

P WARRANTY PROVISIONS

Your heater comes with a 48-month warranty starting on the date of purchase. Within this period all defects in material or workmanship will be repaired without any charge. Transportation costs and the risks involved during the transportation of the heater or heater components shall always be at the expense of the purchaser. The following provisions shall apply regarding this warranty:

1. We expressly dismiss all other claims for damages, including consequential damages.
2. Any repairs or replacements of components within the term of the warranty will not result in an extension of the term of the warranty.
3. The warranty shall no longer apply when the heater has been modified, non-original parts have been used, or when it is repaired by third parties.
4. The warranty shall not apply to parts that are subject to normal wear, such as the manual fuel pump and the vaporizer. See for the complete list of parts excluded from the warranty on Qlima.com/warranty.
5. The warranty shall only apply, when you present the original, dated proof of purchase, provided no changes

have been made to it.

6. The use of the correct fuel is crucial for the correct working of the heater. The warranty shall not apply to damages caused by actions not in compliance with the Directions for Use, neglect, and the use of an incorrect type of fuel, or fuel past its use-by date. The use of incorrect fuel can even be dangerous*, please refer to the chapter 'the right fuel'.

In order to avoid unnecessary costs, we recommend that you always read the 'Directions for Use' carefully first. In case they offer no solution, please take the heater to your dealer for repair.


* Highly inflammable substances may induce uncontrollable burning, causing flames to break out. Should this happen, never try to move the heater, but always switch off the heater immediately. In case of emergency you may use a fire extinguisher, but only a type B extinguisher: a carbon dioxide or powder extinguisher.



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of charge.

| Model | SRE 0 031 T C | E 262 6 C | SRE 2 929 C | RE 32 30 C- 2 | SRE 3 230 T C-2 | SRE 3 231 C -2 | SRE 3 330 C -2 | SRE 3 331 C -2 | RE 34 30 C- 2 | RE 35 31 C- 2 |
|---|---------------------|--------------|----------------|---------------------|-----------------------|----------------------|----------------------|----------------------|---------------------|---------------------|
| Brand | A | A | B | A | A | A | A | A | A | A |
| Energy Efficiency Cla ss | 88,9 | 87,6 | 88,6 | 88,6 | 88,6 | 88,6 | 88,6 | 88,6 | 88,6 | 88,6 |
| Energy Efficiency Ind ex | 3,1 | 1 2,6 | 2.9 | 3 | 3.1 | 3 | 3.1 | 3.1 | 3.3 | 3.4 |
| Direct heat output (k W) | N.A | N.A | N.A | N.A | N.A | N.A | N.A | N.A | N.A | N.A |
| Useful energy efficien cy at nominal heat ou tput (%) | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 |
| Useful energy efficien cy at minimum load (% | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 |

Comply with the warnings and instructions in the instruction manual.

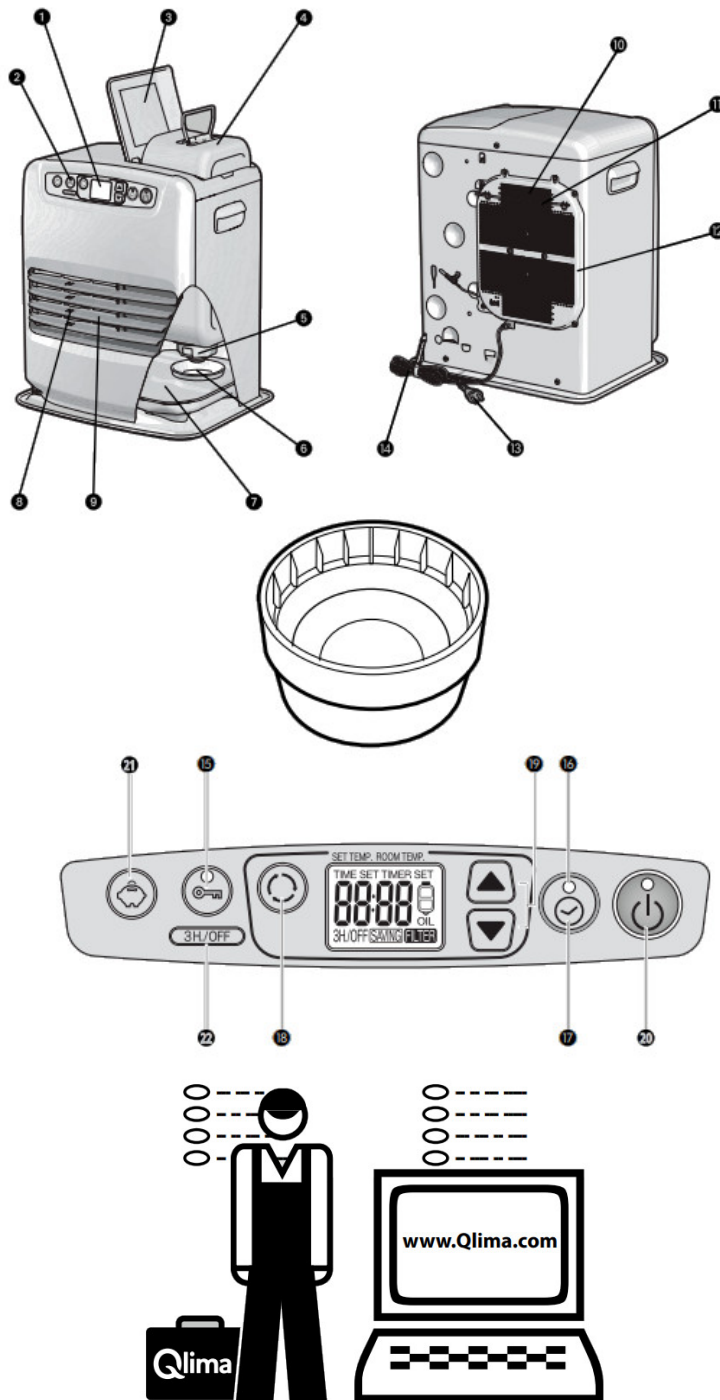

Distributed in Europe by PVG Holding B.V

If you need information or if you have a problem, please visit our website (www.qlima.com) or contact our sales support (T: +31 412 694694).

Qlima

PVG Holding BV

Kanaalstraat 12 C – 5347 KM Oss

The Netherlands P.O. Box 96 – 5340 AB Oss – the Netherlands

Documents / Resources



[Qlima SRE Series Portable Domestic Heater](#) [pdf] Instruction Manual
SRE3230TC-2, SRE3531TC-2, SRE3631TC-2, SRE Series Portable Domestic Heater, SRE Series, Portable Domestic Heater, Portable Heater, Domestic Heater, Heater

References

- [Q Qlima](#)
- [Q Qlima](#)
- [Q Qlima](#)
- [Q Qlima](#)
- [Q Qlima.fr | Home made climates](#)
- [Q Qlima](#)
- [Q Qlima, dé klimaatspecialist | Comfort in en om het huis](#)
- [Q Qlima](#)