

Contents [[hide](#)]

- [1 Qoltec 50628 Electronic Timer](#)
- [2 Specifications](#)
- [3 BASIC HAZARDS AND PRECAUTIONS](#)
- [4 SPECIFIC HAZARDS OF USE](#)
- [5 MAINTENANCE PRECAUTIONS](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Qoltec®

Qoltec 50628 Electronic Timer



Specifications

- **Manufacturer:** NTEC sp. z o.o.

- **Certification:** CE certified
- **Compliance:** EU safety standards

SAFETY WARNINGS FOR USE OF ELECTRONIC TIMER

The following list of safety warnings has been compiled by the requirements of the General Product Safety Regulation (EU) 2023/988 (GPSR). Its purpose is to protect users from potential hazards arising from the misuse of products. The warnings have been formulated simply and understandably to be accessible to a wide audience, including the elderly and people with reduced mobility. Electronic timers offered by the manufacturer NTEC sp. z o.o. are CE certified, which proves their compliance with EU safety standards. Use the electronic timer according to its intended use and the manufacturer's recommendations.

BASIC HAZARDS AND PRECAUTIONS

Electrical risks

- Possibility of electric shock from touching uninsulated internal components during unauthorised opening of the unit.
- The lack of a suitable earthing connection in the socket to which the programmer is connected can lead to dangerous situations in the event of a fault.
- Damage to the plug or socket can increase the risk of a short circuit or electric shock.

Risk of overloading

- Connecting appliances with a power exceeding the maximum current supported by the programmer can lead to damage, overheating, and, in extreme cases, fire.
- The use of a programmer with non-compliant devices may affect operational stability and safety.

Risk of overheating

- Placing the programmer in a socket located in an enclosed space (e.g., behind furniture) or exposed to restricted airflow can lead to overheating.
- Using the programmer in areas with high temperatures (e.g., close to radiators,

cookers) may cause the unit to overheat.

SPECIFIC HAZARDS OF USE

Risks arising from improper use

- Risks arising from improper use
- Incorrect time settings can lead to malfunctioning of connected appliances (e.g, their unexpected switching on or off).
- Failure to follow the operating instructions may result in configuration errors that could affect the safety or functionality of the device.
- Attempting to connect appliances with parameters that exceed the capabilities of the programmer (e.g., large household appliances) may lead to damage to the programmer.

Risks related to environmental conditions

- Using the programmer outside the operating temperature range (e.g., in unheated rooms in winter or areas exposed to high temperatures) may affect its accuracy and durability.
- Installation in damp environments (e.g., bathrooms, kitchens without adequate ventilation) can lead to short circuits and damage to the unit.
- Exposing the programmer to sunlight (e.g, near windows) can lead to damage to the housing and overheating.

Risk of damage to the device

- Dropping the programmer or exposing it to strong shocks during use or transport can affect its accuracy and functionality.
- Storing the programmer in areas exposed to moisture, dust, or extreme temperatures can lead to damage.

MAINTENANCE PRECAUTIONS

Cleaning

- Cleaning the programmer with chemicals, water, or damp cloths can lead to damage to the housing or electronic components.

Maintenance of the device

- Attempting to open the unit yourself for repair may lead to damage to the unit, loss of warranty, and risk of electric shock.
- If you find a malfunction, contact an authorised service centre – do not attempt to disassemble or repair the unit yourself.

ADDITIONAL WARNINGS

Child endangerment

- Placing the programmer in a socket that is easily accessible to children may lead to a risk of playing with the device, which may result in damage or dangerous operation.
- Storing the programmer in a place where children can easily reach it increases the risk of accidents.

Avoid modifications

- Do not attempt to modify or repair the unit yourself. In case of problems, contact the manufacturer or its authorised service centre.

Action in the event of an emergency

- If the unit exhibits abnormal operation, such as overheating, sparking, unusual odour or noises, immediately switch it off and disconnect it from the power supply, and then contact the service centre.
- If you observe any unsafe product behaviour, contact the manufacturer urgently.

THE IMPORTANCE OF COMPLYING WITH THE WARNINGS

Following the above warnings minimises the risk of personal injury, equipment failure, and property damage. Ignoring the recommendations can lead to serious health and material risks. Keep yourself and your loved ones safe by observing the precautions indicated.

- **Address:** NTEC sp. z o.o. 44B Chorzowska Street 44-100 Gliwice PO
- **Website:** info@qoltec.com
- **tel:** +48 32 600 79 89

FAQs


Q: Can I repair the electronic timer myself if it malfunctions?

A: No, attempting to repair the unit yourself may lead to further damage, loss of warranty, and risk of electric shock. Contact an authorized service center for repairs.

Q: What should I do if I accidentally drop the electronic timer?

A: If you drop the timer, check for any visible damage. If unsure, contact the manufacturer or an authorized service center for inspection.

Documents / Resources

	<p>Qoltec 50628 Electronic Timer [pdf] Instruction Manual</p> <p>50628, 50628 Electronic Timer, 50628, Electronic Timer</p>
---	---

References

- [User Manual](#)

📎 50628, 50628 Electronic Timer, Electronic Timer,

📁 Qoltec Qoltec

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.