



# QOMO QCamera Flip Portable Document Camera User Manual

[Home](#) » [QOMO](#) » QOMO QCamera Flip Portable Document Camera User Manual 



## Flip Portable Document Camera User Manual

### For Mac OS

Information in this manual is subject to change without notice

#### Contents

- [1 Software Download](#)
- [2 Software Operation](#)
- [3 Main function introduction](#)
- [4 Troubleshooting](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

### Software Download

Search for Qomo QCamera in the Mac App Store and download.  
OR Go to [www.qomo.com/QCamera](http://www.qomo.com/QCamera)

### Software Operation

The software consists of two parts:









- Camera Display Area
- Toolbar


















### 1. Camera Display Area


The default camera will be displayed in this area and can be edited using tools in the toolbar.

### 2. Toolbar



Icon	Menu		Description
	About		Check software version and related QOMO information
	Language		Set Chinese/English
	Exit		Exit software
	Minimize		Minimize the software
	Move		Selection tool

	<b>Annotate</b>	Annotate/ Select pen color and thickness	
	<b>Eraser</b>		Erase annotation
	<b>Clear</b>		Clear annotation
	<b>Full-Screen Capture</b>		Screenshot
	<b>RegionCapture</b>		Screen snip
	<b>Photograph</b>	Take photo	
	<b>Record Screen</b>		Record the whole screen
	<b>Record Camera</b>		Record live video
	<b>Zoom In/Out</b>	Zoom In/Out	
	<b>Freeze</b>	Freeze image	
	<b>Rotation</b>	0°/90°/180°/270° rotation	
	<b>Mirror</b>	Mirror image	
	<b>Adjust</b>	Adjust the brightness, contrast, saturation, focus, and focal length	
	<b>Camera</b>	Choose camera and resolution	
	<b>View files</b>	View photos and videos or open local files	


	<b>Split</b>	Split the screen into two vertical parts for comparing the live image with the captured picture
--	--------------	---

 
#### Note:

1. Recording, zoom, freeze, rotate, mirror, adjust, and split features are only available when document the camera is connected.
2. When the freeze is selected, zoom, rotate, mirror, and adjust are not available.




## Main function introduction


### 3.1 Annotate

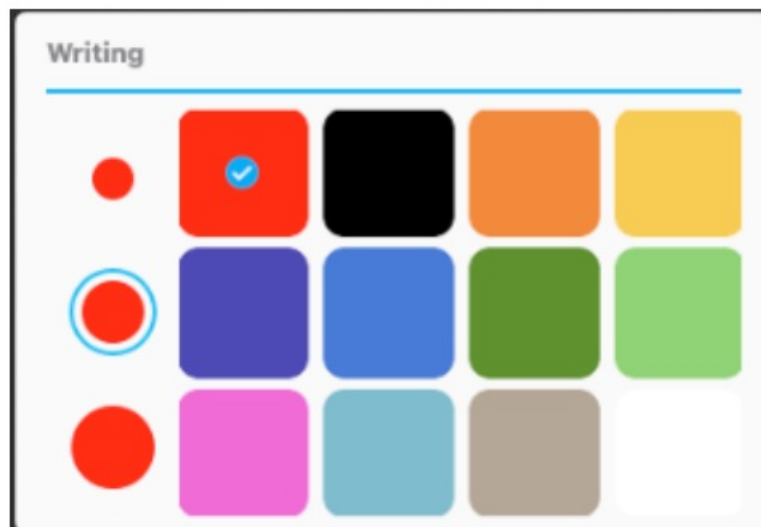Click  icon to annotate over the live image. Pen thickness and color can be changed by clicking on the icon. Note the default color is red.




### 3.2 Pixel Eraser

 
Click  →  →  to erase the annotation. Move the Horizontal bar to adjust the eraser size. Select



to clear all annotation at once.

### 3.3 Capture

 
 
Click  to capture your screen fully or partially.

Full-screen capture: Click  the full screen will be captured and saved locally.

Region capture Click,  to capture the selected region, and click  to save the capt



### 3.4 Record

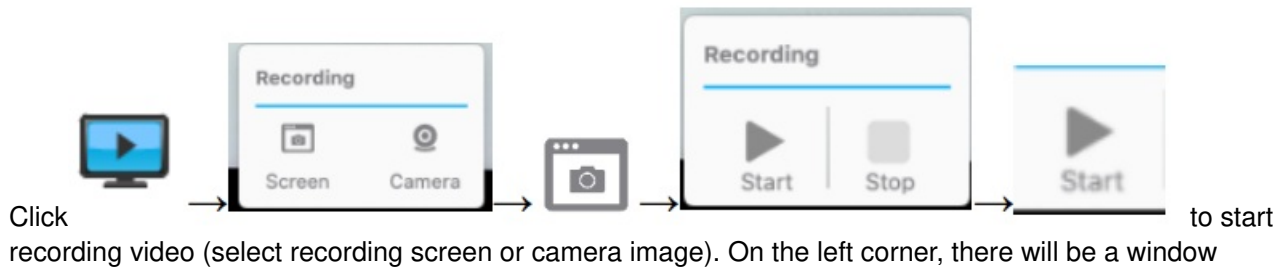


to show recording time, pause, or stop recording. The video will be saved locally. You can open it through your file explorer or from the software.

### 3.5 Freeze



 Click the icon to freeze the live image. The icon will become blue. Click it again to unfreeze.

### 3.6 Camera

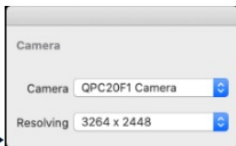


Click and choose the appropriate camera and resolution.

Note Software will save the last resolution chosen.

## Troubleshooting

Troubles	Cause	Solution
No image	Poor connection	Check if the USB power cable is connected and the LED light is illuminated.
Poor focus	1. Not enough light or too much light or 2. Object beyond a focus 3. Dirt on the camera lens	1. Turn on/off Lamp Light and move the camera slightly to refocus. 2. Use a cloth to clean the camera lens
No video is shown after the application starts or after the device is selected	Document Camera is being used in another program	Re-connect the USB and choose the device Restart software Close other software device is being used in
The video is not smooth	Computer configuration might be low	Change the Camera to lower definition
Blur image	Focus is in manual mode	Change to auto mode in the Focus Menu

## Documents / Resources

 <p>QCAMERA User Manual For Mac OS</p>	<p><a href="#">QOMO QCamera Flip Portable Document Camera</a> [pdf] User Manual</p> <p>QCamera, Flip Portable Document Camera, QCamera Flip Portable Document Camera, Portable Document Camera, Document Camera, Camera</p>
--	---

## References

-  [QCamera](#) | [Document Camera Software](#) | [QOMO](#)