

QOMO QCamera For Chrome OS User Manual

Home » QOMO » QOMO QCamera For Chrome OS User Manual



Contents

- 1 QOMO QCamera For Chrome
- **2 Software Download**
- **3 Software Operation**
- **4 Main Features**
- **5 Troubleshooting**
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



QOMO QCamera For Chrome



Software Download

Search for QCamera in the Google Play Store and download. Or go to www.qomo.com/QCamera

Software Operation

The software consists of two parts:


- Camera Display Area
- Toolbar



Camera Display Area

The default camera will be displayed in this area and can be edited on using tools in the toolbar.

Toolbar

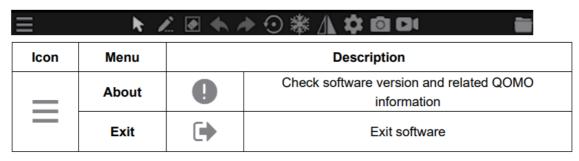

k	Move	Selection tool	
<i>I</i>	Annotate	Annotate/Select pen color and thickness	
•	Pixel Eraser		Erase annotation
	Object Eraser		Erase Object
	Clear all	Slide to clear all	
4	undo	Undo the last action	
*	redo	Redo the last action	
•	Rotation	0°/90°/180°/270° rotation	
**	Freeze	Freeze image	
	Mirror	Mirror image	
\$	Setting	Choose device, resolution, and zoom size	
0	capture	Capture live image	
	record	Record live video	
	files	View photos and videos	

Main Features

Annotaate

Click icon to annotate over the live image. Pen thickness and color can be changed by clicking on the icon. Note the default color is red.

 


Pixel Eraser

Click



Capture



Record

 
Click icon to start recording video. The recording time will be displayed on the left side of the toolbar, click on the right side to stop recording.




The video will be saved in local catalog of Video. It can be opened through the view file function on the right side of the toolbar.

Note: During recording, the setting, capture and files features are not available.

Freeze



Settings

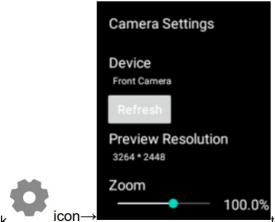

to select appropriate camera, resolution, and Zoom.

Note: Software will save the last resolution chosen.

Troubleshooting

Troubles	Cause	Solution
No image	Poor connection	Check if the USB power cable is connected and the LED light is illuminated.
Poor focus	 Not enough light or too much light or Object beyond focus Dirt on camera lens 	 Turn on/off Lamp Light move camera slightly to refocus Use cloth to clean the camera lens
		Re-connect the USB and choose the device
No video shown after appli cation starts or after the de vice is selected	Document Camera is being used in anot her program	Restart software
	p. 23. d	Close other software using camera
Video is not smooth	Computer configuration might be low	Change the Camera to lower definition

Documents / Resources



References

QCamera | Document Camera Software | QOMO

Manuals+,