

## QSTARZ LT-8000S GPS Lap Timer



# QSTARZ LT-8000S GPS Lap Timer User Guide

[Home](#) » [QSTARZ](#) » QSTARZ LT-8000S GPS Lap Timer User Guide 

### Contents

- 1 QSTARZ LT-8000S GPS Lap Timer
- 2 The functions of the Buttons
- 3 Quick Mount and holders (Optional accessories)
- 4 Technical Specifications
- 5 Documents / Resources
  - 5.1 References
- 6 Related Posts



## QSTARZ LT-8000S GPS Lap Timer



- **LT-8000S:** 25Hz GPS Lap Timer Supreme edition, a stand-alone, valuable, and reliable timing device.
- **LT-8000GT:** 25Hz GPS Lap Timer Wireless edition featuring with Bluetooth & Wi-Fi for diversified wireless connectivity. All-In-One.

What's in the **box**?



Qstarz  
GPS Lap Timer

 


USB Type-C  
cable



Quick Start  
Guide

## OPTIONAL ACCESSORIES

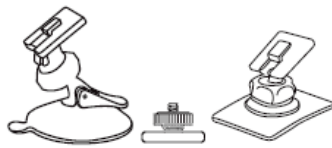


Car Holder or  
Motorbike Holder Kit



Jelly Case

## The functions of the Buttons

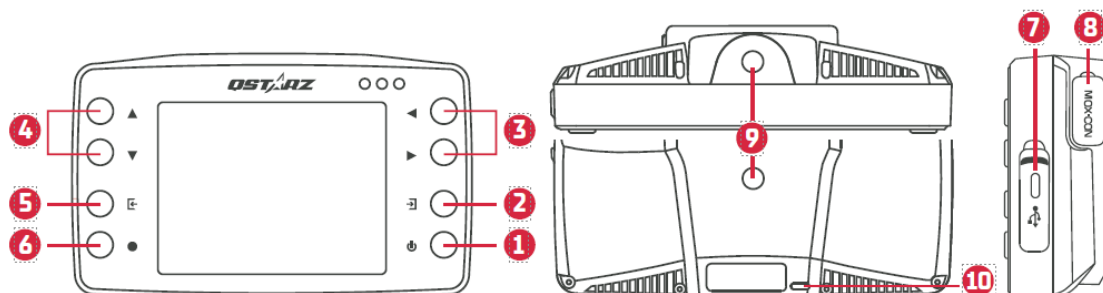 


1. **Power Key:** Press to back to home menu. Hold 3 secs to power on/off GPS Lap Timer.
2. **Enter Key:** To enter/confirm the selected option.
3. **Arrow Keys:** Use to move up, down, left, or right on the screen.
4. **Arrow Keys:** Use to move up, down, left, or right on the screen.
5. **Return / Cancel Key:** Cancel the selected function or return to previous page.
6. **Race Key:** Press this button to start the RACE recording.
7. **Type C USB connection:** For charging and data transfer to QRacing PC. Device Reset/Restart key. Insert a pin to power off the device (Inside the protection cover).
8. **External GPS MCX jack:** Located inside the protection cover.
9. **1/4 inch screw hole:** One on the back and the other one on the bottom of the device, which is for connecting to Quick Mount with Vehicle holder.
10. **Lanyard Hole:** Located on the bottom of back side.

## Charging for your GPS Lap Timer

 LT-8000S / LT-8000GT is with built-in lithium battery. Please use the USB-Type C cable for charging with compatible USB adapter. ( Some fast charging PD adapter might not be compatible for LT-8000S / LT-8000GT )

**NOTE:** It takes 4 hours charging time when the power of your lap timer is off. Fully charged battery of your lap timer would be used at least 14 hours continuously.

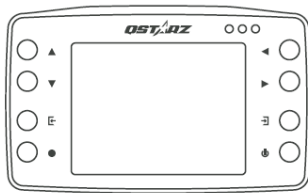

- Orange LED light is ON: Device battery is charging.
- Green LED is ON: Device battery is full.


### Important Notice:

 Battery life depends on the usage period and other condition such as temperature, or GPS signal. The usage time of the device might be less than the specification.

### Quick Mount and holders (Optional accessories)

There are two 1/4 inches screw holes on the lap timer. Qstarz offers the optional accessories for car and motorcycle. You can use the optional Qstarz quick mount / vehicle holder, or find the standard 1/4 inches screw holders for your lap timer.

Quick mount is easy to install for your lap timer.

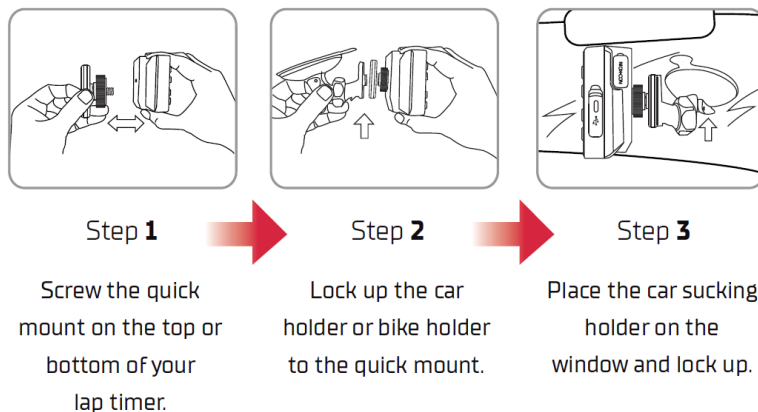


### Mount GPS Lap Timer / GPS external Antenna


For the best GPS signal performance, please place the device straight up and the upper of the device face up to the sky. Some electrical devices and window tint might interfere the GPS signal.

Suggest to place your device as below:

 
#### Vehicle

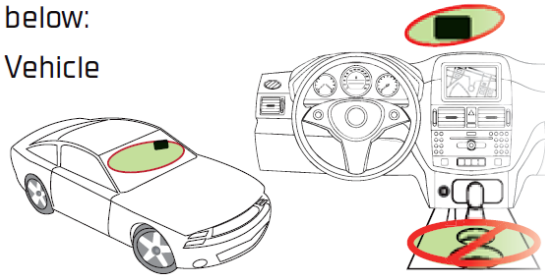

#### Motorbike

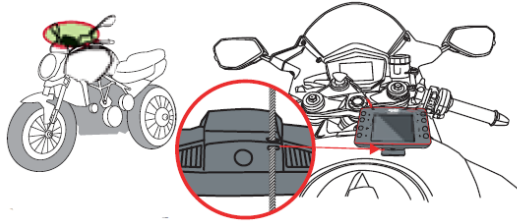 


 LT-8000S / LT-8000GT is already built-in extreme high frequency GPS antenna. In some conditions that the GPS signal of device might be weak or obstructed. Using external antenna would be improved the GPS signal receiving.

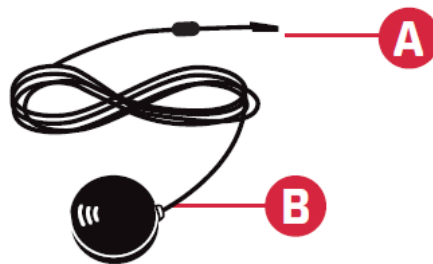


- **A.** MCX connector to GPS lap timer
- **B.** GPS magnet receiver. It can be located on the car roof or iron metal

#### Circuit Race Mode

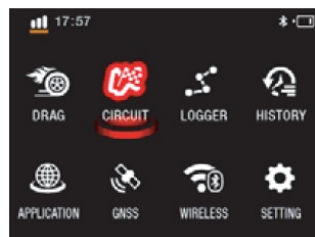 

[Wireless mode for LT-8000GT]

 
Use the **arrow key** to select  
Circuit Race Mode.

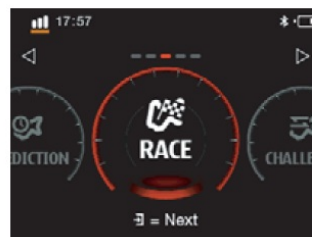


Select a Mode from the Quick  
Menu.



 
After GPS position is fixed,  
select one of the nearby circuits.

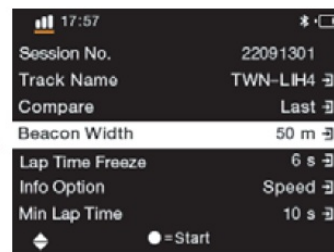

Adjust the other settings.

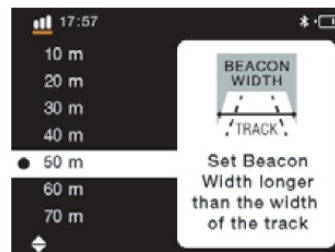 


 Adjust the appropriate Beacon  
width with longer than the width  
of the track.

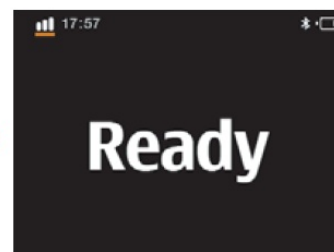


Press the Race button to start  
laptiming. You can start when  
the screen showing "Ready"


## Drag Race Mode

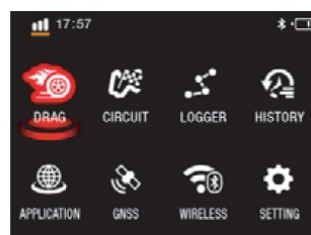 

 
(Wireless mode for LT-8000GT)  
Use the **arrow key** to select  
Drag Race Mode.

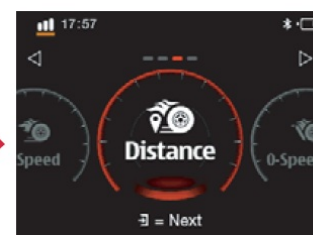

 Select different Drag mode by  
different conditions.

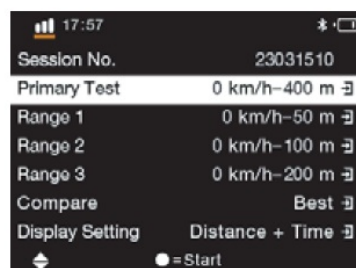

 Compare by different  
customized settings.

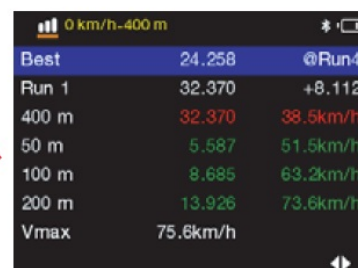

Review the Drag results after  
each run.

## NOTE:

For the better performance of your Qstarz experience, please update to the latest version of your Qstarz software and firmware. LT-8000S/ LT-8000GT is a GPS data logger device which using outdoor for the best GPS signal. GPS satellite signal would be obstructed by solid substance such as bridge, building, tunnel, and trees. Some window tint would obstruct the GPS signal. If your lap timer is not able to auto-recognize the track you go, please update to the latest trackmap version. You can setup a custom track, or

contact us to request new track by email ([info@qstarz.com](mailto:info@qstarz.com)). LT-8000S / LT-8000GT's Regulatory information is shown on Setting > Regulatory Information.

### **QRacing Mobile App ( Support LT-8000GT only )**



QRacing



App Store



Google Play

Please download QRacing app from iOS App Store or Google Play. QRacing APP is an analysis application for motorsport. With racing GPS data, you can review and share the synced video.

#### **NOTE:**

- Check the supported versions of your device from Qstarz website.
- Download App and activate your QRacing account with internet connected.

### **Connect LT-8000GT to QRacing App**

1. The Bluetooth is enabled while your LT-8000GT is power on.
2. Turn on the Bluetooth function on your smartphone and start your QRacing App.
3. Connect LT-8000GT device to your QRacing account after downloaded and registered the QRacing APP.
4. Bind the serial number of your LT-8000GT to your QRacing account by tapping "Connect" on Racer or Go page to Add Qstarz device.

#### **NOTE:**

- LT-8000GT can do lap timing stand-alone without internet.
- LT-8000GT can be connected to QRacing app by Bluetooth and doing lap timing at the same time when internet connected.

### **Use Wi-Fi for LT-8000GT**

#### **Sessions uploads to your QRacing account:**

1. Select "WIRELESS" > Wi-Fi > "ON" to turn on the Wi-Fi wireless function on LT-8000GT.
2. Select Wi-Fi information and confirm the SSID and Password.
3. Open QRacing App and connect Wi-Fi network to your QRacing account by tapping Racer > Connect > Wi-Fi Network
4. Enter the SSID and Password. Select "Join" then finished the connection.
5. Go to "History"> tap Download and select the sessions to upload.

#### **Lap timer updates:**

1. Tap Connect > Wi-Fi network > LT-8000GT SSID to check or update to the latest version when LT-8000GT Wi-Fi is turned on.

**NOTE:**

- When Wi-Fi ON, some functions of LT-8000GT might not be used. Please TURN OFF Wi-Fi connection to keep using lap-timing functions.
- During Wi-Fi transferring, DO NOT turn off Wi-Fi otherwise it might cause the data loss or damage.
- Wi-Fi function is not for surfing internet.

**QRacing PC analysis software**

QRacing PC software is developed for motorsport advanced analysis. You can analyze the acceleration/ brake point, speed, and position to improve the driving performance.

- Advanced analyze session records
- Auto update Device Trackmap/Firmware, and QRacing PC software
- Support exporting RCN / KML / GPX / CSV/VBO files
- Support download session data via USB or Wi-Fi (Wi-Fi for LT-8000GT only)



**How to get the Software key for QRacing PC Analysis software**

Register your own account from QRacing Web online. You will get a new QRacing software key with your personal account. (<https://qws.qstarz.com>)

Scan the QR code to read the registration instruction.



**Download data to QRacing PC from LT-8000S / LT-8000GT**

Download the latest QRacing PC analysis software from Qstarz website.

 
<http://racing.qstarz.com/Products/Gracing/QRacing-History.html>

(Note: Must enter the QRacing software Key for the first time)

Power off your LT-8000GT, and use Qstarz USB Type-C cable to connect your device to the computer. During data is transferring, please DO NOT remove the USB cable. It might cause the files damage or lost. LT-8000GT additionally support download data via Wi-Fi to QRacing software.

**NOTE:**

- QRacing PC software can only be installed within Microsoft Windows system.
- For more details please refer to QRacing Manual. Help > Users Manual.

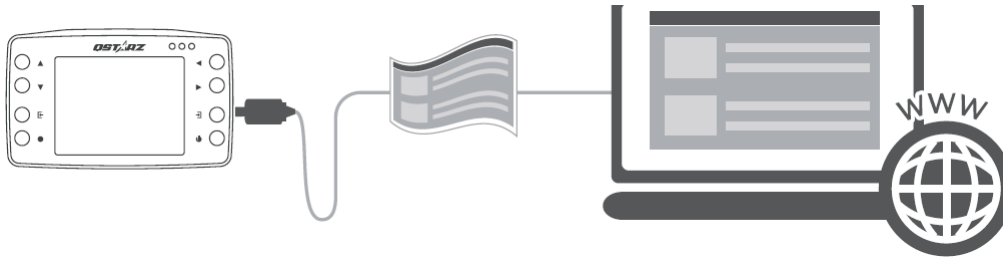

## Technical Specifications

- **Model:** LT-8000S / LT – 8000GT
- **GNSS:** 25Hz GPS / GLONASS / Galileo / Beidou / QZSS
- **Display:** 3.2" Color LCD (320x240px)
- **Wireless:** Bluetooth LE 5.0 + Wi-Fi 2.4 GHz(Support LT-8000GT only)
- **Memory:** 8 GB
- **Battery type and life:** Rechargeable, lithium-ion, Up to 14 hours
- **Sensor:** Accelerometer and Gyroscope
- **Antenna:** Built-in and external MCX plug
- **Charging port:** USB Type C
- **Input:** DC 5V, 750 mA
- **Water rating:** IPX7 water resistant
- **Dimension and weight:** 11.7 x 7.2 x 3.1 cm, 158 grams
- **Operating/Charging temperature:** – 10 to 60 °C / 0 to 45 °C

## Product Safety Notice

- High-temperature conditions might cause your device to change its behavior to regulate its temperature. Using your device in very hot conditions can permanently shorten battery life and cause damage.
- For safety purpose, please do not place your device might obstruct while driving / riding.
- Do NOT take apart the device otherwise the warranty would be invalidated.

## Access to the latest download resources for your device.

LT-8000S



[http://racing.qstarz.com/Download/Download\\_Index/Download\\_Index\\_LT-8000S.HTML](http://racing.qstarz.com/Download/Download_Index/Download_Index_LT-8000S.HTML)

LT-8000GT



[http://racing.qstarz.com/Download/Download\\_Index/Download\\_Index\\_LT-8000GT.HTML](http://racing.qstarz.com/Download/Download_Index/Download_Index_LT-8000GT.HTML)

## Federal Communications Commission Interference Statement



## **FCC For Class B device:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

**CAUTION:** Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

## **LT-8000GT RF Exposure warning**

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance. To comply with RF exposure compliance requirements, the device should be used as described in the manual. The device should not be used in other configurations.

## **Declaration of Conformity (RE Directive 2014/53/EU) EU DECLARATION OF CONFORMITY**

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

Hereby, Qstarz International Co., Ltd. address at 6F-2, No. 160, Ming Chuan E. Rd, Sec. 6, Taipei, Taiwan, declares that the radio equipment type LT-8000S or LT-8000GT GPS Lap timer is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<http://racing.qstarz.com/Download.html>

## **CE RF exposure**

### **RF Exposure information**

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. When use is prohibited, such as while traveling in aircraft, or when asked to do so by authorities, power off LT-8000GT to turn off the device's wireless transmitters.

Android™ is a registered trademark of Google Inc. Apple® is a trademark of Apple Inc., registered in the United States and other countries. The Bluetooth® word and trademarks are owned by the Bluetooth SIG Inc. Wi-Fi® is a registered trademark of Wi-Fi® Alliance. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are trademarks of their respective owners.

 
## **QSTARZ INTERNATIONAL CO., LTD.**

6F-2, No. 160, Ming Chuan E. Rd., Sec. 6,

Taipei 114, Taiwan, R.O.C.

**TEL / +886-2-2792-0061**

## Documents / Resources

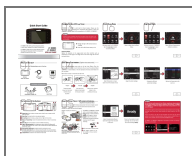

[QSTARZ LT-8000S GPS Lap Timer](#) [pdf] User Guide  
LT 8000S GPS Lap Timer, LT 8000S, GPS Lap Timer, Lap Timer, Timer

## References

- [QWS - Landing](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.