



Qualori Q800 Portable CD Player with Speakers User Manual

[Home](#) » [Qualori](#) » Qualori Q800 Portable CD Player with Speakers User Manual 


Qualori

Portable CD player boombox with
Bluetooth/FM Radio/Sleep
User Manual

Contents

- [1 Q800 Portable CD Player with Speakers](#)
- [2 Gentle Reminder](#)
- [3 Product Specifications](#)
- [4 CD Player Description](#)
- [5 Remote control function](#)
- [6 Bluetooth transmit mode](#)
- [7 Bluetooth receiver mode](#)
- [8 AUX Input/Output mode](#)
- [9 MicroSD/USB mode](#)
- [10 Optical audio output](#)
- [11 Troubleshooting](#)
- [12 Accessories](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

Q800 Portable CD Player with Speakers

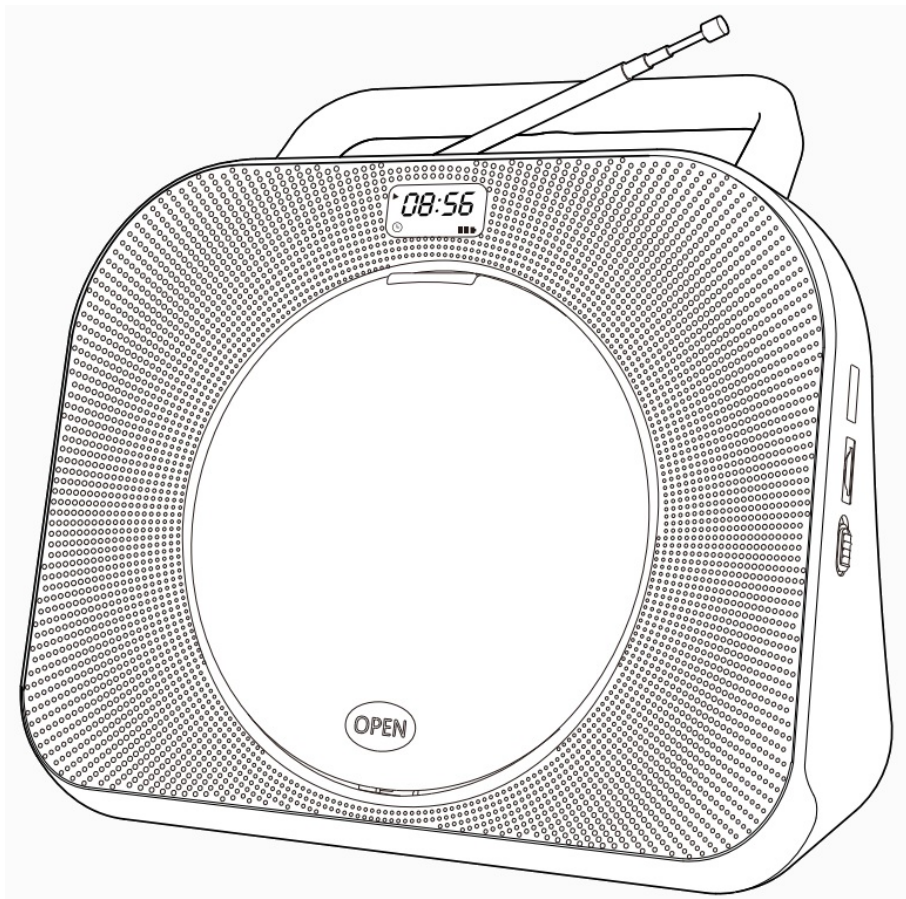

Please read the instructions carefully before use, which provide the correct usage and product functionality. Please keep this manual stored properly.


Gentle Reminder

1. Please use the DC-5V2A adapter provided in the product packaging. Do not use any other adapter to avoid damaging the CD player.
2. Avoid charging the device while using it, as it can reduce the battery life.
3. The device's IC electronic components generate significant heat, and a casing temperature of 39°C is normal. Please feel free to use it with out concerns.
4. Please close the lid when not in use to prevent dust from entering the CD player.
5. Do not use cracked or damaged CD discs to avoid damaging the laser equipment.
6. Avoid touching the laser with your hands.
7. Do not stare directly at the moving laser head to prevent eye injury.


Product Specifications

Product Model	YR-0800
Support Formats of Disc	CD, CD-R, CD-RM, MP3, WMA
Frequency Response Rate	60Hz-16KHz, +3db
Stereo Sound	3w*2
Signal-to-noise ratio	>57db
Total Harmonic Distortion	<1.5%
Rated impedance	4
Rated voltage	5V2A
Microphone	3w*2
Tuning range of radio	76MHz-108MHz
Housing plastic material	ABS imported plastics
Product size	223*178*90mm
Product net weight/gross weight	660g/968g
Capacity of battery	4000mAh
Charging time	6 hours

CD Player Description

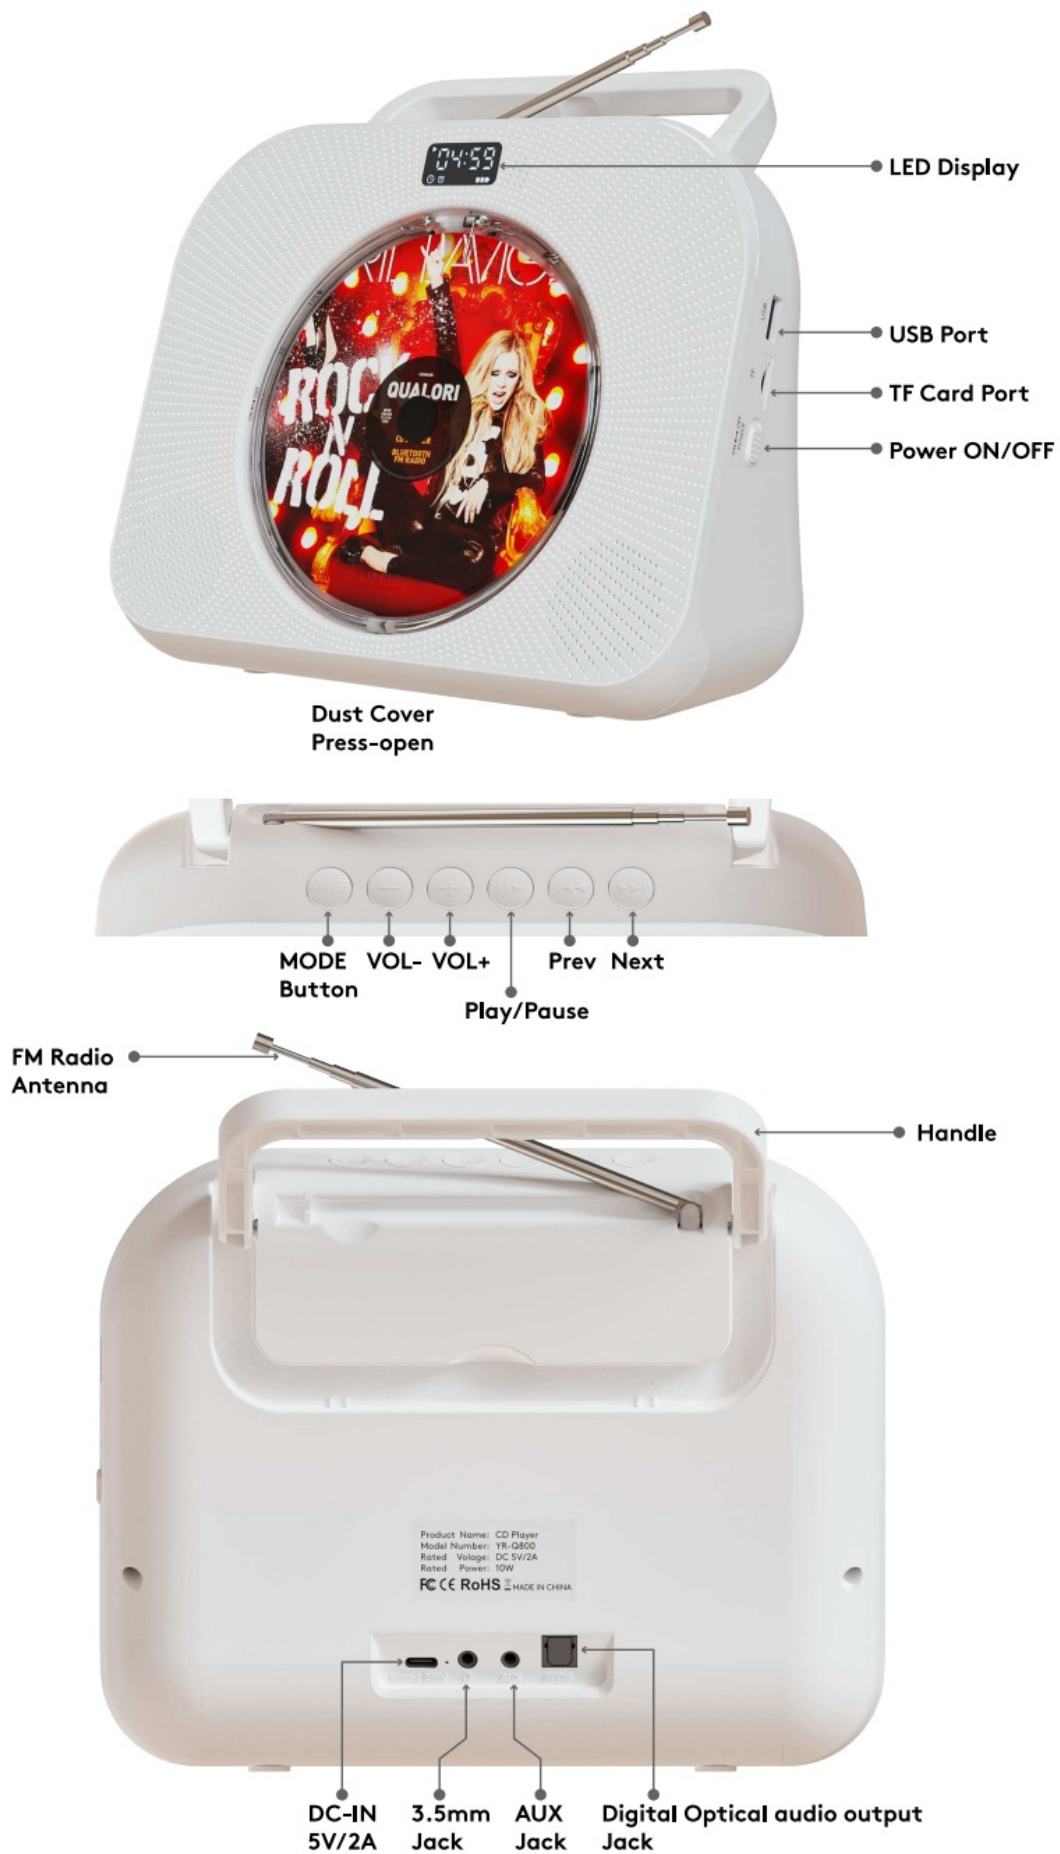

Remote control function

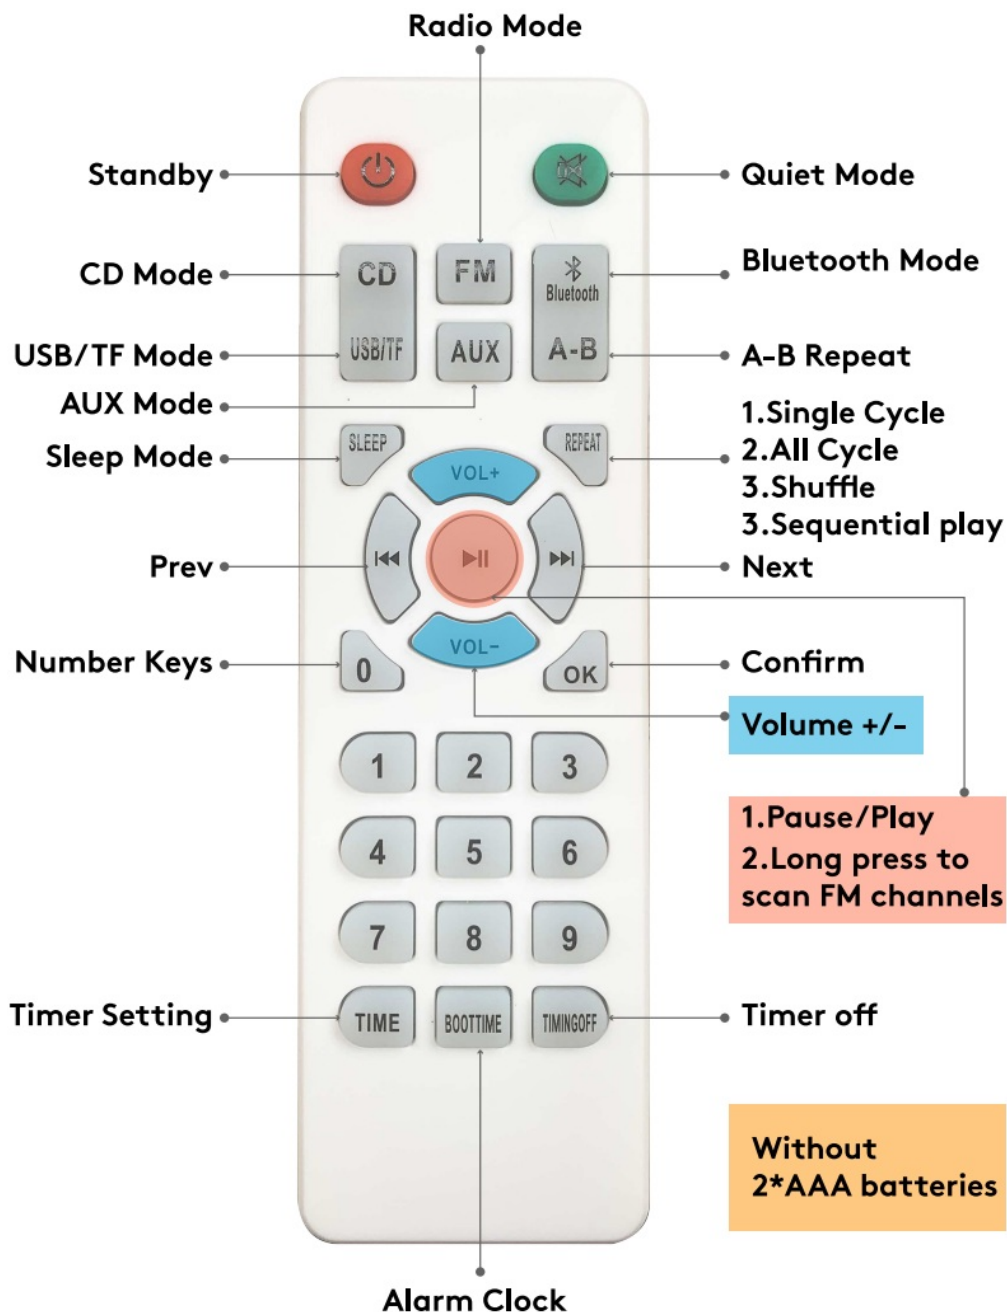

CD mode

1. Turn on the power (slide switch), Whenever you turn on the CD player, it defaults to CD mode and automatically reads the disc to play the CD.
2. If the disc format is not supported or damaged, the CD player will be unable to read the disc.
3. The CD player mode supports Bluetooth transmission for connecting to external Bluetooth devices (refer to Bluetooth function instructions for operation).
4. The CD player mode supports connecting to external speakers via the optical digital interface
5. The CD player has a memory function and will start playing from the track where it left off during the previous power-off when turned on again.

FM radio mode



Only supports FM radio

Step1: Turn on CD Player Bluetooth receiver mode



FM Radio

Step2: Using the remote control or CD player button

1. Auto Scan: Press and hold the  Play/Pause button on the remote control for 3 seconds to automatically store radio channels. After the scan is complete, it will start from the first station.
2. Semi-Auto Scan: Press and hold the  Prev/Next button to search for one channel at a time and automatically store radio channels.



Step3: Use the number keys on the remote control to switch to the corresponding channel.

Bluetooth transmit mode

Only available in CD mode (Two ways to open)

Step: Turn on CD Bluetooth transmit mode



1. Press and hold the mode button  on the CD player for 3 seconds, the LED screen will display “BL-F” flashing to indicate that the transmission mode is turned on.
2. Using the remote control, press and hold the  Bluetooth button for 3 seconds, the LED screen will display “BL-F” flashing to indicate that the transmission mode is turned on.

Step2: Turn on Bluetooth for external devices



Bluetooth
Speaker

or



Wireless
Bluetooth headphones

Step3: Wait 30 seconds to complete Bluetooth pairing

Note: When connecting external Bluetooth devices within a 10-meter range, please ensure that the Bluetooth device you want to connect is not connected to any other device, otherwise it will automatically connect to the other Bluetooth device.



Note: To switch to another Bluetooth device, please turn off the Bluetooth device you don't want to connect to, and then reopen the CD player's Bluetooth transmission mode to pair with the external Bluetooth device you want.

Bluetooth receiver mode

The CD player can be used as a Bluetooth speaker.

Step1: Turn on CD Player Bluetooth receiver mode



1. Press the mode button  on the CD player to switch to Bluetooth mode, and the LED screen will display "BLUE" to indicate that the Bluetooth mode is activated.
2. Using the remote control, press the  Bluetooth button, and the LED screen will display "BLUE" to indicate that the Bluetooth mode is activated.

Step2: Turn on Bluetooth for external devices



Phones



Tablet,iPad



Computer


Step3: Select the "YR-Q800" device from your Bluetooth device for pairing.

A-B Repeat function

1. Press the A-B repeat button on the remote control to set the starting point (A) during playback, and "A" will be displayed on the screen.
2. And then press the A-B repeat button on the remote control to set the endpoint (B), which will display "B" on the screen.
3. Then repeat the specified part from A to B.
4. Press the A-B button again to exit AB repeat and it will display OFF on the screen.
5. Note: The A-B repeat function is only valid in the CD/USB/TF card playback state. Other functions are invalid.

AUX Input/Output mode

Step1: Connect the 3.5mm audio cable

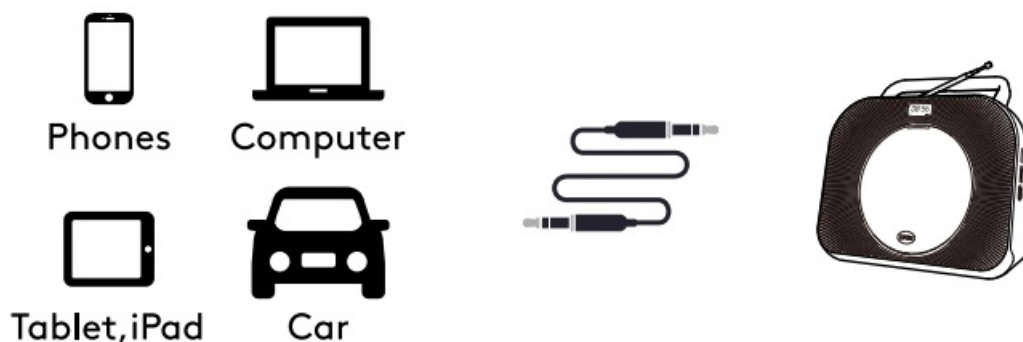

Step2: Switch CD player to AUX mode

1. CD player mode button




2. Remote control AUX button



MicroSD/USB mode

Step1: Insert TF card or USB flash drive into the CD player

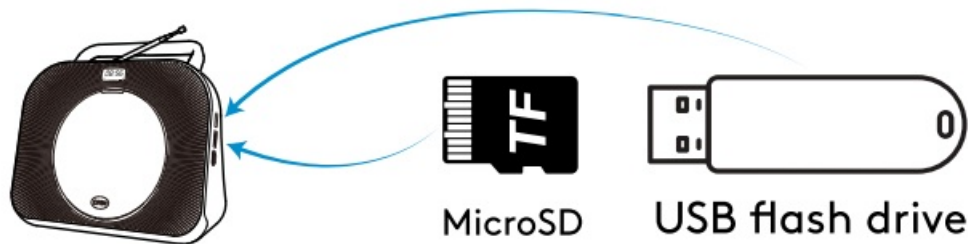

Step2: Switch CD player to TF/USB mode

1. CD player mode button



2. Remote control USB/TF button



MP3 or WMA music files in storage devices with a maximum capacity of 128GB (only in FAT/FAT32 format, not compatible with NITS).

Sleep mode

There are seven music options for sleep mode:

Birdsong, The sound of flowing water, Natural Wind Sound, Alpha wave, The sound of rain, Bonfire sound, Thunder sound.

1. Press the sleep button on the remote control to switch to sleep mode, the player will make a birdsong.
2. Press "Prev" or "Next" button to select different sleep music. Press the 7th time to turn off sleep music
3. After the sleep mode is turned on, the display screen turns off and does not light up.
4. Long press the sleep button to set the sleep time: (Unit : minutes)



Time/Time setting

Step1: The time that needs to be set, for example



First, press the " **TIME** " button on the remote control, then proceed to press the following buttons:




Step2: Set CD player on time/off time

NOTE: After the alarm setting is completed, the LCD display screen will display the alarm icon. Long press number " to cancel the alarm clock.

The clock display only shows the clock function when in standby, no power off or manually turn off the CD player, re-opening requires resetting the time.

Optical audio output

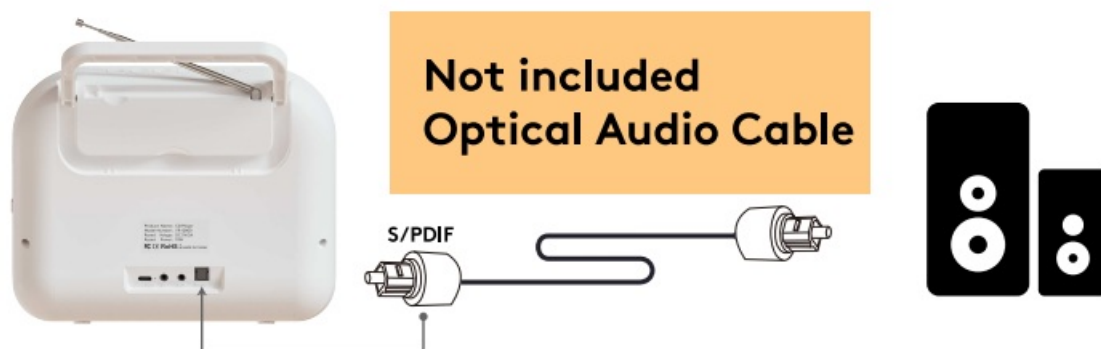

Troubleshooting

Remote control can not be used

1. Ensure that the remote control is aimed at the appropriate location: close to the area directly above the player, and ensure that the distance between the remote control and the CD player is within 6 meters.
2. Check if the battery inside the remote control has been damaged. Note: The remote control cannot start/close the player and requires sliding the power switch.

CD player can not be worked

1. Check if the power supply is successfully connected. If you are not using the original USB adapter, please ensure that the power specification is standard 5V/2A.
2. If the player operates in a large temperature difference, the laser head may be covered by fog and cause it to not work. Please let the CD player stand for 1 hour until it dries, then turn on the power and try playing the CD again.

DO NOT TOUCH THE LASER WITH YOUR HANDS.

CD function can not be used


Check if your disc format is suitable, or if your disc is too old or damaged, and ensure that the disc is placed correctly.

Accessories

1. CD player x1
2. 5V-2A USB adaptor x 1
3. Remote control x1
4. Type-C Power cord with 1.8m x1
5. AUX cable with 0.6m x1
6. User manual x1

Qualori

Documents / Resources

	<p>Qualori Q800 Portable CD Player with Speakers [pdf] User Manual Q800, Q800 Portable CD Player with Speakers, Portable CD Player with Speakers, CD Player with Speakers, Player with Speakers, Speakers</p>
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)