



QUANTUM ELMRW Emergency Remote Unit User Guide

[Home](#) » [quantum](#) » QUANTUM ELMRW Emergency Remote Unit User Guide 

Contents

 
1 QUANTUM® ELMRW Emergency Remote Unit User Guide

- 1.1 IMPORTANT SAFEGUARDS
- 1.2 INSTALLATION and MOUNTING
- 1.3 LAMP AIMING


2 Documents / Resources

- 2.1 References
- 3 Related Posts

QUANTUM® ELMRW Emergency Remote Unit User Guide

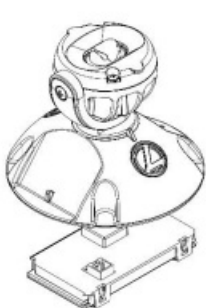


LP220L
SINGLE

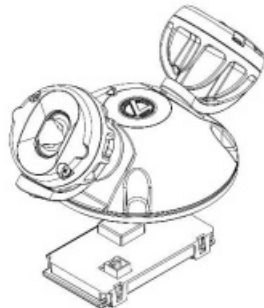 

LP220L
TWIN



 SP640L
SINGLE

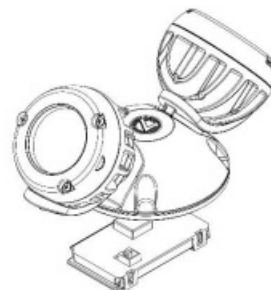

SP640L
TWIN

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS



WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE – For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations. If you do not understand these instructions or additional information is required, contact Lithonia Lighting or your local Lithonia Lighting distributor.



WARNING: RISK OF ELECTRIC SHOCK – NEVER CONNECT TO, DISCONNECT FROM OR SERVICE WHILE EQUIPMENT IS ENERGIZED.



WARNING: DO NOT USE ABRASIVE MATERIALS OR SOLVENTS. USE OF THESE SUBSTANCES MAY DAMAGE FIXTURE, WHICH MAY RESULT IN PERSONAL INJURY.



WARNING: RISK OF PERSONAL INJURY – This product may have sharp edges. Wear gloves to prevent cuts or abrasions when removing from carton, handling, installing and maintaining this product.



WARNING: Do not exceed fixtures ambient temperature -40°F-131°F (-40°C- 55°C). Use of unauthorized input voltage voids warranty and UL listing of this product and may present a risk of fire or explosion.

- Disconnect A.C. power before servicing.
- All servicing should be performed by qualified personnel.
- Consult your local building code for approved wiring and installation.
- Do not mount near gas or electric heater.
- For use Outdoors. **Failure to ensure connections are properly protected against water ingress during installation may void warranty.**
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

INSTALLATION and MOUNTING

 
IMPORTANT: Provide ELMRW LP220L with DC power supply from 5V through 20V and SP640L units with a DC power supply from 5V through 20V un-switched circuit used for emergency lighting.

WARNING: During installation of remotes, wires from main unit to remote units must **NOT** be connected to each other or connected to ground. Failure to do so will lead to failure of the main unit.

NOTE: The maximum mounting height with tilt and swivel lamp heads is shown below to meet the minimum illumination requirements of NFPA 101 (current Life Safety Code).

1 Junction box mounting:

-Some details shown below may vary-

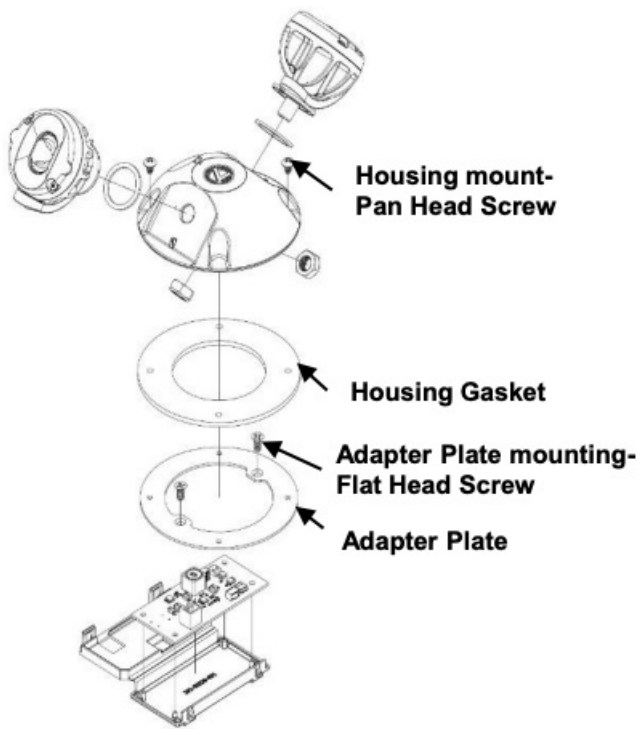

A. Disconnect DC Power Input connector from PCB enclosure during first part of installation. Use code-approved connectors to connect input leads inside J-box (not included) [See label on wire pair for positive and negative polarity colors].

B. Route input harness into the J-Box (not included).

C. For wet applications install the gasket and/or silicone sealant as required to seal the remote lamp housing to junction box (not included).

 
 
 
D. Carefully place the PCB enclosure inside the J-Box (not included) and connect input connector to the PCB enclosure. See Illustrations on page 3.

E. Taking care not to pinch wires or connectors dressed inside junction box, secure remote housing (adapter plate provided, if needed) to junction box screws. NOTE: to ensure proper engagement of the remote housing to the J-Box (not included), DO NOT OVER-TIGHTEN THE SCREWS.

2 Accessory package content:

1. Adapter plate
2. Housing gasket
3. Adapter plate mounting – flat head screw
4. Housing mount – pan head screw

Junction boxes accommodated (not included) :

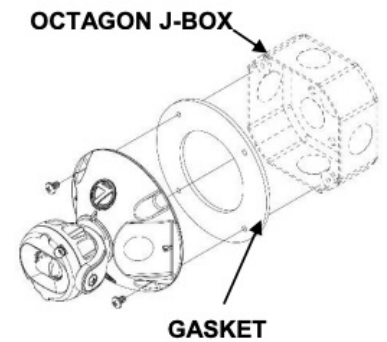
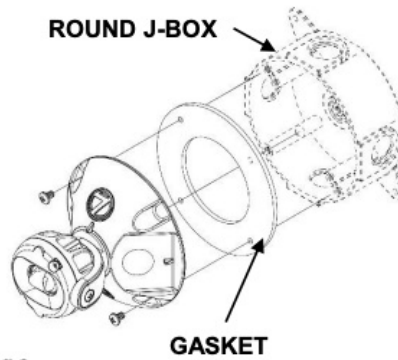
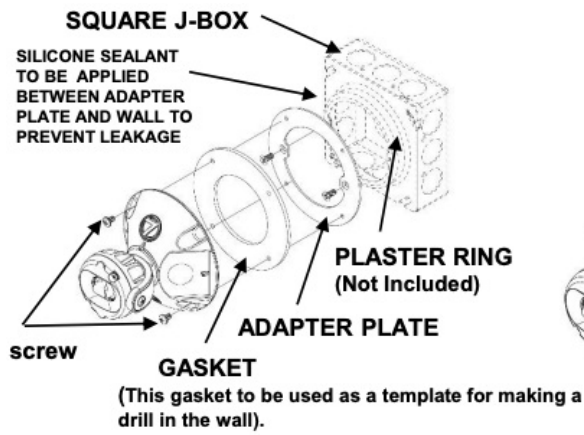


**SINGLE W/
4" SQ J-BOX
(Adapter Plate Included)**



**SINGLE W/
4" ROUND J-BOX**

**SINGLE W/
4" OCTAGON J-BOX**

   Illustration showing installation of PCB Enclosure:

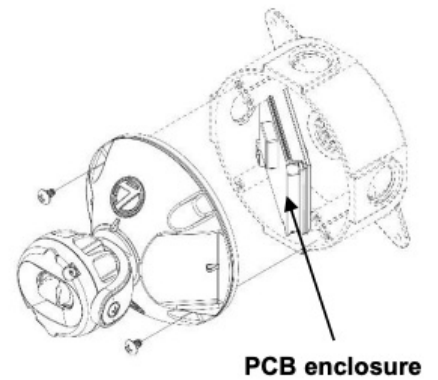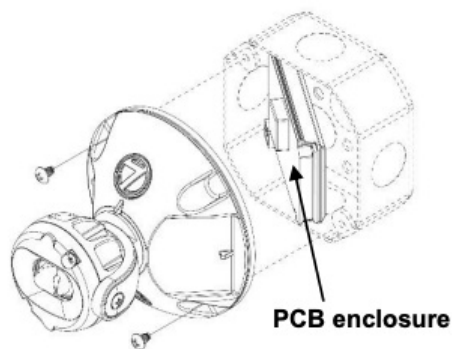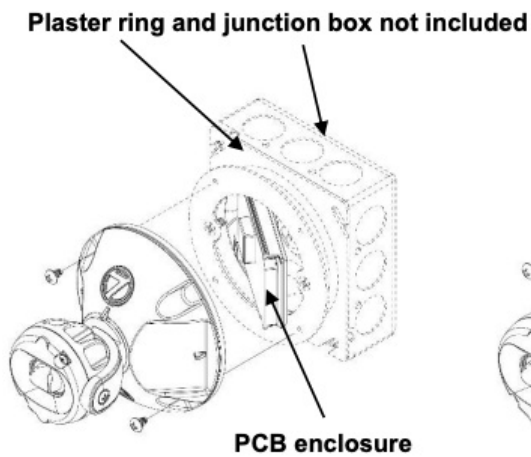

Wiring diagram

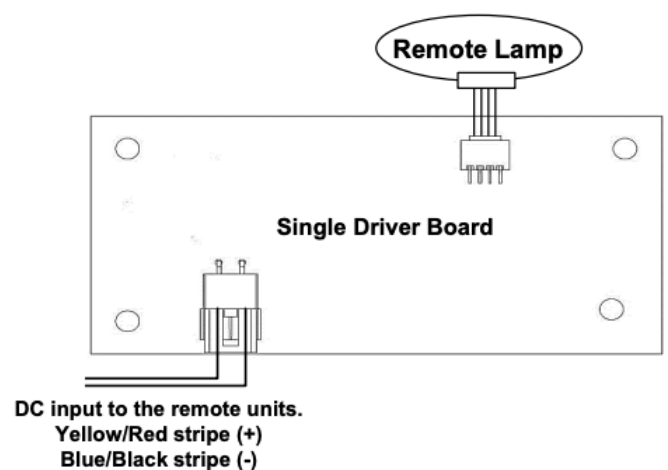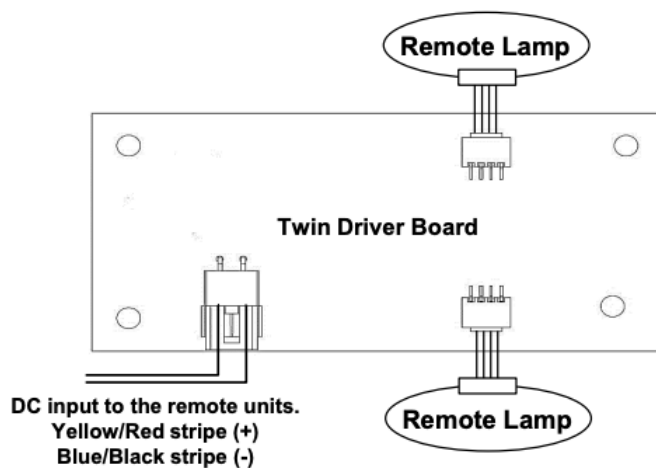  


CAUTION:

During installation of remotes, input wires from main unit to remote units must NOT be connected to earth ground. Failure to do so will lead to failure of the main unit.

LAMP AIMING

1. To adjust the lamphead at housing, twist lamphead to the desired position. (Do not loosen torque nut inside the housing.)
2. To adjust the lamphead around the **Aiming Screw**, loosen **Aiming Screw** and aim lamphead to desired position.
3. Tighten the screw to finish aiming procedure.
(Torque spec: 12 in-lbs)

 Rotating lamphead on housing should be done by swiveling head assembly. (Do not loosen torque nut inside the housing.)

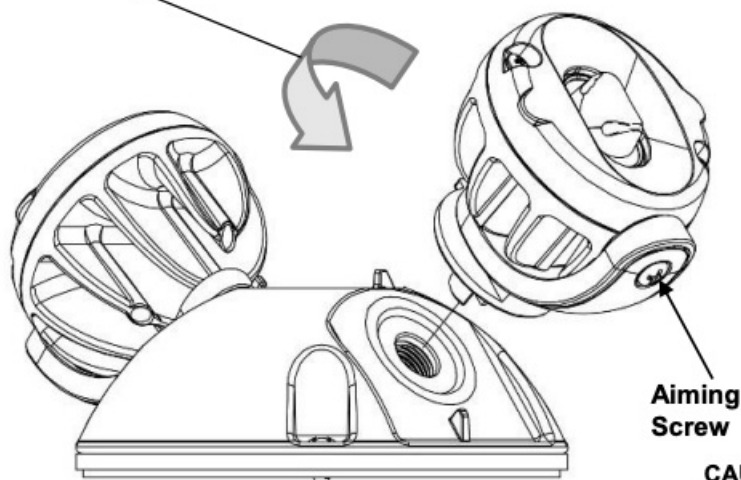

CAUTION: To aim, do not rotate the lamphead without loosening the aiming screw. Failure to do so will lead to breakage of gasket of the Yoke mount.

Exploded View

Federal Communications Commission (FCC) Requirements:

This device complies with FCC Title 47, Part 15, Subpart B. this device does not cause harmful interference.




 **LITHONIA LIGHTING®**
An **Acuity** Brands Company
LIFE SAFETY SOLUTIONS
TEL: 800-705-SERV (7378) www.lithonia.com
techsupport-emergency@acuitybrands.com

Part # 912-00076-001



Rev. D, 06/2021

© 2020, Acuity Brands Lighting, Inc.
All Rights Reserved.

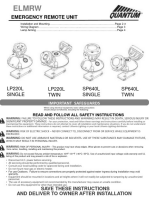Documents / Resources

	<p>QUANTUM ELMRW Emergency Remote Unit [pdf] User Guide</p> <p>ELMRW Emergency Remote Unit, ELMRW, Emergency Remote Unit, Remote Unit, LP220L, L P220L, SP640L, SP640L</p>
---	---

References

-  [Lithonia Lighting® | Best Value in Lighting](#)
-  [Lithonia Lighting® | Best Value in Lighting](#)