



## Quest 35960 Rotating Waffle Maker Instruction Manual

[Home](#) » [Quest](#) » Quest 35960 Rotating Waffle Maker Instruction Manual 

### Contents

- 1 Quest 35960 Rotating Waffle Maker
- 2 IMPORTANT! SAFETY INSTRUCTIONS
- 3 PARTS IDENTIFICATION
- 4 BEFORE USING FOR THE FIRST TIME
  - 4.1 HOW TO BAKE NICE CRISPY WAFFLES
- 5 CLEANING AND MAINTENANCE
- 6 Documents / Resources
- 7 Related Posts



**Quest 35960 Rotating Waffle Maker**



## **IMPORTANT! SAFETY INSTRUCTIONS**

READ THIS MANUAL BEFORE USING THIS APPLIANCE.

**WARNING! READ ALL SAFETY WARNINGS AND INSTRUCTIONS FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS LISTED**

- The intended use of this appliance is explained in this manual. The use of accessories other than those recommended in this manual may present a risk of personal injury.
- Always check the mains voltage corresponds to the voltage on the rating plate.
  - Always turn the power off at the power outlet before you insert or remove a plug. Remove plug by grasping the plug – do not pull on the cord .
  - Turn the power off and remove the plug when the appliance is not in use and before cleaning .
  - Do not use your appliance with an extension cord unless the cord has been checked and tested by a qualified technician or service person .
  - Close supervision is necessary when your appliance is being used by children or infirm person .
  - Young children should be supervised to ensure that they do not play with the appliance .
  - Never leave an appliance unattended while in use .
  - Do not use this appliance for any purpose other than its intended use .
  - Do not place an appliance on or near a hot gas flame, electric element or any other appliance .
  - Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surfaces .
  - Do not operate any appliance which has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Consult a qualified electrician for a repair or replacement of parts .
  - This appliance is suitable for indoor domestic use only .
  - Do not immerse the appliance in water or any other liquid.
  - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children


shall not play with the appliance. Cleaning and user maintenance. shall not be made by children.

- Keep the appliance and its cord out of reach of children.
- If the supply cord is damaged, it should only be replaced by a suitably qualified person.

**WARNING:** DO NOT OPERATE THIS WAFFLE MAKER IN THE VERTICAL POSITION, THIS IS FOR STORAGE ONLY.

## PARTS IDENTIFICATION

Before using your appliance for the first time, you should become familiar with all of the parts. Read all Instructions and Safeguards carefully.

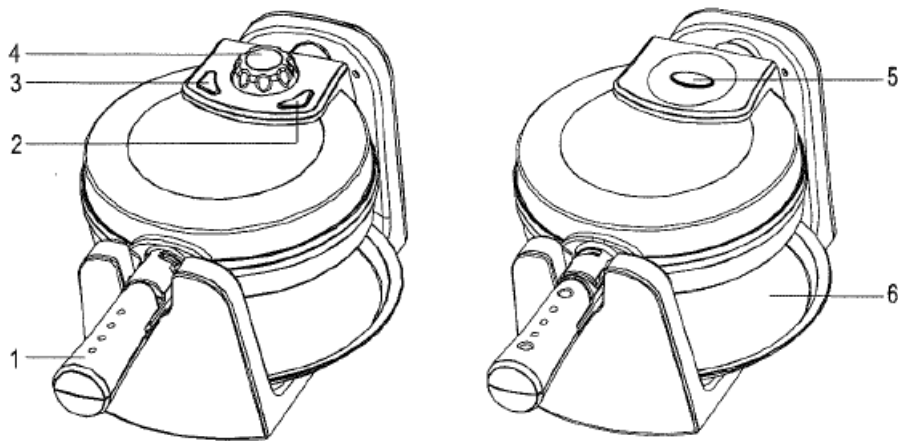

1. Folding Handle
2. Green Ready Light
3. Red Power Light
4. Temp Control Dial
5. Green Ready Light (when rotated)
6. Removable Drip Tray

## BEFORE USING FOR THE FIRST TIME

- Remove all packaging materials.
- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little cooking oil.
- Take care to prevent water from running into the appliance.

When your appliance is new you may notice a slight smoking or odor. This is normal with any heating appliances and will not recur. This does not affect the safety or your appliance.

## HOW TO BAKE NICE CRISPY WAFFLES

### MAKING BATTER

For the best results, allow the batter to swell for half an hour before baking.

### PRE-HEATING

- Insert the main plug into the wall socket, you will see the red power light go on, and it will constantly remain ON until you unplug the unit.
- Select the required baking temperature.  
PLEASE NOTE: THE RESULTS (BROWNING, CRISPINESS) DEPEND ON THE BAKING TEMPERATURE AS WELL AS THE DURATION OF THE BAKING AND QUALITY OF THE BATTER!
- The waffle iron should be kept in the closed position to allow the appliance to pre-heat for about 5 minutes. When the green light goes on, the appliance is ready for use.
- Apply some butter or oil to the surface of the hotplates using a brush.

## **BAKING**

- Ladle just enough batter to fill lower grid so that the peak area of the grid are covered. If necessary, use a spatula to spread the batter in to the corners of grid. At this point the green light will go OFF as the baking cycle begins.
- Close the lid. Do not open the lid until green light goes ON again. Opening too soon will cause unbaked waffles to split, and make them difficult to remove.
- When the green light goes ON. Waffles should be done according to the control setting that you've chosen. If you find you want them a little darker, close the lid and leave them for as long as you desire.
- Remove waffles from the grid with a non-metallic utensil. Waffles are ready.
- When you are finished baking, simply turn off and unplug from the wall outlet. Red power light will go OFF. Leave baker open to allow it to cool. After cooling, grids may be wiped clean with paper towels.

## **CLEANING AND MAINTENANCE**

- Always switch off, unplug and allow cooling before cleaning.
- After cooling any excess crumbs or oils can be wiped away with a paper towel. There is no need to disassemble appliance for cleaning.
- Never immerse appliance in water or any liquid. Do not place in dishwasher.
- Do not use metal utensils, which can damage the non-stick surface. Let only wood or plastic utensil contact the non-stick surface.
- Wipe the top and bottom housings with soft cloth. A little metal polish suitable for stainless steel may be occasionally used on top housing. Do not use any abrasive scouring pad or steel wool, as this will damage the housing finishes.
- Use the appliance only for its intended use. This appliance is intended for household use only.

## **PLUG:**

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
2. The plug is fitted with UK compliant fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.

5. This appliance is earthed.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk).

## Documents / Resources



[Quest 35960 Rotating Waffle Maker](#) [pdf] Instruction Manual  
35960, Rotating Waffle Maker, 35960 Rotating Waffle Maker, Waffle Maker

[Manuals+](#)