



Quest Xpointer Oranje Pinpointer Instruction Manual

[Home](#) » [Quest](#) » Quest Xpointer Oranje Pinpointer Instruction Manual 



Contents

- [1 Xpointer Oranje Pinpointer](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

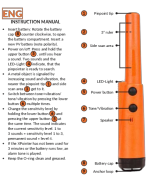
Xpointer Oranje Pinpointer

INSTRUCTION MANUAL

- Insert battery: Rotate the battery cap counter clockwise, to open the battery compartment. Insert a new 9V battery (note polarity).
- Power on/off: Press and hold the upper button 5, until you hear a sound. Two sounds and the LED-Light 4 indicate, that the pinpointer is ready to search.
- A metal object is signaled by increasing sound and vibration, the nearer the pinpoint tip 1 and side scan area 3 get to it.
- Switch between tone+vibration/ tone/vibration by pressing the lower button 6 multiple times.
- Change the sensitivity level by holding the lower button 5 and pressing the upper button 6 at the same time. The sound indicates the current sensitivity level. 1 to 3 sounds = sensitivity level 1 to 3, permanent sound = level 4.
- If the XPointer has not been used for 3 minutes or the battery runs low, an alarm tone is played.
- Keep the O-ring clean and greased.



Documents / Resources

	<p>Quest Xpointer Oranje Pinpointer [pdf] Instruction Manual Xpointer Oranje Pinpointer, Oranje Pinpointer, Pinpointer</p>
---	--