



Quest Xpointer Waterproof Pinpointer Instruction Manual

[Home](#) » [Quest](#) » Quest Xpointer Waterproof Pinpointer Instruction Manual 

Quest Xpointer Waterproof Pinpointer Instruction Manual



Contents

- [1 Product Overview](#)
- [2 Documents / Resources](#)

Product Overview



- **Insert battery:** Rotate the battery cap 8 counter clockwise, to open the battery compartment. Insert a new 9V battery (note polarity).
- **Power on/off:** Press and hold the upper button 5 , until you hear a sound. Two sounds and the LED-Light 4 indicate, that the pinpointer is ready to search.
- A metal object is signaled by increasing sound and vibration, the nearer the pinpoint tip and side scan area get to it.
- Switch between tone+vibration/ tone/vibration by pressing the lower button multiple times.
- Change the sensitivity level by holding the lower button and pressing the upper button at the same time. The sound indicates the current sensitivity level. 1 to 3 sounds = sensitivity level 1 to 3, permanent sound = level 4.
- If the XPointer has not been used for 3 minutes or the battery runs low, an alarm tone is played.
- Keep the O-ring clean and greased.

Quest®

Documents / Resources

	<p>Quest Xpointer Waterproof Pinpointer [pdf] Instruction Manual Xpointer Waterproof Pinpointer, Waterproof Pinpointer, Pinpointer</p>
--	--