



[Home](#) » [RadioBoss](#) » **RadioBoss AND1 4G LTE IP Radio Owner's Manual** 

Contents [[hide](#)]

- [1 RadioBoss AND1 4G LTE IP Radio](#)
- [2 Touchscreen](#)
- [3 Safety precautions](#)
- [4 Swiping](#)
- [5 Notification panel](#)
- [6 Applications](#)
- [7 Settings](#)
- [8 Troubleshooting](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



RadioBoss AND1 4G LTE IP Radio



Touchscreen

Tapping

To open an app, to select a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

Dragging

To move an item, tap and hold it and drag it to the target position.

Tapping and holding

Tap and hold an item or the screen for more than 2 seconds to access available options.

Double-tapping

Double-tap on a message conversation to zoom in. Double-tap again to return.

Safety precautions

- Before using your device, please thoroughly read the following safety precautions.

- The user manual is for reference only. Descriptions here are based on the default setting.
- The actual product, depending on different regions, service providers, or model specifications, may vary.
- Large files or games that require high CPU and RAM usage will affect the overall performance of the device.
- Software, sound sources, wallpapers, and other media provided with this device shall not be used for any commercial purpose.
- Users who illegally use the media would be completely responsible for infringing the copyright laws.
- Data services, such as uploading, downloading and auto-syncing, incur additional charges. Therefore, it is recommended to use a Wi-Fi network when coming to large data transfers.
- If you have questions about the pre-installed apps on the device, contact a Service Centre. As for user-installed apps, please contact the service providers.
- Modification of the device's operating system or installation of unauthorised third-party software may damage your devices, cause data loss and even put your personal information in danger.

Swiping

Swipe to the left or right on the Home screen or the Apps screen to view other panels. Swipe upwards or downwards to scroll through a webpage or a list of items, such as contacts.

Spreading and pinching

Spread two fingers apart on a webpage, map, or image to zoom in on a part. Pinch to zoom out.

Home screen

The Home screen is the starting point for accessing all of the device's features. It displays widgets, shortcuts to apps, and more. To view other panels, swipe to the left or right, or tap one of the screen indicators at the bottom of the screen.

Adding items

Tap and hold an app or a folder from the Apps screen, and then drag it to the Home screen. To add widgets, tap and hold an empty area on the Home screen, tap Plug in, tap and hold a widget, and then drag it to the Home screen.

Moving and removing an item

1. Tap and hold an item on the Home screen, and then drag it to a new location.
2. To move the item to another panel, drag it to the side of the screen.
3. You can also move frequently used apps to the shortcuts area at the bottom of the Home screen.

Removing

To remove an item, tap and hold the item. Then, click the delete icon in the upper left corner of the app icon.

Creating folders

1. On the Home screen, tap and hold an app, and then drag it over another app.
2. Drop the app when a folder frame appears around the apps.
3. A new folder containing the selected apps will be created.
4. Tap Enter folder name and enter a folder name.
5. To add more apps to the folder, tap and hold another app, and then drag it to the folder.

Lock screen

- Pressing the Power key turns off the screen and locks it. Also, the screen turns off and automatically locks if the device is not used for a specified period.
- To unlock the screen, press the Power key and swipe in any direction.
- You can change the way that you lock the screen to prevent others from accessing your personal information.
- On the Apps screen, tap Settings → Security → Screen lock and then select a screen lock method.
- The device requires an unlock code whenever un is unlocked.

Notification panel

Using the notification panel

When you receive new notifications, such as messages or missed calls, indicator icons appear on the status bar. To see more information about the icons, open the notification panel and view the details. To open the notification panel, drag the status bar downwards. To close the notification panel, swipe upwards on the screen.

Using quick-setting buttons

Tap the quick settings buttons to activate some features. Swipe to the left or right on the buttons area to view more buttons. To view more detailed settings, tap and hold a button.

Applications

Phone

- Introduction
- Make or answer voice calls.
- Contacts

Introduction

Create new contacts or manage contacts on the device.

- Messages

Introduction

Send and view messages by conversation.

SIM card application

Operator service introduction instructions

File

Learn fast and have to open all stored in the stored pictures, movies. Music, documents, and other types of files.

Settings

Introduction

Customise settings for functions and apps. You can make your device more personalised by configuring various settings options.

WLAN

- Turn Wi-Fi on or off.
- Bluetooth
- Turn Bluetooth on or off.

Troubleshooting

Before contacting the Service Centre, please attempt the following solutions. Some situations may not apply to your device. The touchscreen responds slowly or improperly. If you attach a protective cover or optional accessories to the touchscreen, the touchscreen may not function properly.

- If you are wearing gloves, and your hands are not clean while touching the touchscreen, or if you tap the screen with sharp objects or your fingertips, the touchscreen may malfunction.
- The touchscreen may malfunction in humid conditions or when exposed to water.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is updated to the latest version.
- If the touchscreen is scratched or damaged, visit a Service Centre.
- Your device does not turn on.

When the battery is completely discharged, your device will not turn on. Fully charge the battery before turning on the device.

Calls are not connected.

- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.
- Your device displays network or service error messages
- When you are in areas with weak signals or poor reception, you may lose reception.
Move to another area and try again.
- While moving, error messages may appear repeatedly.
- You cannot access some options without a subscription. For more information, contact your service provider.
- A cellular network or the Internet is often disconnected, or the audio quality is poor.
- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception.
- You may have connectivity problems due to issues with the service provider's base station.
- Move to another area and try again.
- When using the device while moving, wireless network services may be disabled due to issues with the service provider's network.
- When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:
- Password: When the device lock feature is enabled, you must enter the password you set for the device.
- PIN: When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card.
- You can disable this feature by using the Lock SIM card menu.
- PUK: Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
- PIN2: When you access a menu requiring PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For more information, contact your service provider.
- The battery icon is empty.
- Your battery is low. Charge the battery.
- The battery does not charge properly (For Service-approved chargers)
- Ensure that the charger is connected properly.
- Visit a Service Centre and have the battery replaced.

Attention

This radio complies with IEEE and ICNIRP exposure limits for an Uncontrolled RF exposure environment and is authorised by the FCC for Uncontrolled use only. An appropriate warning label is affixed to all units. To comply with RF exposure requirements, a minimum distance of 2.5 cm must be maintained when held-to-face, and body-worn operations are restricted to the approved original accessories, with a minimum distance of 0 cm.

Do not use this device when the antenna shows obvious damage. This product is compliant with CC RF Exposure requirements and refers to the FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2bltr-AND1 to gain further Information, including SAR Values.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

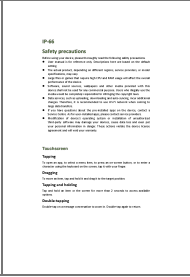
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

	RadioBoss AND1 4G LTE IP Radio [pdf] Owner's Manual 2BLTR-AND1, 2BLTRAND1, AND1 4G LTE IP Radio, AND1, 4G LTE IP R adio, LTE IP Radio, IP Radio, Radio
---	--

References

- [User Manual](#)

RadioBoss
2BLTR-AND1, 2BLTRAND1, 4G LTE IP Radio, AND1, AND1 4G LTE IP Radio, IP Radio, LTE IP Radio, Radio,
RadioBoss

—Previous Post
[RadioBoss MD-7500 IP Connection User Guide](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.