



**radioshack**  
**2604729 3 Button**  
**Wireless Mouse**



# **radioshack 2604729 3 Button Wireless Mouse Instruction Manual**

[Home](#) » [RadioShack](#) » **radioshack 2604729 3 Button Wireless Mouse Instruction Manual** 

## **Contents**

- [1 radioshack 2604729 3 Button Wireless Mouse](#)
- [2 Product Information](#)
- [3 PACKAGE DETAILS](#)
- [4 FEATURES](#)
- [5 TECHNICAL PARAMETERS](#)
- [6 INSTALLATION](#)
- [7 TROUBLESHOOTING](#)
- [8 RF exposure:](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)



**radioshack 2604729 3 Button Wireless Mouse**



## **Product Information**

### **Specifications**

- Model Numbers: 2604729, 2604754-56
- Product Type: Wireless Mouse
- Power Source: AA Battery
- Surface Compatibility: All surfaces except glass
- Wireless Technology: 3 Button

### **Features**

- 3-button wireless mouse
- Easy installation process
- Compatible with most systems
- LED light indicator for battery status
- Operational distance optimization features

### **Technical Parameters**

This device complies with Part 15 of the FCC Rules and has been evaluated to meet general RF exposure requirements.

### **Installation**

1. Open the battery cover at the bottom of the mouse and insert an AA battery in the correct direction. The LED light will briefly illuminate indicating the mouse is operational.
2. Connect the receiver to your computer's USB input.
3. Your mouse is now ready for use.

### **Important Notes**

Avoid using the mouse on glass surfaces to ensure optimal performance.

## **Troubleshooting**

### **If the mouse does not work properly:**

1. Check the battery orientation.
2. Ensure the USB receiver is correctly connected.

### **If the mouse moves slowly or malfunctions:**

1. Increase distance from other electronic devices.
2. Avoid interference from devices like microwaves or wireless phones.

## **3 BUTTON WIRELESS MOUSE**

models 2604729, 2604754-56

Thank you for purchasing RadioShack's wireless mouse.

## **PACKAGE DETAILS**

- One 2.4G wireless optical mouse
- One mini USB receiver
- One user manual

## **FEATURES**

- Dimensions: L98 x W62 x H36 (millimeters)
- 3 button
- 1,200 DPI
- Snap-in Nano receiver
- 1 AA battery (not included)
- Windows 7/WIN8/WIN10, Mac OS 10, Android compatible.

## **TECHNICAL PARAMETERS**

- The mouse's rated voltage is 1.5V and the rated current is 28mA.
- 2.4G wireless radio frequency technology.
- 2.4G wireless timely hopping technology.
- Working distance: up to 10M.
- Multi-level sleeping function, helps you save more power.
- Low power and low current consumption design, prolonging battery life.
- Plug and play, easy.
- Ergonomic and comfortable design, easy operation.

## **INSTALLATION**

1. Open the battery cover at the bottom of mouse and insert the AA battery in the correct direction. When the battery is installed, the LED light will light up for 2 seconds and then it will turn off. This means the mouse is in working state.
2. Connect the receiver on your computers USB input.
3. You can now use your mouse.

## **IMPORTANT**

- When you unplug the receiver or host shuts down, the mouse will immediately stop working (sleep mode).
- When mouse is in sleep mode, you can wake it up by pressing any button.
- When you connect the receiver or reboot the computer, you should click any button, LED will light up; this means the mouse is in working state.
- You can use this mouse on any surface except glass.

## **TROUBLESHOOTING**

### **If doesn't work, what can we do?**

1. Check if the batteries positive and negative electrode is right.
2. Check if the USB receiver is connected correctly.

### **When the mouse moves slowly or malfunctions, what can we do?**

1. Increasing the distance between mouse and other computer equipment.
2. Increase the distance or turn off other wireless devices such microwaves, wireless home phones, etc. those may affect the transmission and extend the mouse's response time.

## **WARNING**

This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.


- Increase the separation between the equipment and receiver
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

**NOTE:** This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

### RF exposure:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### Documents / Resources

	<a href="#">radioshack 2604729 3 Button Wireless Mouse</a> [pdf] Instruction Manual 2604729, 2604754-56, 2604729 3 Button Wireless Mouse, 2604729, 3 Button Wireless Mouse, Button Wireless Mouse, Wireless Mouse, Mouse
---	---

### References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.