



2607173 Foldable Keyboard with Touchpad



radioshack 2607173 Foldable Keyboard with Touchpad User Manual

[Home](#) » [RadioShack](#) » radioshack 2607173 Foldable Keyboard with Touchpad User Manual 

Contents

- [1 radioshack 2607173 Foldable Keyboard with Touchpad](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Package contents](#)
- [5 Product Overview](#)
- [6 Product features](#)
- [7 Technical Specifications](#)
- [8 Safety Instructions](#)
- [9 Warranty](#)
- [10 Fcc](#)
- [11 Frequently Asked Questions](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



radioshack 2607173 Foldable Keyboard with Touchpad



Specifications

- Model: VDXWKRULW
- Power: 110-240V
- Frequency: 50-60Hz
- Dimensions: 10 x 5 x 3 inches
- Weight: 2 lbs

Product Usage Instructions

Unpacking and Setup:

When you receive your VDXWKRULW, carefully unpack all components and ensure everything is included as per the packing list.

Power Connection:

Plug the power cord into a suitable power outlet within the specified voltage range (110-240V, 50-60Hz).

Functionality:

This product is designed to enhance efficiency in completing tasks. Refer to the user manual for specific functions and operation details.

Maintenance:

Regularly clean the product with a soft, dry cloth to prevent dust accumulation. Avoid using harsh chemicals for cleaning.

Troubleshooting:

If you encounter any issues with the product, refer to the troubleshooting section in the user manual or contact our customer support for assistance.

- Thank you for choosing the Radio Shack Foldable Keyboard with Touchpad 2607173! We appreciate your purchase and are excited for you to experience quality. To maximize the usage of the device, please read the following instructions carefully and keep this guide for future reference to enhance your experience.

Product Overview

- The Radio Shack Foldable Keyboard with Touchpad 2607173 offers multi-channel wireless connectivity, making it convenient for both office and home use.

Getting Started

Charging Your Keyboard:

- Before first use, fully charge your keyboard by connecting the provided cable to the device and plugging it into a power source. A green indicator lights up during charging and turns off when fully charged.

Maintenance and Care:

- To maintain optimal performance, avoid exposing the keyboard to extreme temperatures, moisture, or direct sunlight. Clean it with a soft, dry cloth to preserve its appearance.



Warranty and Support:

- A warranty covers your Radio Shack BT Foldable Keyboard with Touchpad for defects in materials and workmanship. For assistance, please get in touch with our customer support team or visit our website at <https://www.ra-dioshack.com/>.
- We hope you enjoy your Radio Shack BT Foldable Keyboard with Touchpad.
- Explore its portability, quality, and convenience, and feel free to reach out with any questions or for further assistance.

Package contents

- BT Foldable Keyboard with Touchpad
- Type-C charging cable
- User manual

Product Overview

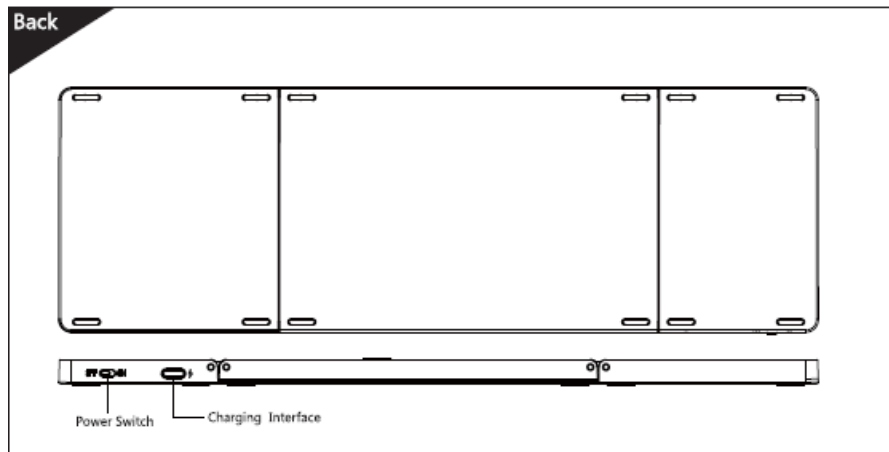
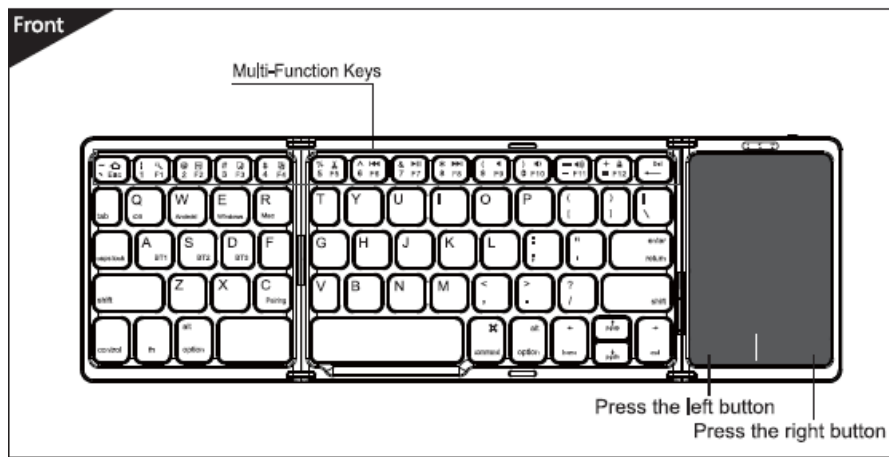


Compatible System



- Win #OS /Android/Mac

iOS Connection Instructions

  1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.
2. Access the iOS settings and check the Bluetooth connections for the searching and pairing status.

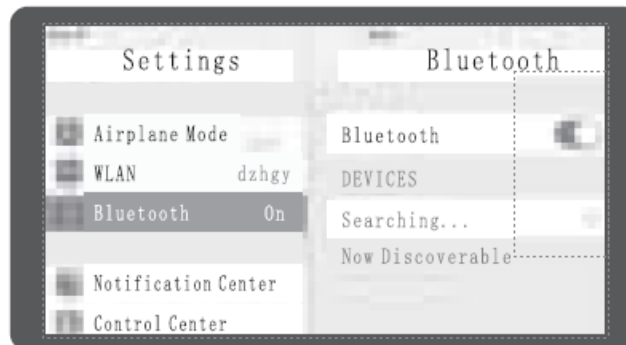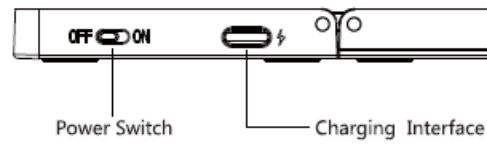


  3. Locate the "RS2607173" keyboard and proceed to the next step
4. The successful connection ensured comfortable keyboard use.

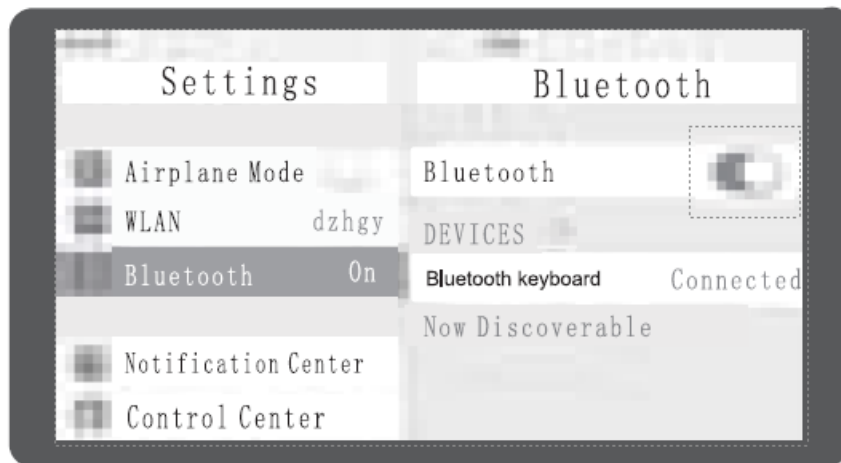
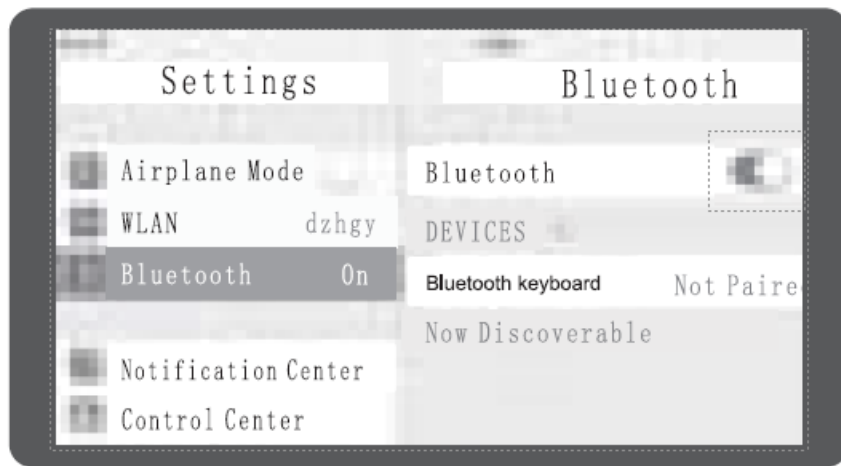


Win 10 Connection Instructions

 1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.

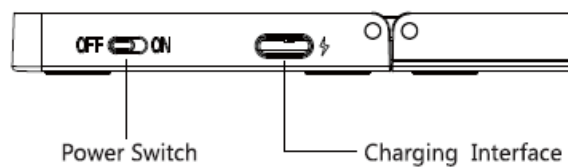

  2. Open settings, enable Bluetooth, and click "Add Bluetooth or other devices."
3. Select "Bluetooth" in the Add Device to search.

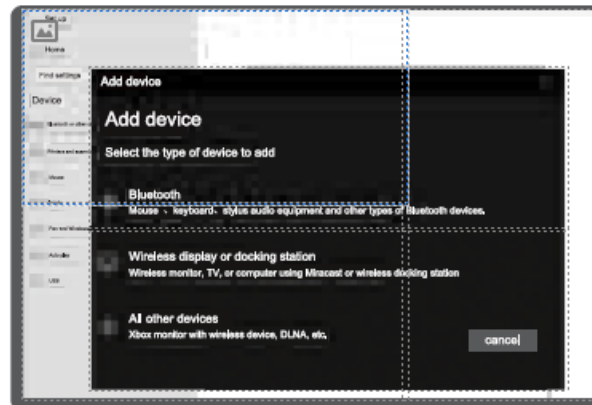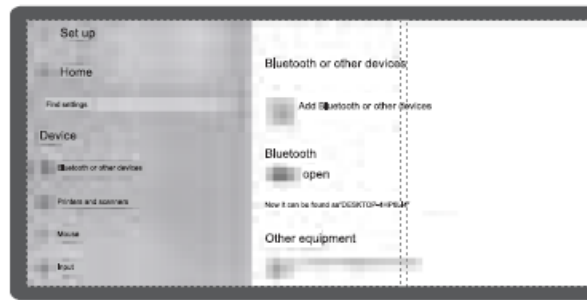


4. Find and click on “Radioshack 2607173” to connect it.
5. The successful connection ensured comfortable keyboard use.




Android Connection Instructions:

 
1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.

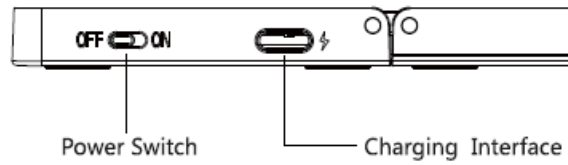

 2. Open "Settings" and click "Connect".
3. Enable Bluetooth to search "RS2607173".

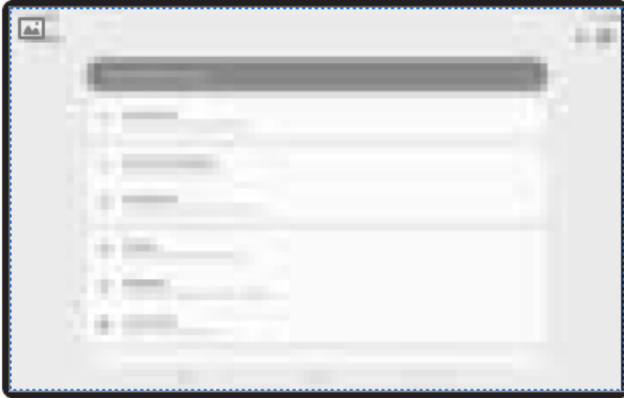


 4. Click on "RS2607173" when the pair
5. The successful connection ensures the request appears, then click OK. Comfortable keyboard use.

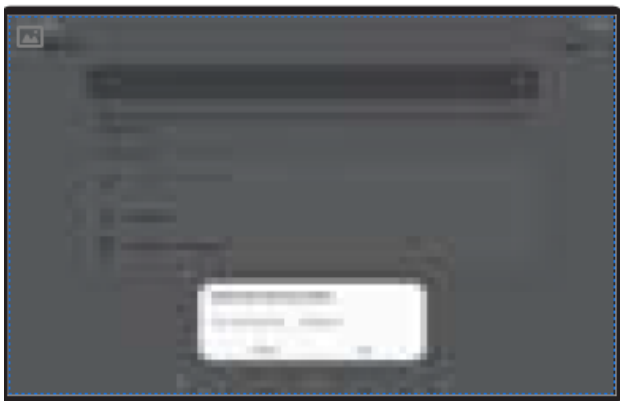

MasOS connection instructions:

 1. Slide the power switch to ON; a red light will illuminate. Press the Fn+C connect button to select the channel, causing a blue light to flash.

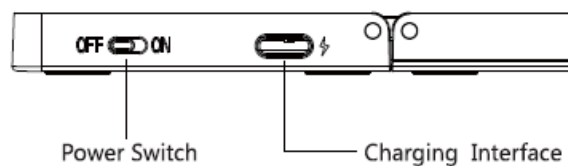


























 
 
 
 
 
 

 
 
 




2. Open "System Preferences" and click on Bluetooth.
3. Wait until "RS2607173" is found, then click to pair.



Note: After connecting, press fn+Q (iOS), W (Android), E (Windows), or R (Mac) to switch to the corresponding device.

Product features

iOS/Android/Mac		Windows		Windows	
Fn+	Corresponding function	Fn+Shift+	Corresponding function	Fn+	Corresponding function
~  \\Esc	Return to Desk	~  \\Esc	Home Page	~  \\Esc	Esc
!  1 F1	Search	!  1 F1	Search	!  1 F1	F1
@  2 F2	Select	@  2 F2	Select	@  2 F2	F2
#  3 F3	Copy	#  3 F3	Copy	#  3 F3	F3
\$  4 F4	Stick	\$  4 F4	Stick	\$  4 F4	F4
%  5 F5	Cut	%  5 F5	Cut	%  5 F5	F5
^  6 F6	Pre-Track	^  6 F6	Pre-Track	^  6 F6	F6
&  7 F7	Play/Pause	&  7 F7	Play/Pause	&  7 F7	F7
*  8 F8	Next	*  8 F8	Next	*  8 F8	F8
( 9 F9	Mute	( 9 F9	Mute	( 9 F9	F9
)  0 F10	Volume-)  0 F10	Volume-)  0 F10	F10
—  _ F11	Volume+	—  _ F11	Volume+	—  _ F11	F11
+  = F12	lock	+  = F12	lock	+  = F12	F12

Three system switching languages

- iOS: control+Space key
- Windows: Alt+Shift
- Android : Shift+Space key / control+Space key

Technical Specifications

- Keyboard size: 304.31 x 98.12 x 9.86 mm (open) 152 x 98.12 x 19.83 mm (folding)
- Key working current: < 1 mA

- Touchpad working current: <11 mA
- Working distance: 10 m
- Lithium battery capacity: 140 mAh
- Working voltage: 3.7 V
- Charger specifications: 5V=== 1A or 2A
- Weight: 214 g
- Standby current: < 0.7 mA
- Sleep current: < 16 JA
- Sleep time: 10 minutes
- Awaken way: Press key

Status Display LED

- Connect: Open the power switch, red lights up, press the connect button, blue light twinkles.
- Charging: The Indicator light will be on green; after fully charging, the light crushes out.
- Low Voltage Indication: When the voltage is below 3.2 V, the red light twinkles.

Touchpad function description (Windows10) must be witchad to Windowe custom



Tap —
The left of mouse button



Two-finger separation /
collapse
— Zoom in / out



Two-finger slides vertically /
horizontally
— Mouse wheel



Three-finger slide to the
left continuously
— Switch the active window



Three-finger tap
— Search



Three-finger slide to the
right continuously
— Active window switch



Three-finger slides up
— Open the browser window



Four-finger tap
— Open the (Actioncenter)



Three-finger slides down
— Go Home

Touch pad function description (Android), must be switched to Android system



Tap —
The left of mouse button



Two-finger slides
vertically
— Mouse wheel



Drag
— Mouse cursor



Tap—Tap
(user-defined)



Drag
— Mouse cursor



 
Single finger double tap and
then drag — Drag



Two-finger separation /
collapse —
Zoom in / out



Two-finger slides
vertically
— Mouse wheel



Two-finger slides
horizontally —
Slide the desktop
left and right



Three-finger slides down
— Open all the active windows
(Click the Homepage button twice)



Three-finger tap
— Desktop
(user-defined)



Three-finger slides up —
Open/hide the bottom of the
application bar
(Cmd+Alt+D)



Three-finger slides
left — Active windows
(Cmd+shift+Tab)



Three-finger slides
right — Active windows
(Cmd+Tab)



Four-finger tap —
Regional screenshots
(Cmd+shift+4)



Tap —
The left of mouse
button



 
Drag
— Mouse cursor



Single finger
double tap and
then drag
— Drag



Two-finger tap —
The right of mouse
button



Two-finger slides
vertically
— Mouse wheel



Two-finger slides
horizontally —
Slide the desktop
left and right



Two-finger separation /
collapse —
Zoom in / out



Three-finger tap
— Desktop
(user-defined)



Three-finger slides
up — Open/hide
the bottom of the
application bar



Three-finger slides
right
— Active windows



Three-finger slides
left
— Active windows



Four-finger tap
— Regional screenshots

- When connecting the first device, first press Fn+ BT1 and then press Fn+C to start the connection.
- Before connecting the second device, press Fn+ BT2 once, then press Fn+C to start the connection.
- Before connecting the third device, press Fn+ BT3 once, then press Fn+C to start the connection.
- Switch between connected devices using Fn + BT1/BT2/BT3

Safety Instructions

- Do not open or repair the device; avoid using it in damp environments. Clean with a dry cloth.

Warranty

- One-year limited hardware warranty from the purchase date. Keyboard

Maintenance:

1. Keep the keyboard away from liquids and humid environments, such as saunas or swimming pools.
2. Avoid exposing the keyboard to extreme temperatures.
3. Do not place the keyboard in direct sunlight for extended periods.
4. Keep the keyboard away from flames, like stoves or candles.
5. Prevent sharp objects from scratching the keyboard; recharge it regularly for normal use.

Fcc

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

Equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Frequently Asked Questions

The tablet or PC can't connect to the BT keyboard.?

Ensure the BT keyboard is in pairing mode and check Bluetooth on the tablet. Verify the keyboard battery is charged; a low battery can interrupt the connection

Why is the keyboard indication light always flashing?

A flashing light indicates a low battery; charge it immediately.

Why does the tablet or PC display that the BT keyboard is disconnected?

The keyboard enters sleep mode after inactivity to save power. Press any key to wake it up and restore the Bluetooth connection. Contact after-sales service for more assistance.


How do I reset the product to factory settings?

A: To reset the product, locate the reset button on the back panel and hold it down for 10 seconds until the indicator lights flash

Can I use this product with an external power adapter?

A: No, this product is designed to be used with the provided power cord and should not be connected to an external power adapter.

Documents / Resources

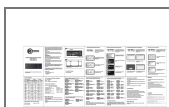

[radioshack 2607173 Foldable Keyboard with Touchpad](#) [pdf] User Manual
2BDUR-2607173, 2BDUR2607173, 2607173 Foldable Keyboard with Touchpad, 2607173, Foldable Keyboard with Touchpad, Keyboard with Touchpad, Touchpad, Keyboard

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.