


rako RMT-PILL 250W Trailing Edge Wireless Dimmer

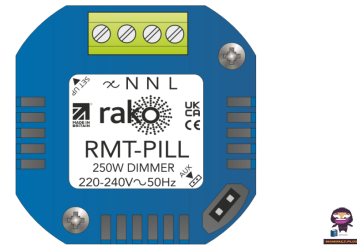

rako RMT-PILL 250W Trailing Edge Wireless Dimmer Instruction Manual


[Home](#) » [rako](#) » rako RMT-PILL 250W Trailing Edge Wireless Dimmer Instruction Manual 

Contents

- 1 rako RMT-PILL 250W Trailing Edge Wireless Dimmer
- 2 What is the RMT-PILL?
- 3 Loadings
- 4 Installation of the RMT-PILL
- 5 Auxiliary Input
- 6 Documents / Resources
 - 6.1 References



rako RMT-PILL 250W Trailing Edge Wireless Dimmer

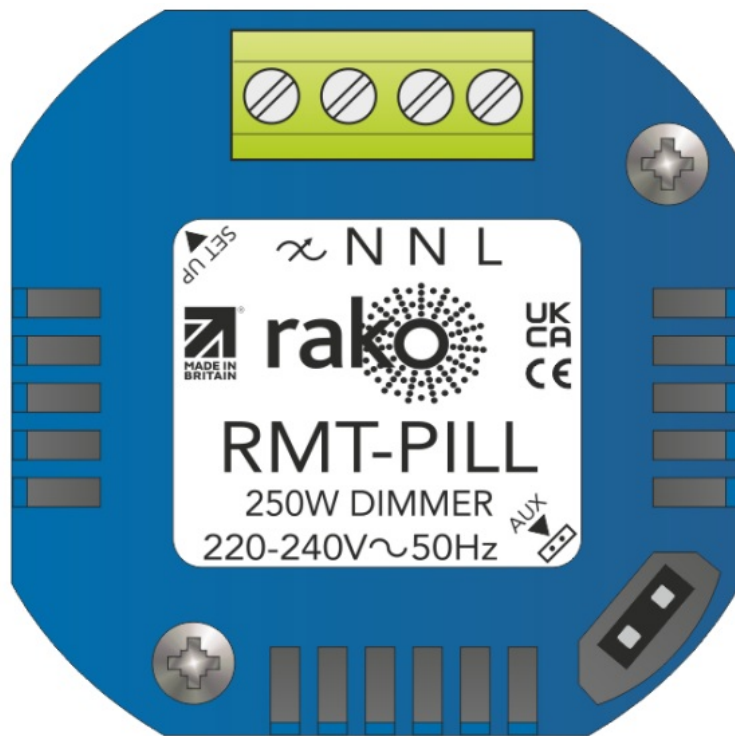

For more information relating to the RMT-PILL, see the Wireless Module Application Sheet, Wireless RAK Application Sheet, and Wireless Device LED Diagnostics. For programming a wireless system: Wireless Module Setup Guide

What is the RMT-PILL?

The RMT-PILL trailing edge dimmer is suitable for mains dimmable leds or halogens. It is intended to be installed in a backbox as a retrofit solution. Depending on the fittings used in conjunction with the RMT-PILL, it can be used with or without a neutral connection. RMT-PILL modules can be controlled by any Rako device that transmits wireless messages.

NB

The RMT-PILL is not suitable for inductive loads, such as toroidal transformers.

Loadings

With Neutral

- Min: 1W
- Max: 250W
- It can be used with any trailing edge dimmable fittings (eg LEDs)


Without neutral

- Min.: 60W
- Max. 250W Mains Voltage: tungsten or halogen only.

Installation of the RMT-PILL

Installation should only be carried out by a competent electrician.

- Modules should be mounted in areas that are adequately ventilated, dry, and outside of any enclosed metal casings that may interfere with the wireless signal.
- While the modules are designed to be maintenance-free, they should be mounted in an accessible location should investigation or re-addressing of the units be necessary.
- Allow for additional space inside the backbox for cables and the unit.

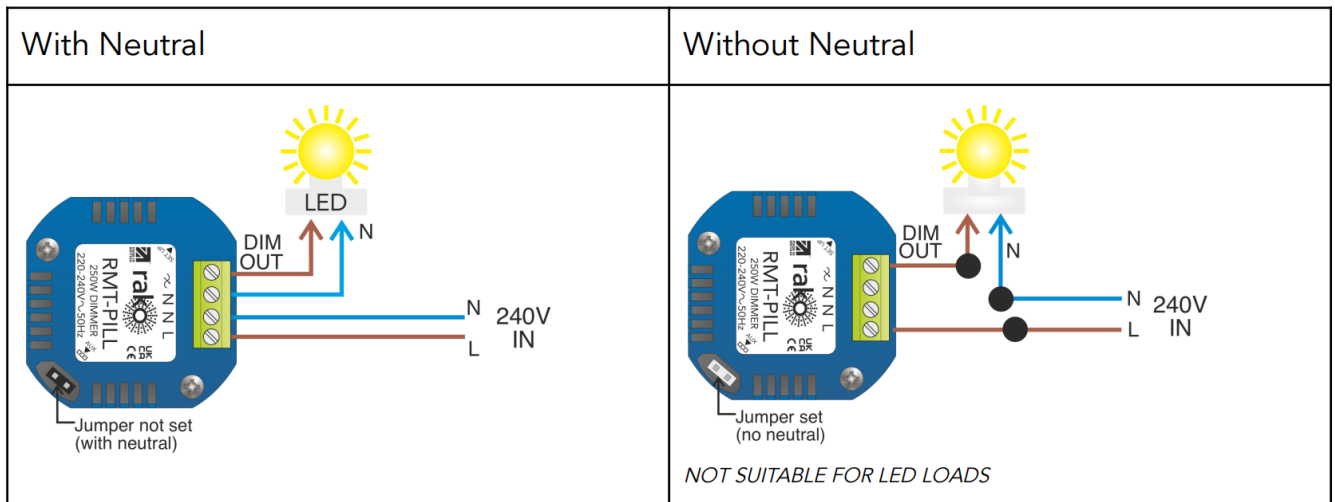

- While the modules are designed to be completely maintenance-free, they should be mounted in an accessible location should investigation or re-addressing of the unit be necessary.
- The RMT-PILL dimmers are designed to be mounted in a wall-mounted electrical back box or conduit box.
- If a metal back box is used, then the aerial should be mounted outside of the back box, into the wall.
- Without a neutral, the RMT-PILL can only be used with mains voltage tungsten halogen and not mains voltage LEDs. It is not suitable for low-voltage or any other transformer-fed lighting types.
- Only use the dimmer with both neutrals connected or neither. Wiring a single neutral risks damaging the dimmer.

Auxiliary Input

The auxiliary input can be used in conjunction with a third-party switch to control the load without the use of a Rako wireless command.

NB

Rasoft Pro and a suitable Communication Device (RAMPI/HUB) are required to enable the auxiliary input.



Initial Checks

- When power is initially connected to the module, the load should power up to full brightness.
- The internal LED behind the button should flicker when the module receives any Rako wireless message.
- Should the module not respond to any of the above, then further investigation must be made before proceeding further.

Programming the RMT-PILL


Once the RMT-PILL has powered up and has been tested working with the setup button, the device is ready to be programmed. For instructions on how to program the RMT-PILL, see the Wireless Module Setup Guide.

Appendix 1: LED Diagnostics

Wireless Range	LED Pulses	Description
Good wireless reception		When the unit is receiving successfully, there will be four rapid pulses on the LED when any wireless message is sent.
Bad wireless reception		When the unit is out of range, there will be intermittent pulses on the LED when any wireless message is sent. NB It is recommended to install a wireless repeater (WRB-100) if you are experiencing intermittent wireless range.

Should the module not respond to any of the above, check the supply voltage. Thank you for choosing Rako Controls; we hope that you are pleased with your system. Should you require further assistance, please contact us via our website, www.rakocontrols.com, or by calling our customer support helpline on 01634 226666.

Documents / Resources

	rako RMT-PILL 250W Trailing Edge Wireless Dimmer [pdf] Instruction Manual RMT-PILL 250W Trailing Edge Wireless Dimmer, RMT-PILL, 250W Trailing Edge Wireless Dimmer, Trailing Edge Wireless Dimmer, Edge Wireless Dimmer, Wireless Dimmer, Dimmer
---	--

References

- 
downloads.rakocontrols.com/literature/Rako%20Technical%20Information/Programming%20Guides/Raso
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.