

RAPTURE KILO Outemu Blue Switch Keyboard User Manual

Home » RAPTURE » RAPTURE KILO Outemu Blue Switch Keyboard User Manual



Contents

- 1 RAPTURE KILO Outemu Blue Switch Keyboard
- **2 SAFETY INFORMATION**
- **3 TECHNICAL PARAMETERS**
- **4 OVERVIEW**
- **5 KEY SHORTCUTS IN GAME MODE**
- **6 SETTING AND SAVING YOUR CUSTOM**
- **BACKLIGHT**
- **7 CLEANING**
- **8 KEYBOARD SHORTCUTS**
- 9 WARRANTY & SUPPORT
- 10 Documents / Resources
- 11 Related Posts



RAPTURE KILO Outemu Blue Switch Keyboard




SAFETY INFORMATION

- Use the keyboard only according to instructions in this manual.
- · Keep out of the reach of children.
- Do not place any heavy objects on the keyboard.
- Do not disassemble the keyboard. It does not contain any parts serviceable by the user. Have all repairs carried out by an authorized service center?
- Protect the keyboard from moisture, dust, falls, and shocks.
- Do not expose the keyboard to dripping or splashing water. Do not immerse the keyboard in water or any other liquid. Do not place containers filled with water, such as vases, on the keyboard.
- Do not place the keyboard near an open flame, such as candles, heaters, or other heat sources.
- If you experience unusual keyboard overheating or other signs of malfunction, stop using it and contact an authorized service center.
- Keep the keyboard clean. Use only cleaners designed for cleaning and maintaining this type of electronics and accessories to clean the keyboard.
- Do not insert any objects into the keyboard inputs.
- Do not force the USB cable connector into the keyboard input.
- The original version is in the Czech language.

TECHNICAL PARAMETERS

Connection	USB cable
Keyboard type	Mechanical gaming keyboard
	87 keys
Keys functions	Combined FN key
	All n-key rollover keys
Response speed	1000 Hz
Input	5 V dir. current / 0.18 A (USB)
LED keyboard	RGB LED
Mechanical life span of keys	50 million cycles
Length of the USB cable	1.8 m
Compatibility with Operation Systems	Win XP, Win 2000, Win ME, Vista, Win 7, 8, 10 and higher
Dimensions	345 × 120 × 34 mm
Weight	550 g ± 5 g

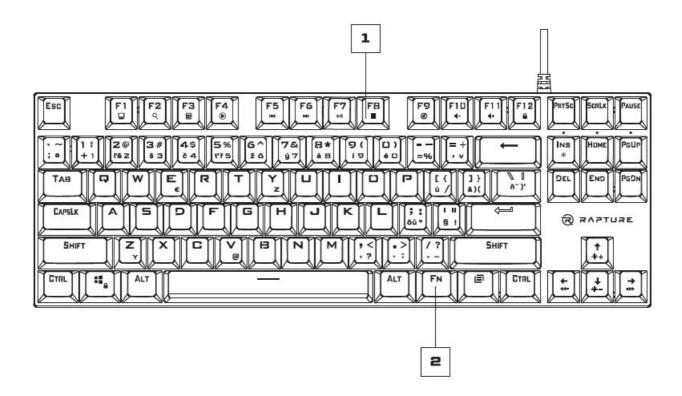

- 1. Function (FI -F12) and media keys (after pressing the FN key)
- 2. FN key (for use as media keys)

INSTRUCTIONS

Plug the USB cable Connector into a free USB port on your computer. The system will automatically install the drivers and the keyboard will be ready to use.

KEY SHORTCUTS IN GAME MODE

There are five preset key backlight modes in game mode. You can find them under the numbers I to 5. To select them, press the FN key and the appropriate number.

- 1. **Game mode 1 (FSP):** press FN + I and the following keys will light up: A, s, D, W, T, +, +, + ESC.
- 2. **Game mode 2 (CF):** press FN +2 and the following keys will light up: A, S, D, W, Ctrl, Shift, Alt, Space, R, G, Q, E, B, 1 to 5, Tab, Fl to F3, Home, End, PgUp, PgDn, PrtSc.
- 3. **The game made 3 (COD):** Press FN +3 and the following keys will light up: Q, W, E, R, T, A, S, D, F, G, C, V, 1 to 7, Ctrl, shift.
- 4. Game mode 4 (RTS): Press FN+4 and the following keys will light up: Q, W, E, R, A, S, D, F, I to 7.
- 5. **Game mode 5 (LOL):** Press FN +5 and the following keys will light up: W, R, A, D, Ctrl, Alt, Shift, ↑, ↓, ←, →

SETTING AND SAVING YOUR CUSTOM BACKLIGHT

The keyboard allows you to set and save custom backlight for selected keys. In total, you can save up to 5 custom backlight modes (instead of game modes I to 5).

- 1. Light Press up. FN + 1, 2, 3, 4, or 5 and the preset keys will
- 2. Press select FN the + keys HOME to be to enter backlit. a mode where you can select the keys to be backlit.

- 3. Press the selected key repeatedly to change the backlight color. It is therefore possible to select a different color for different keys.
- 4. Once you have the selected keys backlit with your preferred color, press FN + HOME to save your custom settings.

Note:

Saving your custom mode overwrites the previous setting.

CLEANING

Keep the keyboard clean. Use only cleaners designed for cleaning and maintaining this type of electronics and accessories to clean the keyboard.

WARNING:

Under no circumstances wash the keyboard in water or any other liquid. Do not use harsh cleaners, gasoline, solvents, chemicals, etc.

KEYBOARD SHORTCUTS

Keyboard shortcut	Meaning
FN+ FI	Launch the "My Computer" screen.
FN+ F2	Launch the "Search" screen
FN+ F3	Launch the calculator application
FN+ F4	Launch the music player
FN+ FS	Skip to previous track
FN+ FS	Skip to next track
FN+ F7	Start playback/ pause playback
FN+ FB	Stop playback
FN+ FB	Mute sound
FN + Flo	Lower the volume
FN+ FII	Increase the volume
FN+ Fl2	Lock/ Unlock all keyboard keys
FN +	Lock/ Unlock Windows

FN + INS	Press repeatedly to select one of the 20 backlight effects.
FN + DEL	Press FN + DEL repeatedly to select a color: red – green – blue – yellow – pink – turq uoise – white.
FN + #-	Press repeatedly to decrease the backlight speed. There are a total of5 levels to choose from.
FN +	Press repeatedly to increase the backlight speed. There are a total of5 levels to choos e from.
↑ *++	Press repeatedly to increase the backlight brightness. There are a total of5 levels to c hoose from.
FN + +-	Press repeatedly to decrease the backlight brightness. There are a total of5 levels to c hoose from.

Note:

You can combine some effects, e.g. set the backlight effect, speed, and backlight brightness.

The use of the WEEE Symbol indicates that this product should not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider, or the shop where you purchased the item.

This product meets all of the related basic EU regulatory requirements. The EU declaration of conformity is available at www.alzashop.com/doc. This product sold in the European Union meets the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).

WARRANTY & SUPPORT

Your new product is protected by our 24-month warranty, or extended warranty (if stated), which you can apply at any of our points of sale. For inquiries, you can use the contact form or one of our international call centers.

Caska	+420 225 340 111
Dautschland	(+49) 0800 181 45 44
Magyararazag	+36-1-701-11111
Clatarraich	+43 720 815 999
Slavanska	+421 257 101e00
Unitad Kingdam	+44 (0)203 514 4411

On-line: www.alzashop.com/contact.



www.rapture-gaming.com

Co. Reg. No. 27092440

Alza.cz a.s., Jankovcova 1622/63, 1 70 00 Prague 7, Czech Republic @ 2022 Alza.cz a.s. All Rights Reserved.

Documents / Resources



RAPTURE KILO Outemu Blue Switch Keyboard [pdf] User Manual

KILO Outemu Blue Switch Keyboard, Outemu Blue Switch Keyboard, Blue Switch Keyboard, Switch Keyboard, Keyboard

Manuals+, home privacy