



RASARY S8 Live Smartphone Live Streaming Sound Device Instructions

[Home](#) » [RASARY](#) » RASARY S8 Live Smartphone Live Streaming Sound Device Instructions 

Contents

1 RASARY

 
- 1.1 RASARY S8 Live Smartphone Live Streaming Sound Device
- 1.2 Introduction to the earphone jack
- 1.3 Connection diagram
- 1.4 Indicator diagram
- 1.5 Key Functions
- 1.6 Introduction to Computer Connection
- 1.7 specification parameter
- 1.8 matters need attention
- 1.9 FCC warning
- 1.10 Documents / Resources
- 1.11 Related Posts

RASARY

RASARY S8 Live Smartphone Live Streaming Sound Device



Introduction to the earphone jack




Live broadcast port: mobile phone live broadcast, recording interface. Monitor socket: 3.5mm three or four earphones can be used, audio output plug My mouth. Microphone jack: Anchor microphone jack. Accompaniment socket: external accompaniment socket, mobile phone, MP3, etc., to play external accompaniment Play, also can insert Musical Instruments as an accompaniment.




PC/OTG/ USB port

Rechargeable, OTG, USB connected computer

 Connection diagram

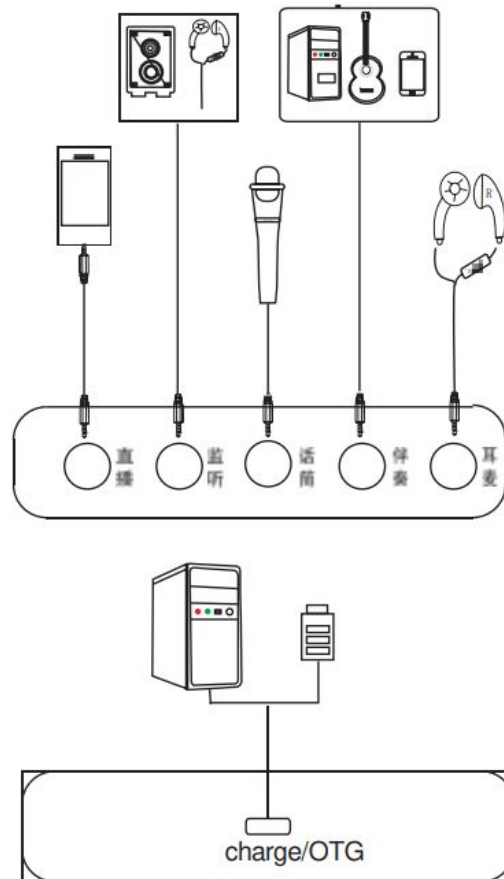

Indicator diagram

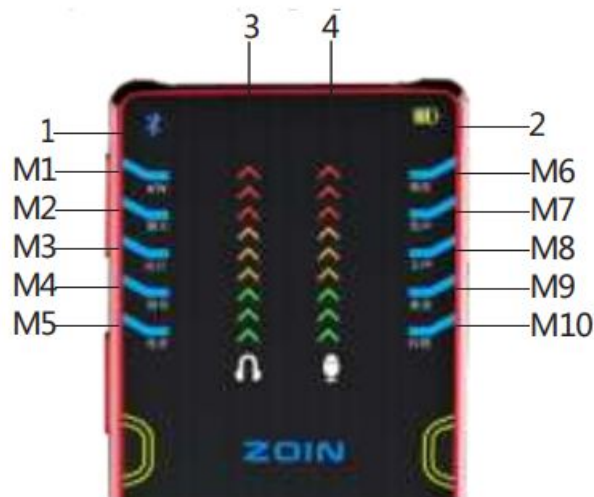 


1. Bluetooth indicator light: the indicator light will blink when pairing the device, and it will be steady on when pairing successfully.
2. power lamp: the green light flashes when charging, the green light is steady on when fully charged, and the green light stops flashing, and the battery capacity will be automatically detected to indicate the power. When fully charged, the power will be green, and about 50% of the power will be orange, and the weak current will be red.
3. Accompaniment lamp: the accompaniment lamp will jump according to the accompaniment sound. From bottom to top, the accompaniment lamp will increase or decrease when the monitoring size is adjusted. Microphone light: it will light up gradually from green to red according to input sound size and reverb level adjustment.

Model lamp

1. M1 KTV mode: With long reverberation effect, it is suitable for karaoke scenes
2. M2 chat mode: the microphone is the original sound effect, suitable for chatting, miaoke and other scenes
3. M3 popular mode: short reverberation time, low reverberation volume, suitable for singing scenes M4 mixing mode: it can be used to connect the microphone to the broadcast process. If this function is enabled, the audience will only hear the output of the microphone, and the accompaniment music will be blocked and the computer terminal will be closed.
4. M5 Electric mode: press the electric key to adjust the tone of 12 files, suitable for electric songs
5. M6 mic Shouting mode: MIC Shouting effect The voice is low and magnetic, suitable for direct broadcast mic Shouting scenes
6. M7 female voice mode: voice output into a female voice, suitable for funny scenes, you can press the tone change key for female voice fine-tuning, a total of 6 female voice fine-tuning
7. M8 male voice mode: human voice output into male voice, suitable for funny scenes, can press the tone change key for male voice fine-tuning, a total of 6 male voice fine-tuning
8. M9 children's voice mode: the voice output becomes children's voice, which is suitable for funny scenes. You can fine-tune children's voice by pressing the tone change key. There are 6 fine-tuning children's voice
9. M10 Dodge mode: when the microphone voice is input, the accompaniment will fade out, and when the speaker's voice ends, the accompaniment will return to normal

 Key Functions

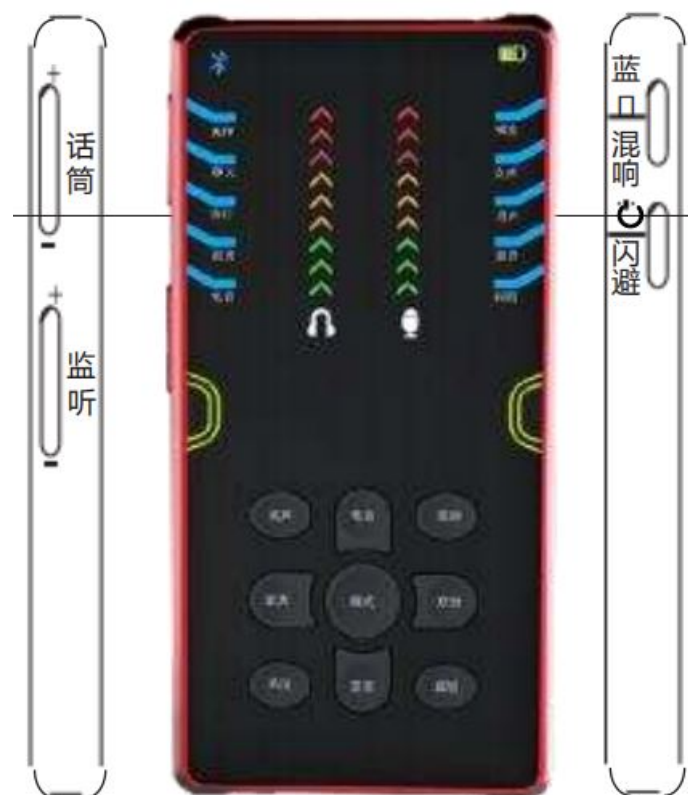

Side key introduction

Microphone adjustment: adjust the volume of the microphone, "+" button to increase the volume of the microphone, "-" button to decrease the volume of the microphone, a total of 9 levels of volume switch. Monitor adjustment: adjust the volume of the monitor, "+" button to increase the volume of the monitor, "-" button to decrease the volume of the monitor. Bluetooth/reverberation button: long press to enable or disable the Bluetooth

function, the paired Bluetooth indicator light will flash, and the Bluetooth indicator light will be steady on when the connection is successful. Short press to start reverb adjustment, a total of 9 reverb can be adjusted cycle.

Power button: long press the switch on and off, and short press the switch on to start dodging function

The primary key to introduce

Mode key: short press mode switch, switch order for KTV, chat, pop, remix, shout mai, female voice, male voice, children's voice; Long press back to original mode electric key: short press for electric tone adjustment, a total of 12 electric tone.

Introduction to Computer Connection

1. Press the power button to power on Connect the "DC5V" interface of the product to the USB interface of the computer with the data cable equipped with this machine
2. (PS: Right click on the speaker in the lower right corner of the menu bar → click on the recording device → Check whether MV- AP82X Audio Effect debug is the only recording device available. If multiple recording devices are enabled during computer use, please disable other recording devices and keep only MV-AP82X as the only recording device available.)
3. If an accompaniment is required, connect other accompaniment devices in the accompaniment hole with the audio cable as an accompaniment. Please adjust the accompaniment size in the accompaniment device according to your personal needs. (Only in the use of computer live broadcast can directly use the music in the computer as an accompaniment, in other cases must access to accompaniment equipment can be accompaniment

specification parameter

1. Broadcast interface (3.5mm) Microphone interface (3.5mm)
2. Accompaniment interface (3.5mm) Speaker interface (3.5mm)
3. Headset port (3.5mm) Sound card charging (USB bidirectional female) Battery capacity: 1200mAh/ 3.7V
4. Power: 3.7WH Sound card charging: DC5V/1A

matters need attention

1. When you hear the voice prompt of low power or low sound, the sound quality is not true, it means that the sound card is running out of power. Low power will affect the sound quality.
2. the use of the interface should be fully inserted, mobile phone equipped with mobile phone case, please remove the mobile phone case, avoid the case against the plug, after connecting to turn two round plug
3. headset or microphone sensitive too high, sound card microphone, monitor and mobile phone volume do not adjust to the maximum, otherwise there will be a loud phenomenon, please adjust the volume according to the actual situation until there is no loud so far.
4. It is not recommended to use speakers for computer broadcast, but to use monitoring earphones, as speakers will cause stress and affect the quality of sound heard by the audience. If want to sing a song to the person beside listen, when using sound box, the microphone and sound box maintain certain distance, avoid avoid sound box to the microphone generation shout or disturb sound.

FCC warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>RASARY S8 Live Smartphone Live Streaming Sound Device [pdf] Instructions LADAMON, 2A6QBLADAMON, S8 Live Smartphone Live Streaming Sound Device, S8, Live S martphone Live Streaming Sound Device</p>
--	---