



# Rayrun BR03-11 LED Remote Controller User Manual


[Home](#) » [RayRun](#) » Rayrun BR03-11 LED Remote Controller User Manual 

## Contents


- [1 Rayrun BR03-11 LED Remote Controller](#)
- [2 Function](#)
- [3 Pair and unpair](#)
- [4 Specification](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

The Rayrun logo, consisting of the word "Rayrun" in a white, sans-serif font, centered within a solid blue rectangular background.

  **Rayrun BR03-11 LED Remote Controller**

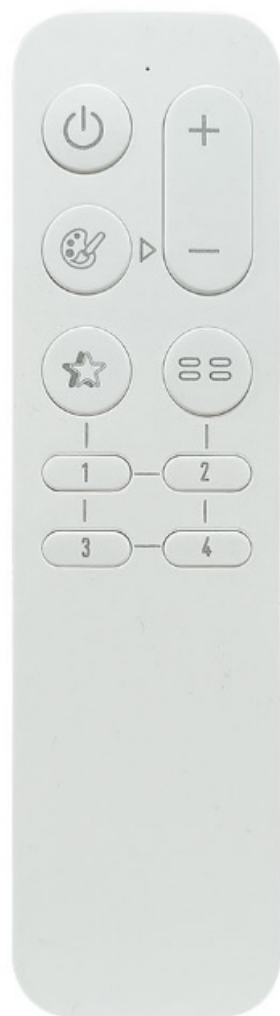



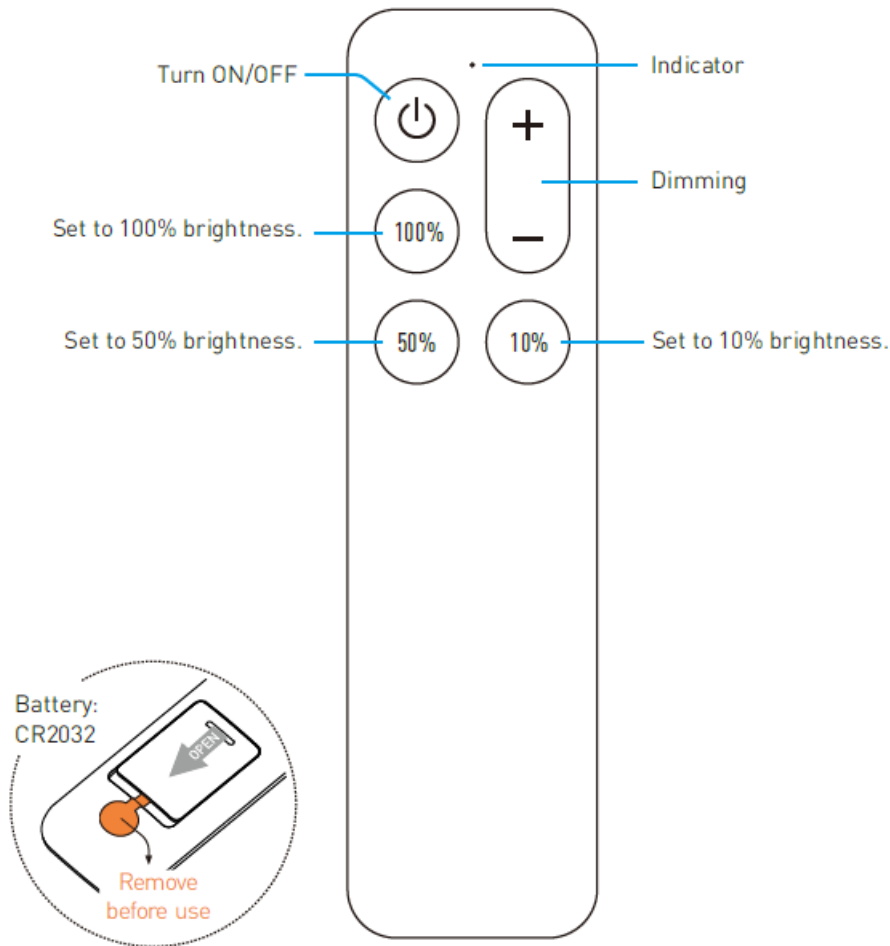

## Function



## Pair and unpair

The remote controller needs to be paired to the receiver to work. Users can pair up to 5 remote controllers to one receiver and each remote controller can be paired to any receiver.


**To pair or unpair the remote to the receiver, please operate with the following steps:**

1. Cut off the power of the receiver and power it on again after more than 5 seconds.
2. Press remote  and  key simultaneously and briefly within 10 seconds after the receiver is powered on.
3. Release all keys, then press  key within 10 seconds to pair the remote to the receiver.
4. To unpair the remote from the receiver, do step 1-2 first, then release all keys and press  key within 10 seconds.

## Specification

- **Working voltage** DC 3V, CR2032 battery
- **Wireless protocol** Umi protocol based on SIG BLE Mesh2.4GHz ISM band
- **Frequency band** < 7dBm
- **Wireless power** < 7dBm
- **Working temperature** -20-55 C(-4-131 F)

Documents / Resources

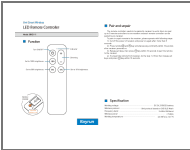	<p><a href="#">Rayrun BR03-11 LED Remote Controller</a> [pdf] User Manual</p> <p>BR03-11 LED Remote Controller, BR03-11, LED Remote Controller, Remote Controller, Controller</p>
---	---

[Manuals+.](#)