



RAZER Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse User Manual

[Home](#) » [Razer](#) » RAZER Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse User Manual 

Contents

- [1 RAZER Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



RAZER Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse



Product Information

Specifications

- Form Factor: Ergonomic
- Wireless Connectivity: USB Wireless Dongle
- Battery Life: Varies based on usage
- DPI Sensitivities: 800, 1800, 3600, 7200, 16000 (default)
- Chroma Lighting: None

Product Usage Instructions

USB Wireless Dongle Storage

The USB wireless dongle is stored in a compartment underneath the top cover of the mouse itself. To access it:

1. Remove the top cover of the mouse by gently pulling it upwards.
2. You will find the USB wireless dongle compartment.
3. To store or remove the dongle, simply place it in or take it out of the compartment.
4. Once done, reattach the top cover of the mouse by aligning it properly and pressing it down until it clicks into place.

Battery Replacement

If the top button of the Razer Basilisk X HyperSpeed is blinking red twice in repeated intervals, it indicates low battery power. To replace the battery:

1. Locate the battery compartment on the underside of the mouse.
2. Slide open the battery cover to reveal the battery compartment.
3. Remove the old battery and replace it with a new one.
4. Close the battery cover by sliding it back into place.

DPI Sensitivity Adjustment

To swap between DPI sensitivities:

1. Locate the DPI cycle button at the top of the mouse.
2. Press the DPI cycle button to switch between the preset DPI settings.
3. The factory default DPI settings are 800, 1800, 3600, 7200, and 16000.
4. If you prefer a custom sensitivity setting, you can fine-tune it using Razer Synapse 3 software.

FAQ

What is the form factor of the Razer Basilisk X HyperSpeed?

The Razer Basilisk X HyperSpeed features an improved ergonomic form.

Where can I find the USB Wireless dongle for the Razer Basilisk X HyperSpeed?

The USB wireless dongle is stored in a compartment underneath the top cover of the mouse itself. Simply remove the cover to store or remove your USB dongle.

Why is the top button blinking red on the Razer Basilisk X HyperSpeed? (Low Power Indicator)

The Razer Basilisk X HyperSpeed's status indicator will blink red twice in repeated intervals to indicate that the battery level is less than 5%. This lighting sequence will repeat until the battery is fully drained. Once you receive this notification, it is time to replace the battery.

How do I swap between DPI sensitivities of the Razer Basilisk X HyperSpeed?

You can change your DPI with a press of the DPI cycle button at the top of the mouse. The factory DPI settings are set at 800, 1800, 3600, 7200, 16000; or you can fine-tune your own sensitivity setting using Razer Synapse 3.


Does the Razer Basilisk X HyperSpeed have Razer Chroma RGB lighting?

No, to maximize the battery life of the Razer Basilisk X HyperSpeed, it does not have the Chroma lighting feature.

Are replacement parts available for this product?

Yes. For more info, please visit our [Replacement PartsPage](#).

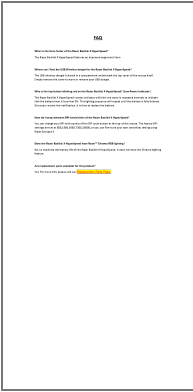

	<p>RAZER Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse [pdf] User Manual</p> <p>Basilisk V3 X HyperSpeed Customizable Wireless Gaming Mouse, Basilisk V3 X, HyperSpeed Customizable Wireless Gaming Mouse, Customizable Wireless Gaming Mouse, Wireless Gaming Mouse, Gaming Mouse, Mouse</p>
---	---

References

- [🐭 9 results for Mice](#)
- [User Manual](#)