




RAZER Intel DPTF Driver Installation Guide

[Home](#) » [Razer](#) » RAZER Intel DPTF Driver Installation Guide 

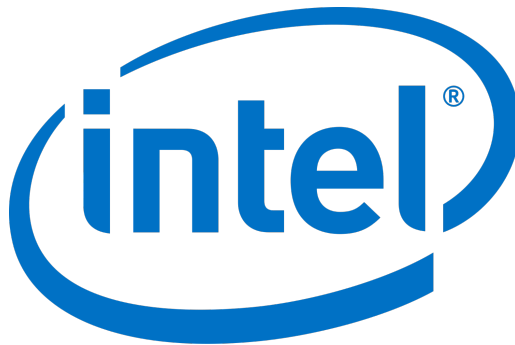

Contents

- [1 DRIVER INSTALLATION INSTRUCTIONS](#)
- [2 INSTRUCTIONS](#)
- [3 INSTALLATION PROCESS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09—03009

DRIVER NAME AND VERSION

Intel DPTF Driver Version 8.5.10103.7263

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please

make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.


1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Ensure that you have downloaded the Intel DPTF Driver first before proceeding to the installation. You can download the driver through the link below: <http://rzt.to/zwVvp>
4. Once you have extracted the file, proceed to the installation steps below.

INSTALLATION PROCESS


1. Double-click on the “setup.exe” file to initiate the installation

Name	Status	Date modified	Type
drivers	↻	01/10/2019 2:20 PM	File folder
Lang	↻	01/10/2019 2:20 PM	File folder
MUP	✓	01/10/2019 2:20 PM	File folder
x64	✓	01/10/2019 2:20 PM	File folder
DIFxAPI.dll	✓	01/10/2019 2:20 PM	Application extens...
setup.cfg	✓	01/10/2019 2:20 PM	CFG File
setup	✓	01/10/2019 2:20 PM	Application
setup.if2	✓	01/10/2019 2:20 PM	IF2 File


2. Upon opening the application, you will be asked to close all Click “Next” to continue.

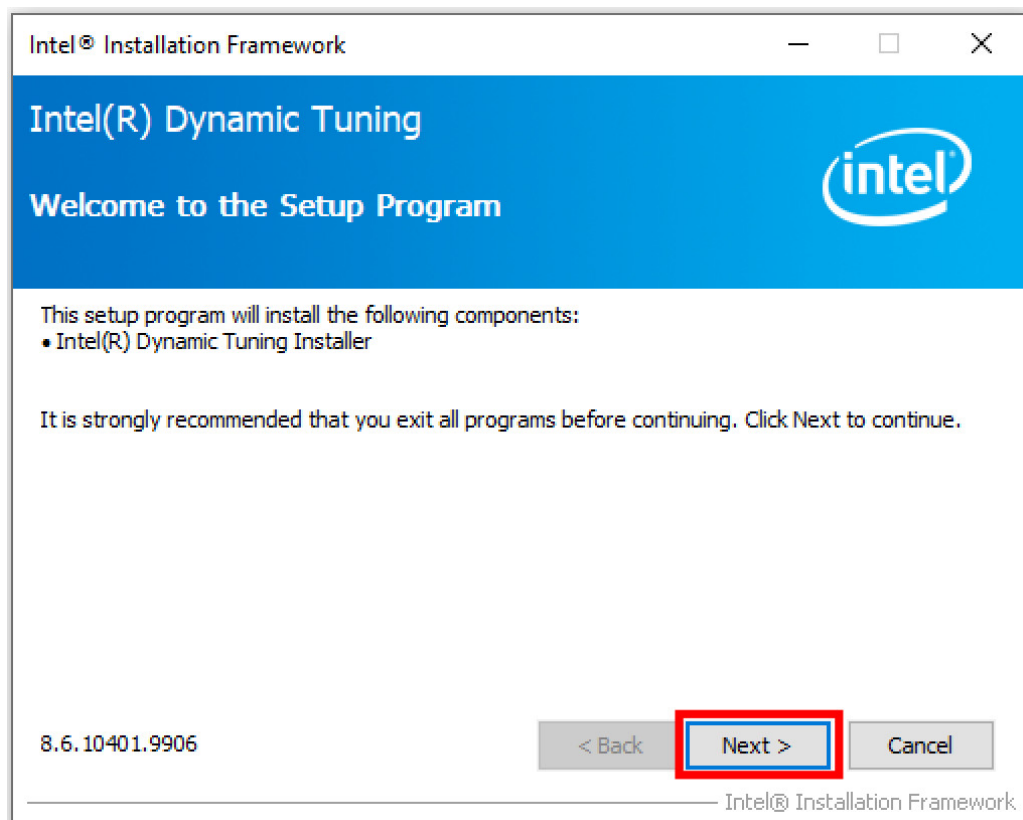


3. The system will prompt you to accept the Click “Yes” to continue.

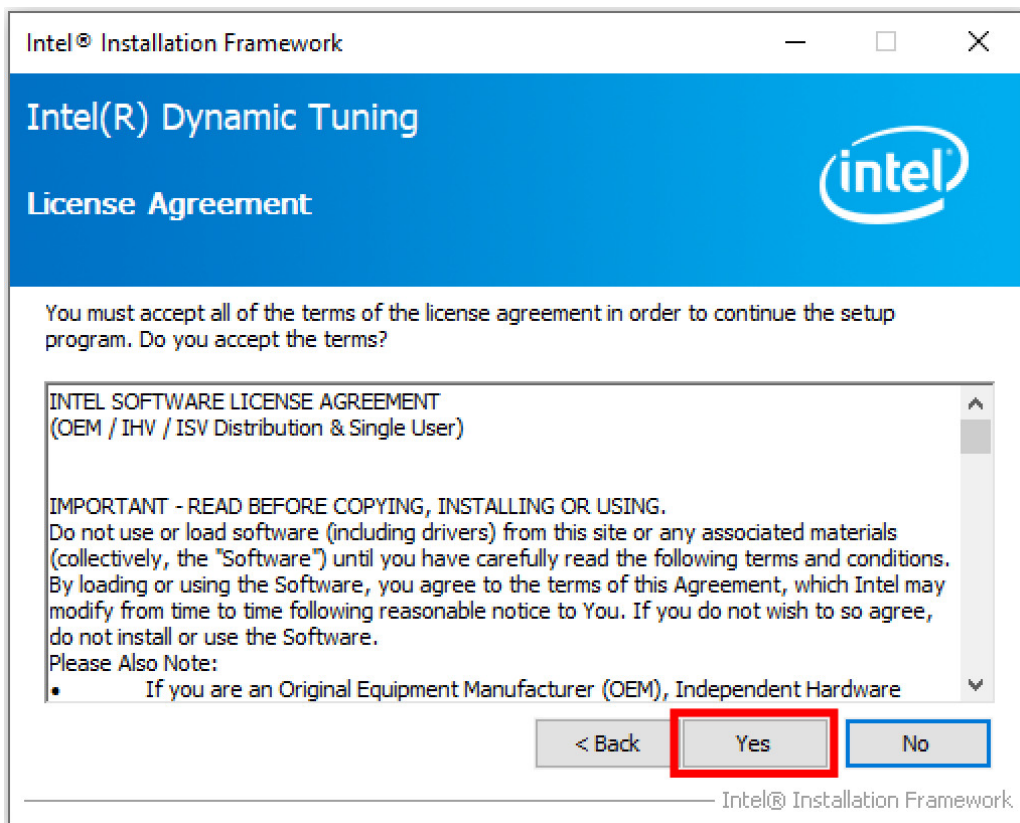


4. A progress window will pop up. Wait until the “Click Next to continue” line appears, then click “Next”.

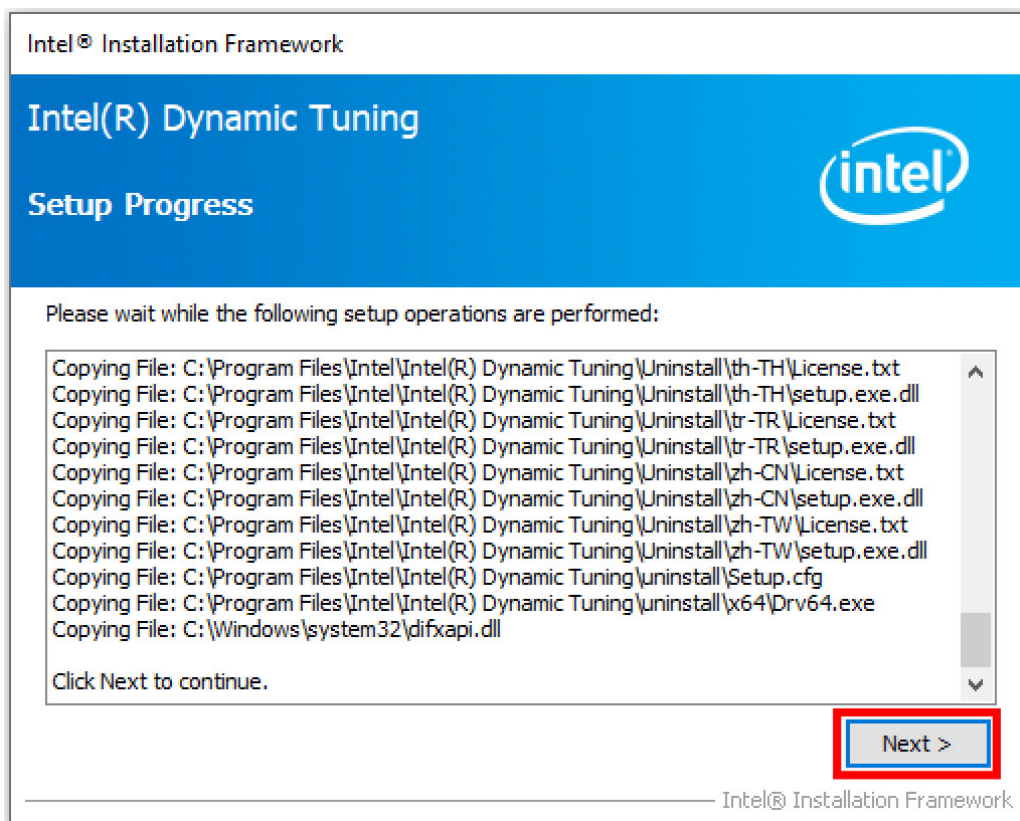

5. Once the setup process is complete, click “Finish” to close the window.

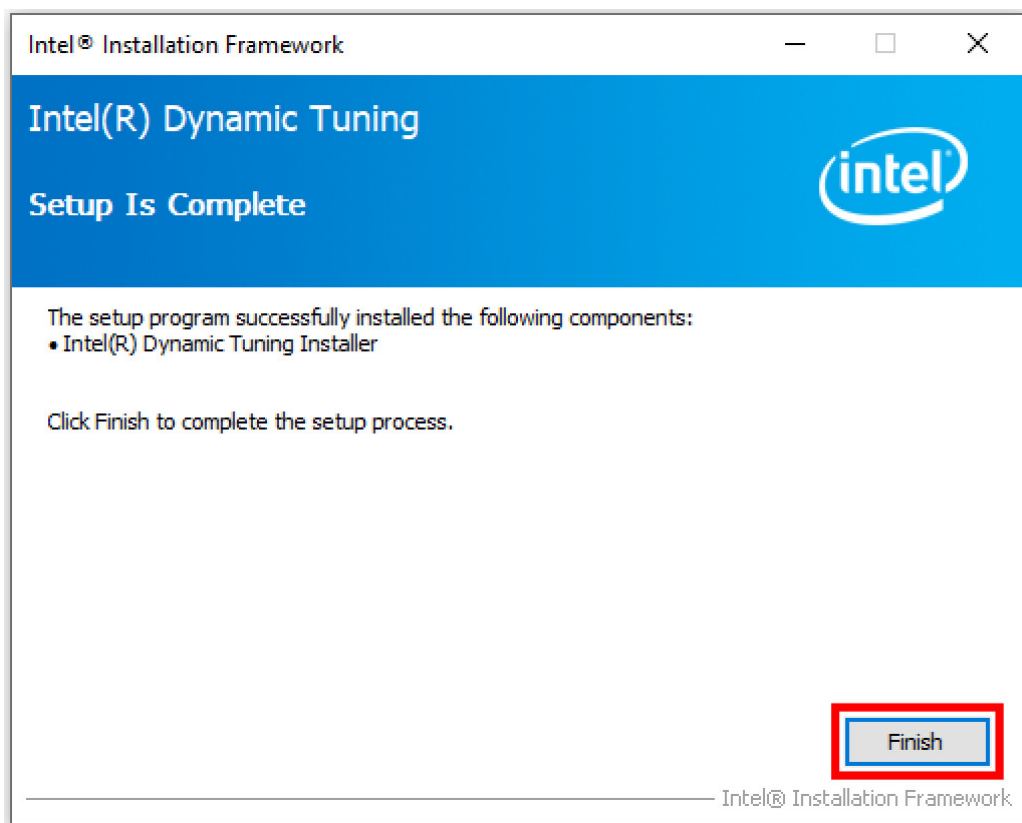

Documents / Resources

	<p>RAZER Intel DPTF Driver [pdf] Installation Guide RAZER, Intel, DPTF Driver, Razer, Blade, 15, Late, 2019, GTX1660, Base, RZ09-03009</p>
---	--