

# RAZER Intel Dynamic Platform and Thermal Framework Driver Installation Guide


[Home](#) » [Razer](#) » RAZER Intel Dynamic Platform and Thermal Framework Driver Installation Guide 

## Contents

- [1 RAZER Intel Dynamic Platform and Thermal Framework Driver](#)
- [2 DRIVER INSTALLATION INSTRUCTIONS](#)
  - [2.1 INSTRUCTIONS](#)
- [3 INSTALLATION PROCESS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



**RAZER Intel Dynamic Platform and Thermal Framework Driver**

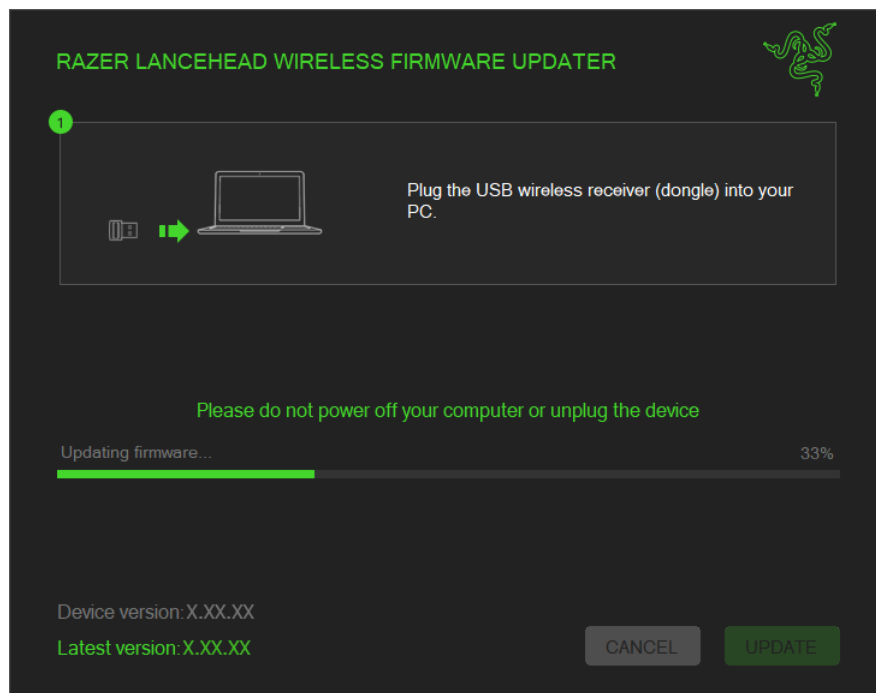

## DRIVER INSTALLATION INSTRUCTIONS

### APPLICABLE MODEL NUMBERS

- RZ09-03101

### DRIVER NAME AND VERSION

Intel Dynamic Platform and Thermal Framework Driver Version 8.6.10401.9906

### INSTRUCTIONS

**Note:** This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to location of your choosing (such as your desktop) to locate the files for the installation process.

<http://rZR.to/XoyaK>


4. Once you have extracted the file proceed to the installation steps below.

### INSTALLATION PROCESS

1. To initiate the initial process, double-click on the setup.exe (Application) as shown in the image below:

Name	Size	Packed	Type	Modified	CRC32
..			File folder		
drivers			File folder	29/7/2019 10:1...	
Lang			File folder	29/7/2019 10:1...	
MUP			File folder	29/7/2019 10:1...	
x64			File folder	29/7/2019 10:1...	
DIFxAPI.dll	323,648	152,837	Application extens...	22/6/2019 8:36 ...	096C102D
setup.cfg	342	241	CFG File	22/6/2019 8:36 ...	492956FF
setup.exe	1,078,536	420,277	Application	22/6/2019 8:36 ...	C8847A1E
setup.if2	2,005	602	IF2 File	22/6/2019 8:36 ...	F2C4DF6D

2. You will be prompted to confirm these changes through the User Account Control message that will appear on your screen. Click “Yes” to confirm, and Intel® Dynamic Platform and Thermal Framework setup will appear. Click “Next” as shown in the image below:

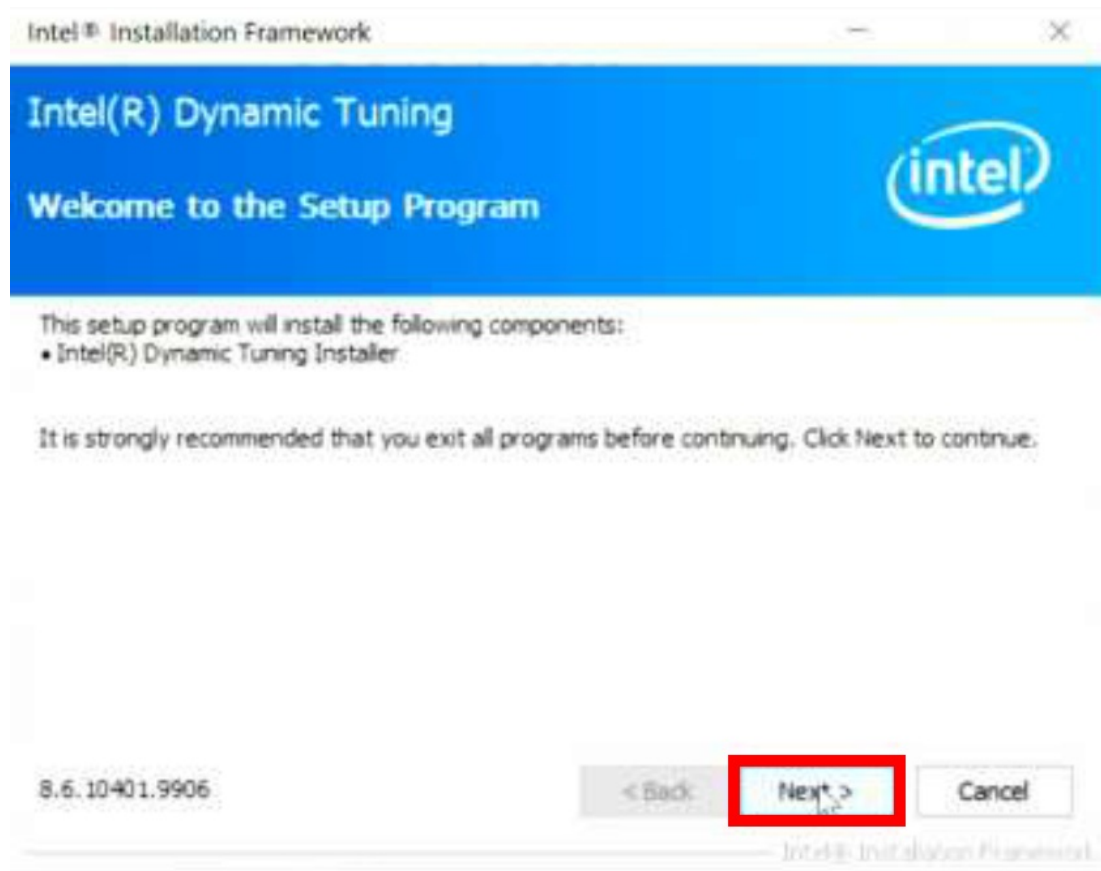

3. Click through the remaining prompts and follow the on-screen instructions. Once complete, click Finish as shown in the image below:



## Documents / Resources

<p><b>INSTALLATION INSTRUCTIONS</b></p> <p><b>1. SYSTEM REQUIREMENTS</b></p> <p><b>2. SOFTWARE REQUIREMENTS</b></p> <p><b>3. INSTALLATION</b></p> <p><b>4. TROUBLESHOOTING</b></p> <p><b>5. SUPPORT</b></p>	<p><a href="#">RAZER Intel Dynamic Platform and Thermal Framework Driver</a> [pdf] Installation Guide Intel Dynamic Platform, and, Thermal, Framework, Driver, RZ09-03101</p>
---	---