



## RAZER PRO CLICK V2 MASTER GUIDE

### Contents [ [hide](#) ]

 
- [1 PRO CLICK V2 Wireless Ergonomic Mouse](#)
- [2 WHAT'S INSIDE](#)
- [3 WHAT'S NEEDED](#)
- [4 LET'S GET YOU COVERED](#)
- [5 TECHNICAL SPECIFICATIONS](#)
- [6 GETTING STARTED](#)
- [7 CONNECT TO YOUR DEVICE](#)
- [8 USING YOUR RAZER PRO CLICK V2](#)
- [9 CONFIGURING YOUR RAZER PRO CLICK V2](#)
- [10 SAFETY AND MAINTENANCE](#)
- [11 LEGALESE](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)

## PRO CLICK V2 Wireless Ergonomic Mouse

From working all day to playing all night, let comfort come naturally with a wireless ergonomic mouse that excels in both fields. Boost productivity with AI tool shortcuts. Dominate your game with cutting-edge precision. Discover the new all-in-one solution for your battlestation and workstation.

## WHAT'S INSIDE

- Razer ProClick V2

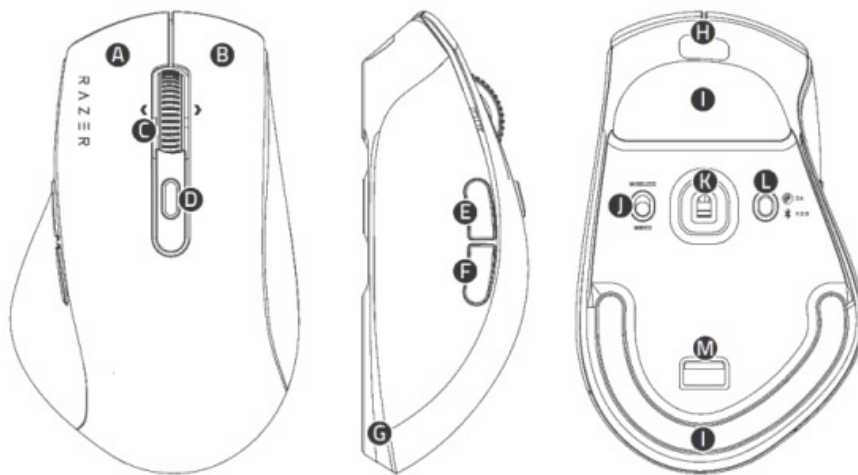

A. Left mouse button

B. Right mouse button

C. Razer HyperScroll tilt wheel / AI Prompt Master button\* (press and hold)

D. Scroll mode button

- Free-Spinning mode

- Tactile Cycling mode

E. Mouse button 5

F. Mouse button 4

G. Razer Chroma RGB underglow

H. USB Type C port

I. PTFE mouse feet

J. Mode switch

- o Wireless (green)

- o Wired/Off (red)

K. Razer Focus Pro 30K Optical Sensor

L. Connectivity button

- o Switch connection (press)

 
(HyperSpeed/Bluetooth)

- o Bluetooth pairing (press and hold)


M. USB dongle compartment

❗ The DPI stages are as follows: 400, 800, 1600 (default), 3200 and 6400. The DPI stages and polling rate can be customized using Razer Synapse.

- 2.4GHz HyperSpeed Wireless dongle

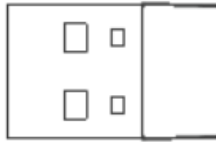

- USB Type A to USB Type C cable

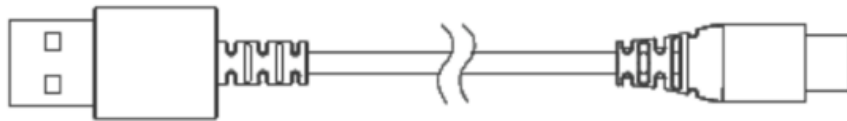 

- Important Product Information Guide

\*Razer Synapse required

## WHAT'S NEEDED

 
### PRODUCT REQUIREMENTS

- USB Type A port or Bluetooth Connectivity

### RAZER SYNAPSE REQUIREMENTS

- Windows® 10 64-bit / MacOS 14 (or higher)  
Internet connection for software installation

## LET'S GET YOU COVERED

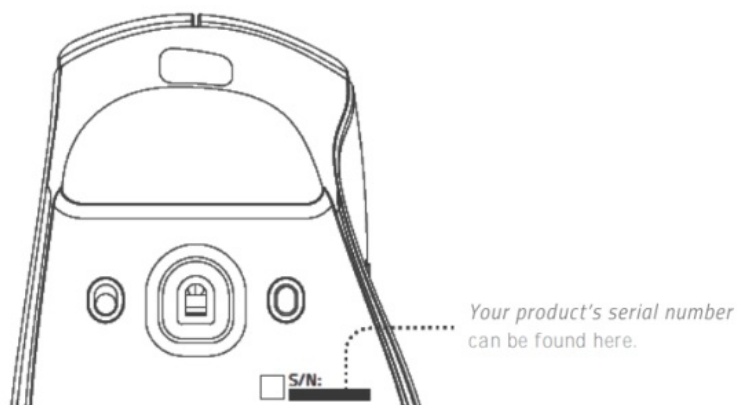

Register your product and score exclusive benefits  
[razerid.razer.com/warranty](https://razerid.razer.com/warranty)


## TECHNICAL SPECIFICATIONS

 FORM FACTOR	Right-handed
CONNECTIVITY	Razer HyperSpeed Wireless (2.4GHz) Bluetooth — up to 3 hosts USB-C wired
LIGHTING ZONES	14 zone underglow
SENSOR	Optical (with TOG)
MAX SENSITIVITY (DPI)	30000
MAX SPEED (IPS)	550
MAX ACCELERATION (G)	40
PROGRAMMABLE BUTTONS	7
SWITCH TYPE	Mechanical switch
SWITCH LIFECYCLE	60-Million Clicks
ON-BOARD MEMORY PROFILES	0
MOUSE FEET	PTFE


CABLE	1.2m USB-A to USB-C cable for charging and wired usage
TILT SCROLL WHEEL	Dual mode with tilt
APPROXIMATE WEIGHT	~110g

## GETTING STARTED

### CHARGE YOUR MOUSE

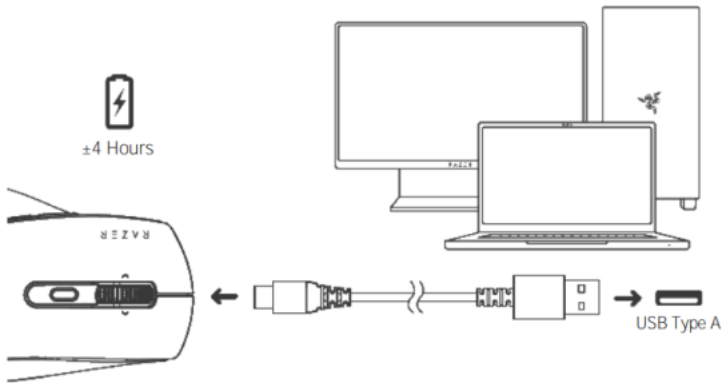

 **!** For best results, connect your mouse directly to your computer’s USB port using the provided cable.

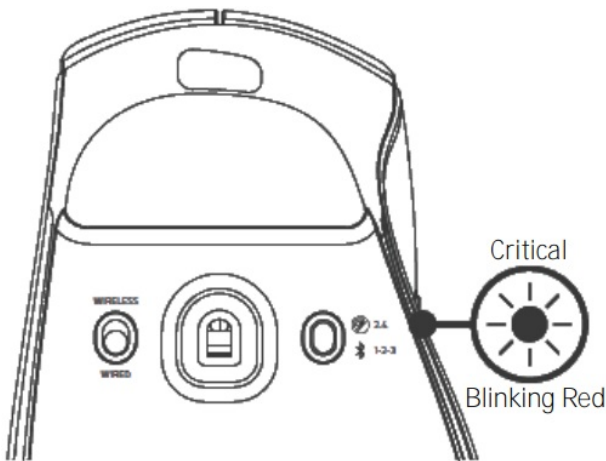


Charging Battery Status	Underglow Status Indicator
Full	Static Green
High	Breathing Green

Mid	Breathing Yellow
Low	Breathing Red

## CONNECT TO YOUR DEVICE
 
### USING WIRED MODE

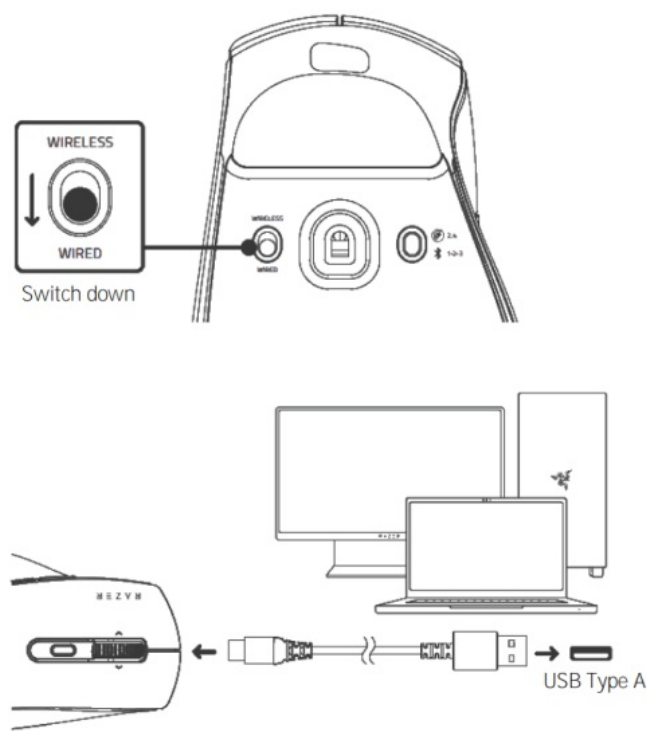


WIRELESS MODES ON 2.4GHz or BLUETOOTH (📶)

Use the Connectivity button to toggle across multiple devices/slots.

Assigned Slot	Underglow Indicator Color
HyperSpeed	White
📶 <sub>1</sub>	Blue
📶 <sub>2</sub>	Green
📶 <sub>3</sub>	Yellow


### USING 2.4GHz WIRELESS MODE

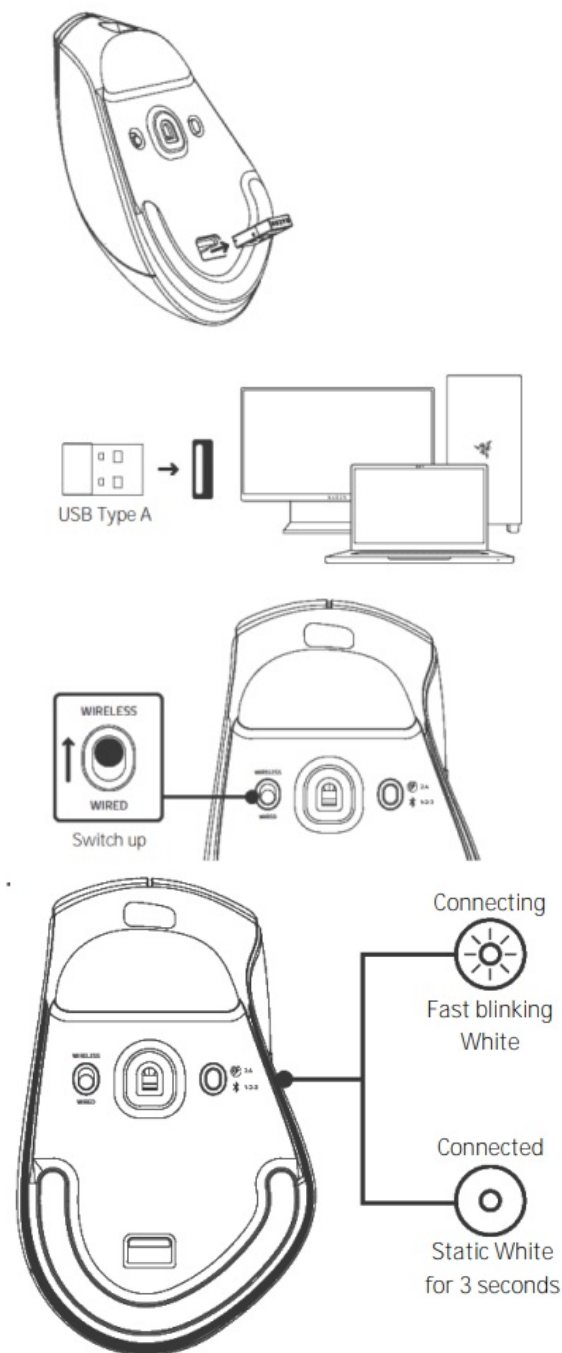 


! Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://razer.com/synapse)

## USING BLUETOOTH MODE

 1.

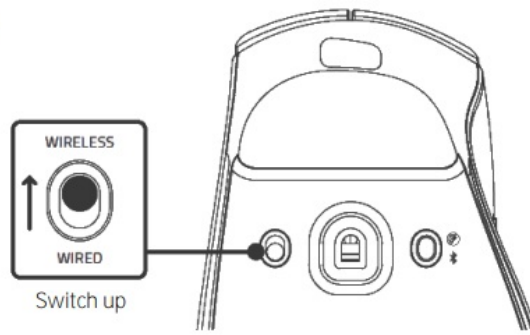

 
2.

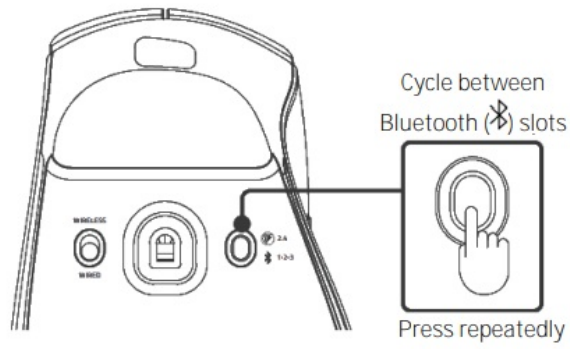


Assigned Slot	Underglow Indicator Color
HyperSpeed	White
⌘ <sub>1</sub>	Blue
⌘ <sub>2</sub>	Green
⌘ <sub>3</sub>	Yellow



 
3.

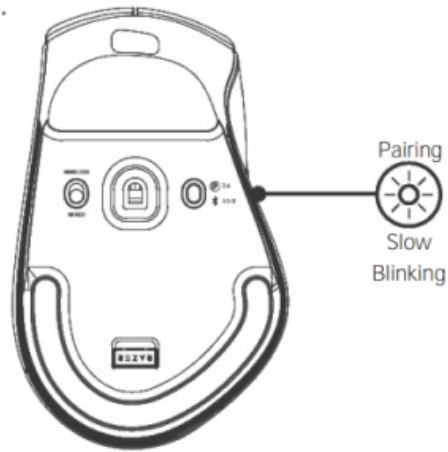

 4.

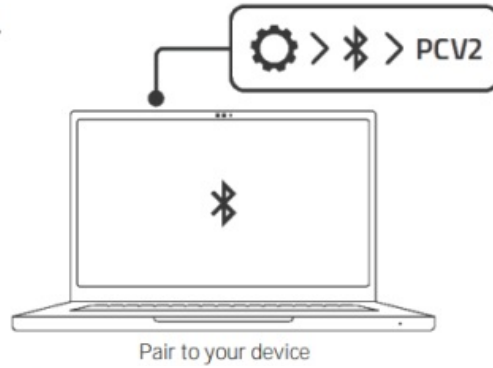


 5.

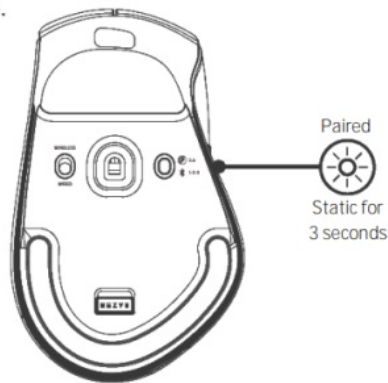


#### Re-Pairing Your Mouse

 1.

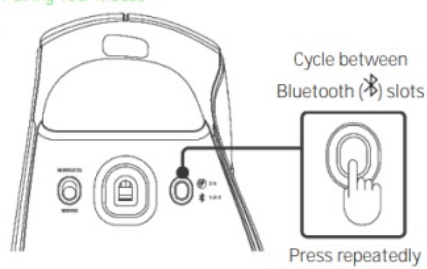


Assigned Slot	Underglow Indicator Color
HyperSpeed	White
Bluetooth 1	Blue
Bluetooth 2	Green

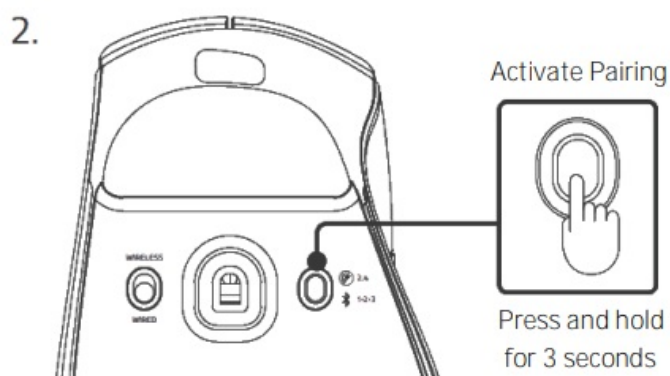 

## USING YOUR RAZER PRO CLICK V2
 
### SWITCHING SCROLL MODES

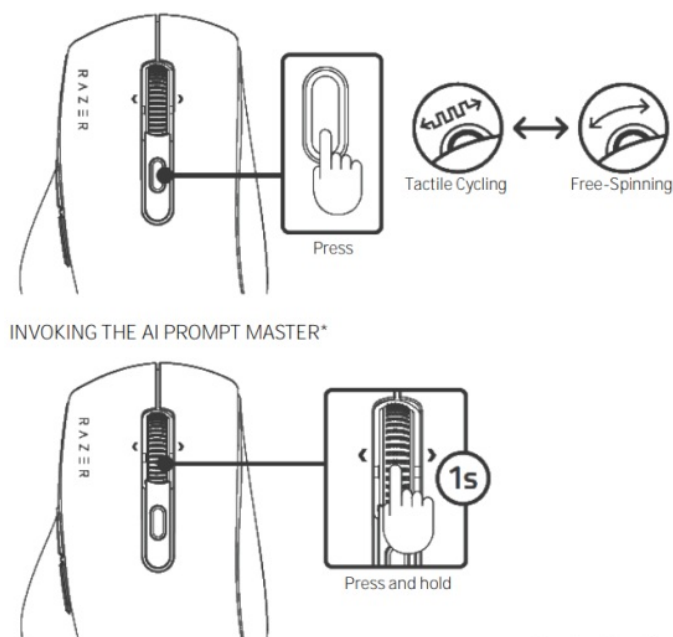

\*Razer AI Prompt Master

❗ Install Razer Synapse when prompted or download the installer at [razer.com/synapse](https://razer.com/synapse). Use the Razer Synapse app to customize your mouse's DPI, lighting, button configurations, and create various profiles suited for different tasks. Find out more about your professional-grade mouse at [support.razer.com](https://support.razer.com)

## CONFIGURING YOUR RAZER PRO CLICK V2

❗ **Disclaimer:** This guide provides an overview of the New Razer Synapse app and may only partially cover some of the features of your device. The New Razer Synapse requires an Internet connection to install, update, access, and save cloud-based

features. Registering for a Razer ID account is recommended but optional. All features listed here are subject to change based on the current version, connected device(s), and supported add-ons.

## SYNAPSE

The Synapse tab is your default tab when you first launch Razer Synapse. Use the following buttons below to navigate the user interface:

~ Minimize

Clicking this button will minimize the app to the taskbar while it runs in the background.

 Maximize

This button expands the browser window to fill the entire screen. To restore the window to its original size, click the maximize button again.

 Close

This button will close all relevant tabs and terminate the application completely.

< Previous Tab


Clicking this button will return you to the last tab you have visited.

> Next Tab

Clicking this button will move you to the next page if you've recently used the Previous Tab button.

 Refresh Tab

This button reloads the current page. Use this if a page isn't displaying correctly or you want to see the latest content.

 Download Update

If this button appears, that means there are changes to the app. Use this if a page isn't displaying correctly or you want to see the latest content.

 **More**

Clicking this button will open a pop-up so you can easily access your Devices, Modules, and Other Installed Apps tabs.

 Settings

Clicking this button will open the Settings tab, so you can quickly change the settings to this app.

 profile

This button will open a pop-up to access the Log In, Feedback, Rate This Software, Add WiFi

 
Device, and Exit options.

## Info

Hovering over this button will pop up an additional information about a feature or function.


## Dashboard

The Dashboard subtab is an overview of your Razer Synapse, where you can access all your Razer devices, modules, and online services.

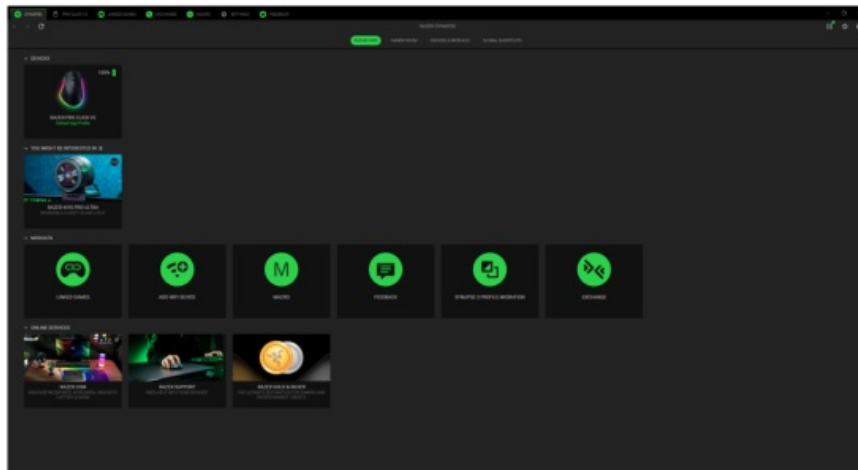

## Gamer Room

 The Gamer Room subtab shows all devices with the Razer Aether Light feature. From here, you can view and manage your Gamer Room-supported devices.

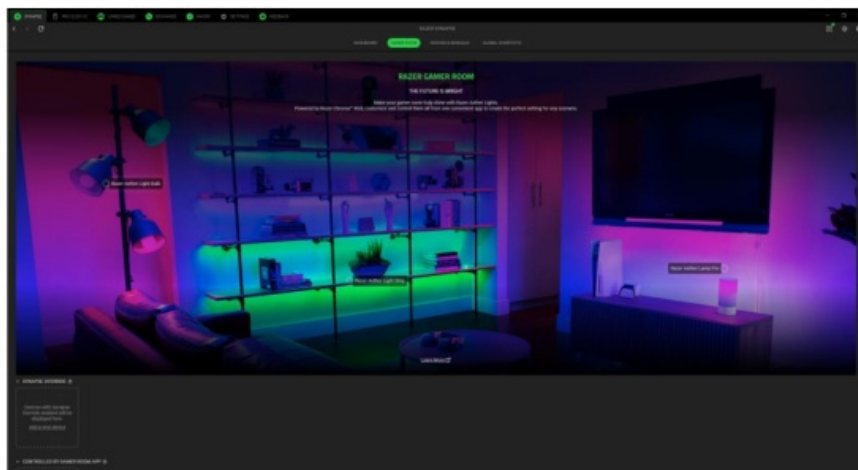

## Synapse Override

 
This section allows you to select and customize your device's lighting and make it react to Chroma-enabled games and Chroma Connect apps using Razer Synapse.

### Controlled By Gamer Room App

This section displays all supported devices controlled remotely by the Gamer Room app.

## Devices & Modules


The Modules subtab displays all installed and available modules for installation.

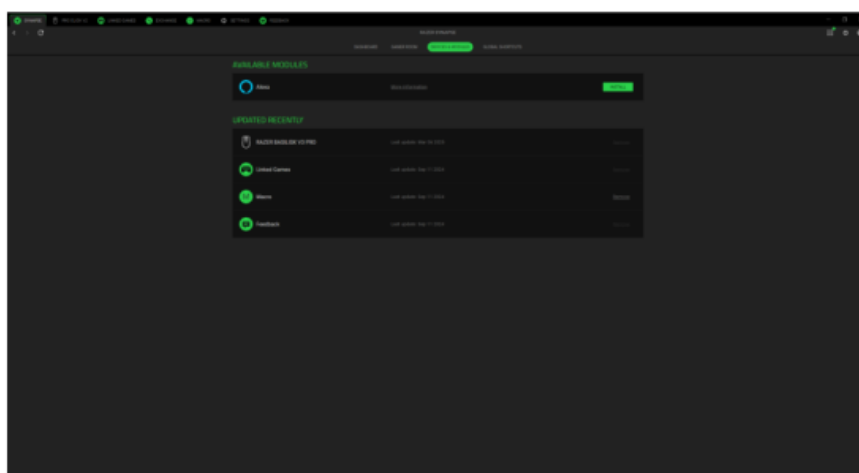

## Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs, which apply across all device profiles.

 ! Only Razer Synapse-enabled device inputs will be recognized.

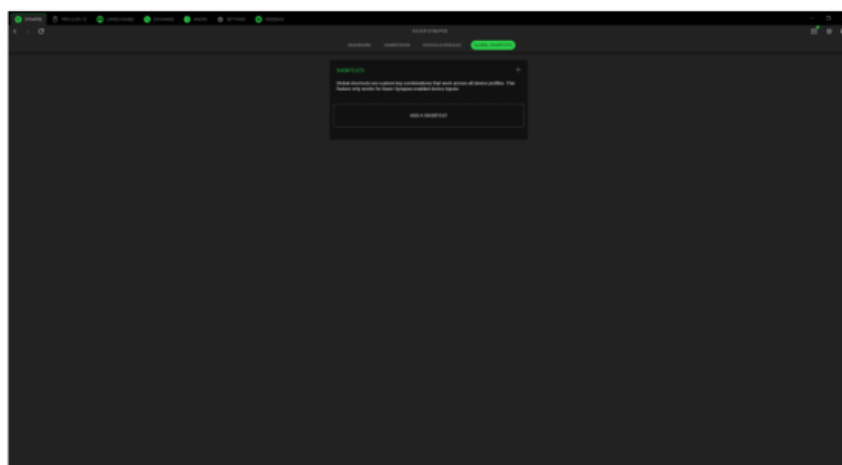


## PRO CLICK V2

The Pro Click V2 tab is the main tab for your Razer mouse. You can change your device settings from here, such as button assignment, stored profiles, DPI sensitivity, polling rate and lighting. Any changes under this tab will be saved automatically to your local system and cloud storage. Use the following buttons below to access your profile options:

**Customize**

 The Customize subtab is for modifying your mouse's button assignments.

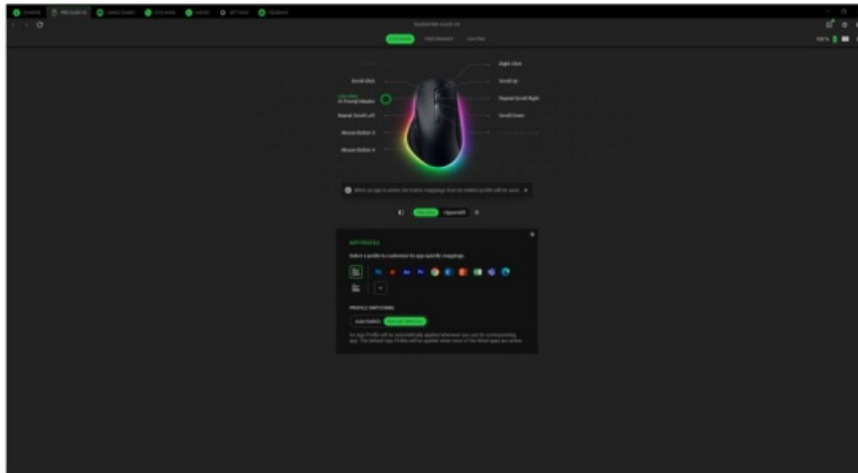

## Hypershift

Hypershift mode is a secondary set of button assignments activated when the Hypershift key is held down. By default, the Hypershift key is assigned to the fn key of your Razer Synapse- supported keyboard. However, you can also set any mouse button as a Hypershift key.

## App Profile

 
An App Profile is a set of button mappings specific to one app. Each profile is distinguished by its related thumbnail. Select a thumbnail to enable or edit a profile, use the delete button (✕) to remove it, or add an app by selecting the add button (+) and then choosing from the available list of apps.

## Profile Switching


You can choose Auto-Switch to change profiles automatically based on the app, or you can select Manual Selection to always keep one profile active.

## Remap Menu

Clicking the Remap Menu button (⌘) will reveal all current assignments for your Razer mouse and allow you to modify them.

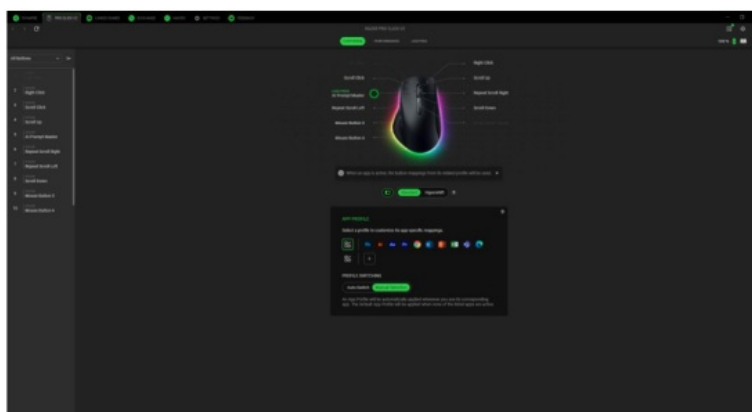

 Alternatively, you can skip to a specific assignment by selecting it on the Customize tab.

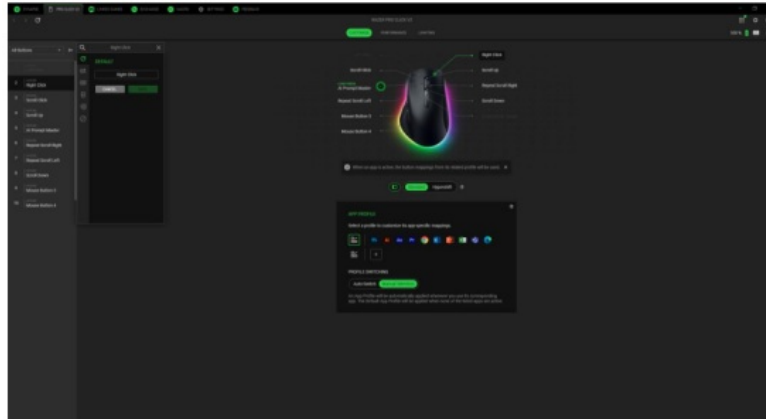

Upon selecting an assignment, you may then change it to one of the following functions:

#### Default

This option enables you to return the selected button to its original setting.

#### AI Launcher

When mapped to a button, this opens a window overlay for issuing AI queries. You can start the overlay on either the AI Prompt Master tab or the AI Chat tab.

#### Keyboard Function

This option changes the button assignment into a keyboard function. You can also enable Turbo mode, which allows you to emulate a repeated keyboard function while the button is held down.

#### Mouse Function

This option substitutes the current button assignment for another mouse function. Listed below are the functions which you can choose from:

- Left Click – Performs a left mouse click using the assigned button.
- Right Click – Performs a right mouse click using the assigned button.
- Scroll Click – Activates the universal scrolling function.
- Double Click – Performs a double left click using the assigned button.
- Scroll Up –
- Scroll Down –
- Mouse Button 4 –
- Mouse Button 5 –
- Scroll Left –
- Scroll Right –

You can also choose to enable Turbo mode in some of the mouse functions, which allow you to emulate repeatedly pressing and releasing said function while the button is held down.

## **Sensitivity**

This function allows you to manipulate the DPI setting of your Razer Basilisk V3 with a touch of a button. Listed below are the Sensitivity options and their description:

- Sensitivity Clutch – Changes the sensitivity to a predefined DPI while the designated button is held down. Releasing the button will return it to the previous sensitivity.
- Sensitivity Stage Up – Increases the current sensitivity by one stage.
- Sensitivity Stage Down – Decreases the current sensitivity by one stage.
- On-The-Fly Sensitivity – Pressing the designated button and moving the scroll wheel either up or down will increase or decrease the current DPI respectively.
- Cycle Up Sensitivity Stages – Increases the current sensitivity stage by one. Once it reaches the highest sensitivity stage, it will return to stage 1 when the button is pressed again.
- Cycle Down Sensitivity Stages – Decreases the current sensitivity stage by one. Once it reaches stage 1, it will return to the highest sensitivity stage when the button is pressed again.

## **Macro**

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting the button function to Macro, you can conveniently execute a chain of commands. This function will only be visible when the Macro module is installed.

## **Inter-device**

Inter-device allows you to change the functionality of other Razer Synapse-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse.

## **Switch Profile**

Switch Profile lets you quickly change profiles and load a new set of button assignments. An onscreen notification will appear whenever you switch profiles.

## **Switch Chroma Effect**

Switch Chroma Effect allows you to easily switch between all Chroma Effect Profiles in



Chroma Studio. This function will only be visible when the Chroma Studio module is installed.

### **Razer Hypershift**

Setting the button to Razer Hypershift will allow you to activate Hypershift mode as long as the button is held down.

### **Launch**

Launch Program lets you open an app or a website using the assigned button. When you select Launch Program, two choices will appear, which require you to search for a specific app you want to open or write the website address you want to visit.

### **Multimedia**

This option allows you to assign multimedia controls to your Razer device. Listed below are the multimedia controls you can choose from:

- Volume Down – Decreases the audio output.
- Volume Up – Increases the audio output.
- Mute Volume – Mutes the audio.
- Mic Volume Up – Increases the microphone volume.
- Mic Volume Down – Decreases the microphone volume.
- Mute Mic – Mutes the microphone.
- Mute All – Mutes both microphone and audio output.
- Play / Pause – Play, pause, or resume current media playback.
- Previous Track – Play the previous media track.
- Next Track – Play the next media track.

### **Windows Shortcuts**

This option allows you to assign your preferred button to a Windows Operating System shortcut command. For more information, please visit: [support.microsoft.com/kb/126449](https://support.microsoft.com/kb/126449)

### **Text Function**

 
Text Function enables you to type a prewritten text with a touch of a button. Simply write your desired text on the given field, and your text will be typed whenever the assigned button is pressed. This function has full Unicode support, and you can also insert special symbols from character maps.

### **Disable**

This option renders the assigned button unusable. Use Disable if you do not want to use the selected button or if it interferes with your gaming.

## Performance

The Performance subtab enables you to adjust the sensitivity, polling rate, and wireless power saving of your Razer mouse.

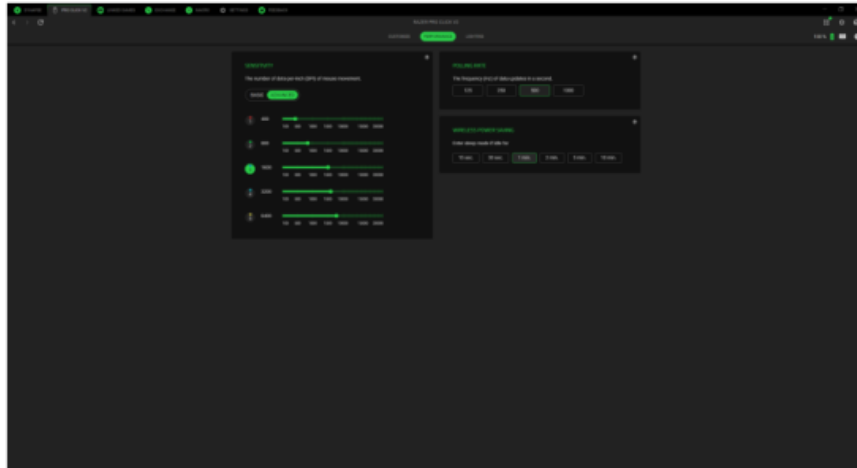

## Sensitivity

Sensitivity refers to the distance the cursor will travel based on how far the mouse moved. The higher the DPI, the farther the cursor will travel, given the same mouse movement distance.

## Sensitivity Stages

A sensitivity stage is a preset sensitivity value. You can create up to 5 different sensitivity stages, which you can cycle through using the DPI cycle button or DPI Stage Up / down buttons on your

Razer mouse. Hovering over any sensitivity stage allows you to toggle each stage or enable the Enable X-Y function for each one.

## Polling Rate

 
You can switch between any of the polling rate options by selecting your desired polling rate. The higher the polling rate, the more often the computer receives information about your mouse's status, effectively reducing input latency and improving your mouse pointer's reaction time.

## Wireless Power Saving

Extend battery life by adjusting when your device goes to sleep after a period of inactivity.

## Lighting

The Lighting subtab enables you to modify your Razer device's light settings.

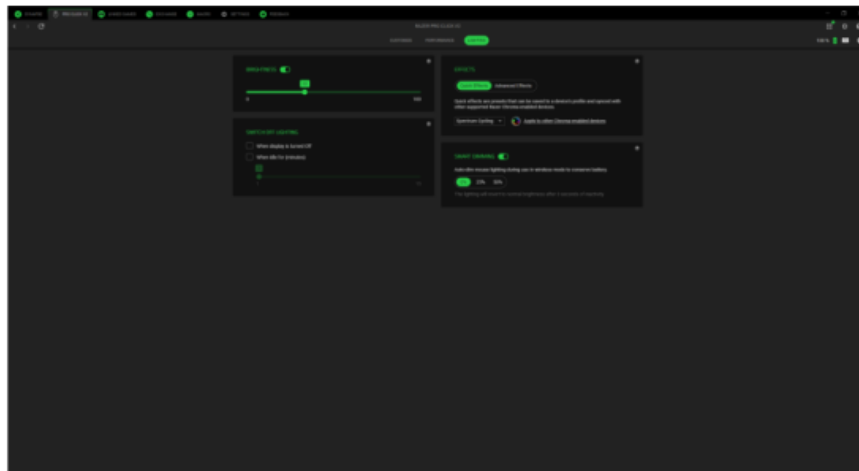

## Brightness




You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.






## Switch Off Lighting


This is a power saving tool which allows you to disable your device's lighting in response to your system's display turning off and/or automatically power down when your device has been idle for a set amount of time.

## Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

	Name	Description	How to set up
	Audio meter	The mouse will light up according to the audio level with a default spectrum of colors	Select a Color Boost level
	Breathing	The lighting will fade in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Fire	The LEDs will light up in warm colors to mimic the motion of flames	No further customization required

	Reactive	The mouse will light up when you click any of the mouse buttons	Select a color and a duration
	Spectrum cycling	The lighting will cycle between 16.8million colors indefinitely	No further customization required
	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The mouse will remain lit in the selected color	Select a color
	Wave	The lighting will scroll in the direction selected	Select a wave direction

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button (  ).

## Advanced Effects

The Advanced Effects option allows you to choose a Chroma Effect Profile you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect Profile, press the Launch Chroma Studio button (  ).

Some lighting effects listed here may not be available for your device. Only other Razer devices that support the selected lighting effect will synchronize. Indicator LEDs are not customizable.

## Smart Dimming




Turn on Smart Dimming to save battery life when your device is in Wireless Mode.

 
## LINKED GAMES

The Linked Games tab allows you to add apps, view peripherals linked to apps, or search for listed apps.

### Games

The Games subtab enables you to link apps to your peripherals. You can also sort apps

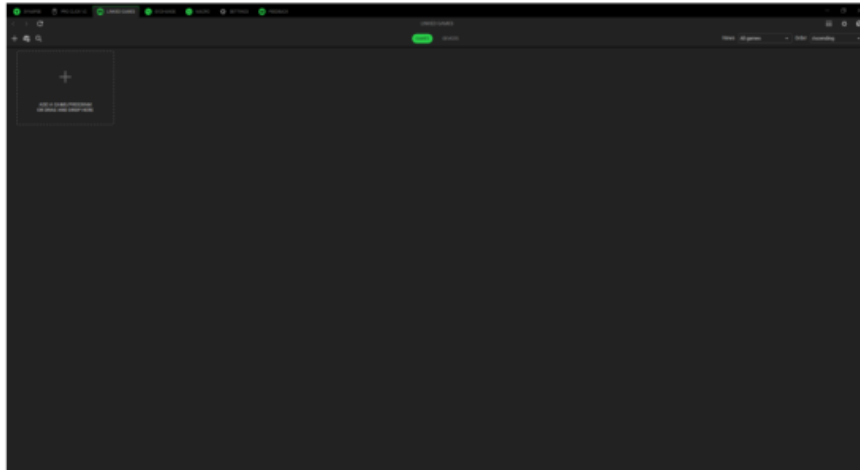


based on alphabetical order, last played, or most played. Apps will still be listed here, even if not linked to a Razer device. To add an app that is not listed on the screen, you can use the Add button (  ) to search for it manually or use the Scan button (  ) to search for it automatically. Click the Search button (  ) to look for a specific game or program from the list.




To link an app to your Razer device, click on it from the list and select a device and its profile. This will automatically set your device to the selected profile whenever you launch the app .

## Devices

 The Devices subtab lets you view your peripherals and determine which apps are linked to them.

By selecting a device, you can see a list of linked apps, add new apps, or remove linked apps. You can filter these apps by using the Views and Order dropdown list. To add an app not listed on your peripheral, you can drag and drop the executable file inside the box or use the Add button (  ) to open the search window. While inside the search window, you can click the Refresh button (  ) to rescan installed apps, the Search button (  ) to look for a specific game or program from the list, or the Browse link to search for the app manually.

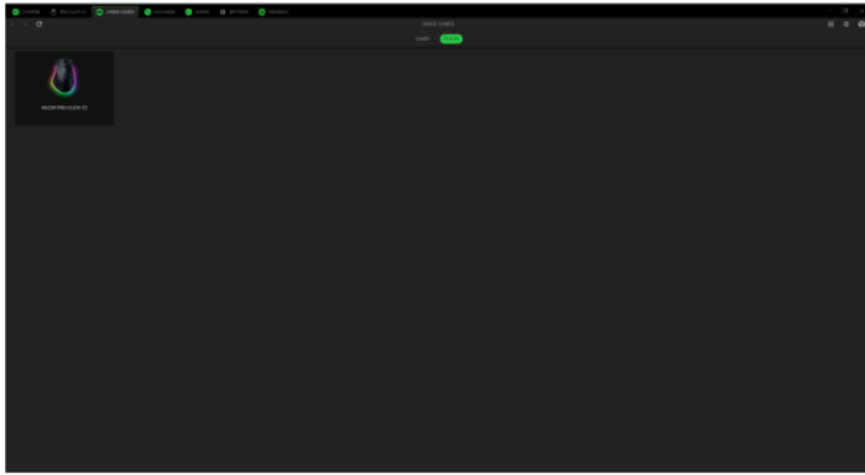


To link an app to your Razer device, click the tick box at the top left corner of the app while inside the search box. This will automatically set your device to the selected profile whenever you launch the app.

## EXCHANGE

 The Exchange tab is a collection of highly requested macros submitted via the Razer Workshop, as well as other contributors from the community.

### Browse

In the Browse subtab, you can view all available macros along with their brief descriptions, upload dates, number of likes, and number of downloads. Selecting a specific macro will show its specific macro commands. To find a particular macro, you can click the Search (🔍) button. Additionally, you can sort the macros by the number of likes, the number of downloads, or by the most recent uploads.

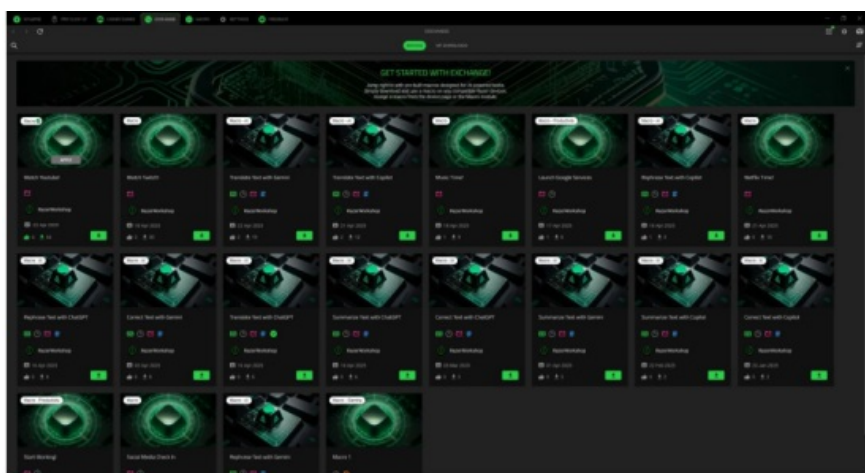


## My Downloads

You can find all the macros you have downloaded on the My Downloads subtab. From here you can select the Apply button to jump straight to the Macro

## MACRO

 If you need to execute a series of complex commands accurately, you need a macro. A macro is a set of recorded keystrokes, button presses, and cursor movements. that you can bind to your device and execute at any time.

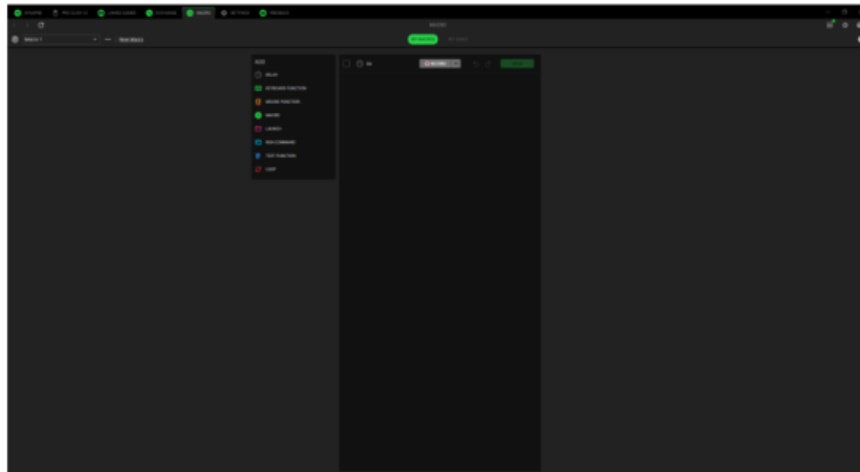

## My Macros

The My Macros subtab allows you to create, edit, and organize these macros to assign them to your Razer device's keys or buttons. Use the following buttons below to access your macro options:

### ▾ **Macro Dropdown Bar**



Clicking this dropdown bar will display all the macros for this device. From here, you can search for a specific macro, sort your macros, create a new folder, and create a new macro. Selecting a macro will enable miscellaneous options such as renaming, duplicating, or deleting the macro.

### ⋮ **Miscellaneous**

Clicking this button will open a pop-up with options related to your current macro.

 
## **New Macro**


Use this link to create and select the new macro quickly.

Once you have a macro, you can record keystrokes, button presses, and cursor movements. by clicking the Record button (  ) or you can customize the macro by clicking the dropdown menu button (  ) before you start recording with the following options below:

- **Start Delay.** Set a short delay between 1 and 5 seconds before the recording starts.
- **Shortcut Key.** Assign a shortcut key to start a macro recording even when Razer Synapse is in the background.
- **Delay Settings.** Set the amount of time between each command.
- **Mouse Movement Tracking.** Enable mouse movement recording and set conditions for


how it is recorded.

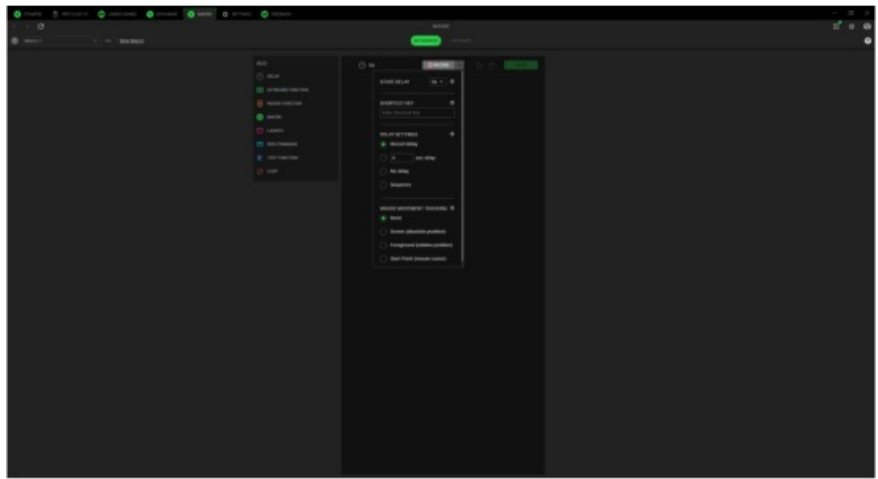


After recording your macro commands, click the Stop button (  ) or press the Shortcut key to end the session. Once you have recorded a macro, you may edit the commands you have entered by selecting each command on the macro screen. Each keystroke or button press is arranged sequentially, with the first command at the top of the screen.

The Insert menu on the left side of the screen allows you to add delays, input keystrokes and button presses, insert an entire macro group within the macro, launch apps, run commands, type texts, and loop a set of commands within the macro.

### Key Binds

 The Key Binds subtab allows you to view the Shortcut Keys for the selected macro. You can bind a macro to the key or button of your choice without leaving the Macro tab by clicking the Assign Macro To Your Devices button (  ).

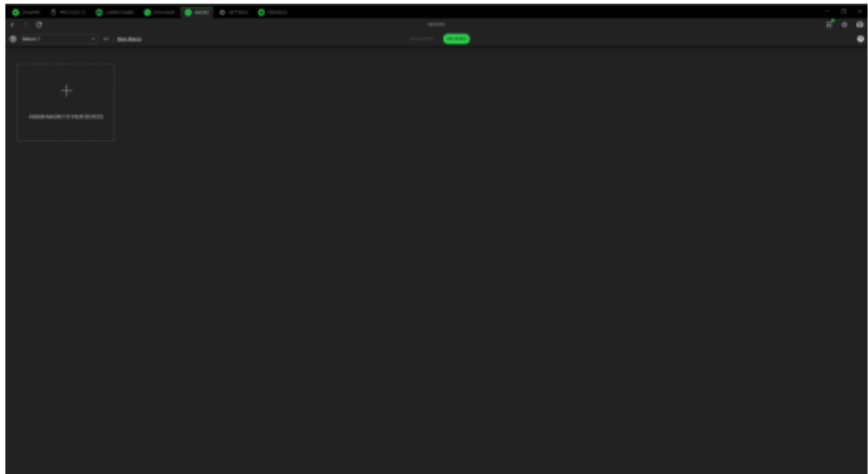

### SETTINGS

 
The Settings tab, accessible by clicking the ( ) button, enables you to configure



numerous options as listed below:

## Synapse

The Synapse subtab is where you can find options that are specific to the app.

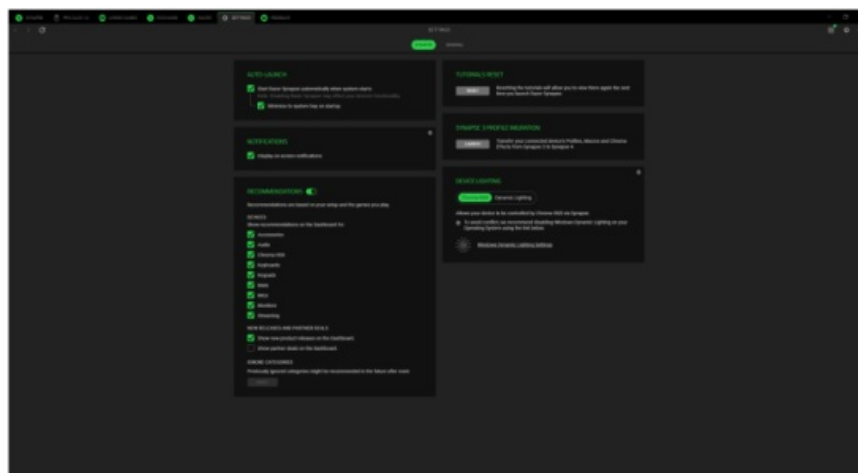

## Auto Launch

The Auto Launch option allows you to configure the startup behavior the app.

## Notifications

The Notifications option allows the app to display on-screen notifications even if you run full-screen apps.

## Recommendations

Recommendations enable us to show the latest products and features on your Dashboard based on your installed devices and linked games.

## Tutorials Reset

Selecting the Reset button will reactivate all tutorials that help you acquaint yourself with Razer Synapse's features.

## Profile Migration

This function lets you transfer all your device's Profiles, Macros, and Chroma Effects from Synapse 3 to the new Synapse.

## Device Lighting

This option lets you choose which app will control the lighting effects on your device.

## General

The General subtab is the section where you can access miscellaneous options for your app, as well as find additional information about the software.



work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level. eye. Note that the tracking beam is NOT visible to the naked human eye and is set on an AlwaysOn mode.

## **COMFORT**

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Pro Click V2.

- Position your keyboard and monitor directly in front of you with your mouse next to it. Place your elbows next to your side, not too far away and your keyboard within easy reach.
- Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow-height.
- Keep your feet well supported, posture straight and your shoulders relaxed.
- During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
- Do not rest your wrists on hard surfaces for long periods. Use a wrist rest to support your wrist while gaming.
- Customize the keys on your keyboard to suit your style of gaming in order to minimize repetitive or awkward motions while gaming.
- Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.

If you should experience any physical discomfort while using your mouse, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

## **MAINTENANCE AND USE**

The Razer Pro Click V2 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

To get the ultimate experience in movement and control, we highly recommend a premium mouse mat from Razer. Some surfaces will cause undue wear on the feet requiring constant care and eventual replacement.

Do note that the sensor of the Razer Pro Click V2 ‘tuned’ or optimized especially for the Razer mouse mats. This means that the sensor has been tested extensively to confirm that the Razer Pro Click V2 reads and tracks best on Razer mouse mats.

## **LEGALESE**

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.” and “Razer Chroma” are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States and other countries. Actual product may differ from pictures. All other trademarks are the property of their respective owners. Warranty not valid outside of product’s intended region.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Pro Click V2 (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event


shall Razer’s liability exceed the retail purchase price of the Product.

**GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be exduded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

**FOR GAMERS . BY GAMERS .**

**Documents / Resources**

	<a href="#">RAZER PRO CLICK V2 Wireless Ergonomic Mouse [pdf]</a> User Guide PRO CLICK V2 Wireless Ergonomic Mouse, PRO CLICK V2, Wireless Er gonomic Mouse, Ergonomic Mouse
---	--

**References**

- [Razer Synapse 4: Advanced Device Control and Lighting Software | Razer United States](#)
- [Razer Warranty Policy | Razer United States](#)
- [Razer ID](#)
- [Keyboard shortcuts in Windows - Microsoft Support](#)
- [Official Razer Support](#)
- [Official Razer Support](#)
- [Razer Synapse 4: Advanced Device Control and Lighting Software | Razer United States](#)
- [User Manual](#)

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.