



RAZER USB 4 Dock User Guide

[Home](#) » [Razer](#) » **RAZER USB 4 Dock User Guide**



 
RAZER USB 4 DOCK MASTER GUIDE

Contents

- 1 WHAT'S INSIDE
- 2 WHAT'S NEEDED
- 3 LET'S GET YOU COVERED
- 4 SETTING UP THE DOCK
- 5 USING THE DOCK
- 6 SAFETY AND MAINTENANCE
- 7 LEGALESE
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

WHAT'S INSIDE

Razer USB 4 Dock

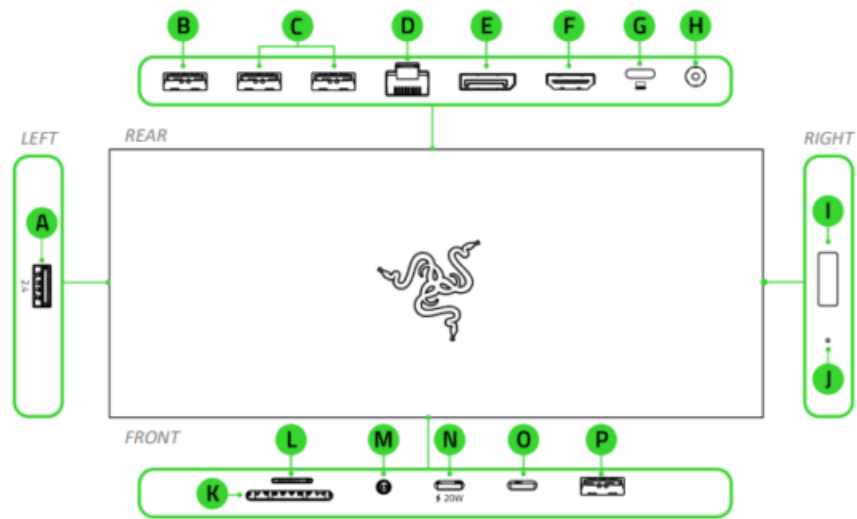

- A. USB 2.0 Type A port*
- B. USB 3.2 Gen 1 Type A port
- C. 2 x USB 3.2 Gen 2 Type A ports
- D. Gigabit Ethernet (RJ-45) port
- E. DP 1.4**
- F. HDMI 2.1 port **
- G. USB 4 Type C port (upstream) †
- H. Power port
- I. Power button
- J. Indicator LED
- K. UHS-II SD card slot
- L. UHS-II MicroSD card slot
- M. 3.5 mm audio combo jack
- N. USB 3.2 Gen 2 Type C Power Delivery (PD) port (downstream) ††
- O. USB 3.2 Gen 2 Type C port (downstream)
- P. USB 3.2 Gen 2 Type A port †††

*Recommended for wireless device dongle (not included) connection.

**Supports single display up to 4K @ 120Hz and dual displays up to 4K @ 60Hz. Resolution may vary depending on the specification of your system and external display(s).

 
† Offers Power Delivery 3.0 charging up to 100W.

†† Supports Power Delivery (PD) charging up to 20W.

††† Capable of charging mobile devices using Battery Charging 1.2.

FOR GAMERS. BY GAMERS. ™

- USB 4 Type C to Type C cable



- Power adapter + Regional power cord ‡
 - Important Product Information Guide
- ‡ May vary for specific regions.

WHAT'S NEEDED

- PC with a USB 4 Type C port or compatible USB 4 Type C devices**
- AC power outlet

**For optimal performance, it's recommended to connect the dock to a USB 4 Type C port. Please check your

 
device's manufacturer for detailed USB device support. Full compatibility list available on: support.razer.com

LET'S GET YOU COVERED



Register your product and score exclusive benefits


razerid.razer.com/warranty

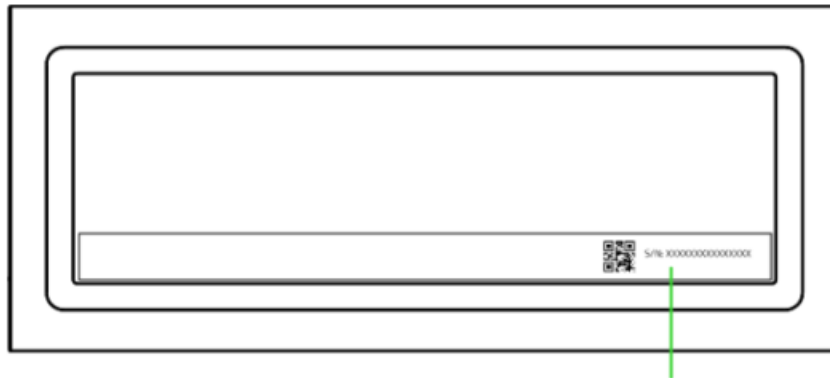

Your product's serial number can be found here.


SETTING UP THE DOCK

 1. With the power cord attached to the power adapter, connect it to the dock's Power port and plug it into a power outlet.

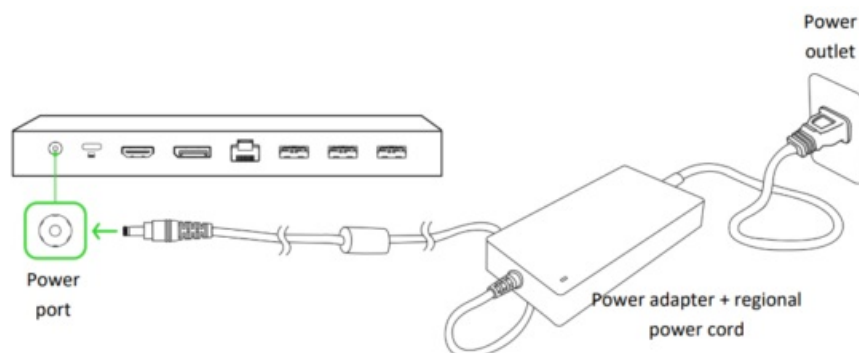

 Use the appropriate power cord for your region.

 2. Connect your system to the USB 4 Type C port (upstream).

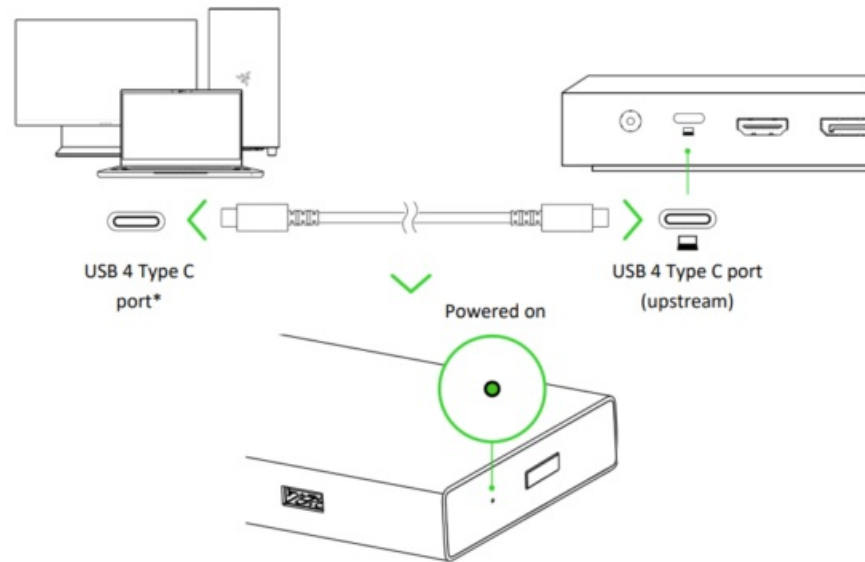


 *For optimal performance, it's recommended to connect the dock to a USB 4 Type C port.
Please check your device's manufacturer for detailed USB device support.



 
 



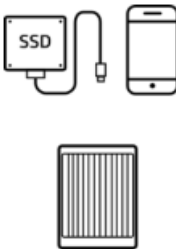 
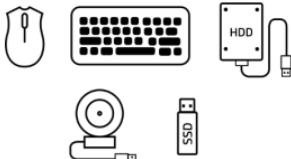 
USING THE DOCK

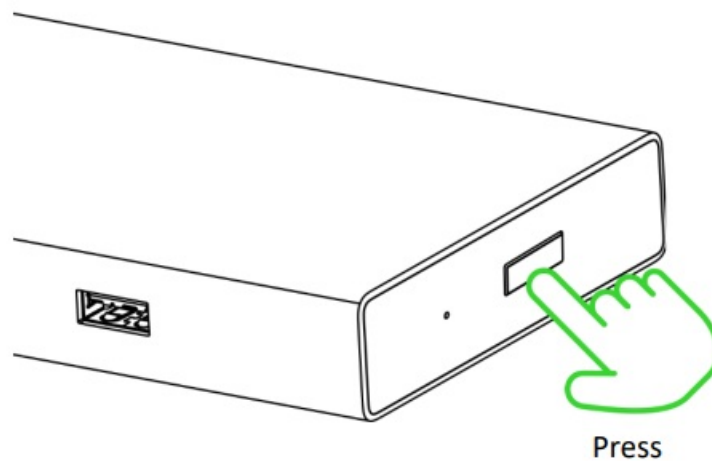POWER ON / OFF

Press the power button to power on / off the dock.

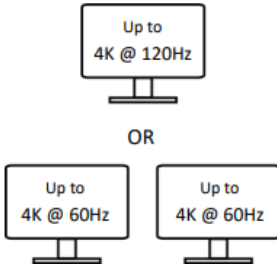

CONNECTING YOUR DEVICE(S)

ITEM	SUPPORTED DEVICES	FUNCTION / DESCRIPTION
USB 2.0 Type A port		For a USB Type A wireless dongle of a wireless device and data transfers up to 480 Mb/s
USB 3.2 Gen 1 Type A port		For USB Type A devices and data transfers of up to 5 Gb/s (via USB 3.2 Gen 1) or 10 Gb/s (via USB 3.2 Gen 2)
2 x USB 3.2 Gen 2 Type A ports		For router or modem connection at 10/100/1000 Mb/s Half/full duplex transmission
Gigabit Ethernet (RJ-45) port		For router or modem connection at 10/100/1000 Mb/s Half/full duplex transmission
DP 1.4 HDMI 2.1 port		Set up a single display up to 4K @ 120Hz or go for dual displays with up to 4K @ 60Hz (each) Resolution may vary depending on your display(s) and system's specifications.
USB 4 Type C port (upstream)		Connect to a USB 4 Type C host device/computer that supports USB Power Delivery (PD, up to 100W for charging devices)
UHS-II SD and MicroSD card slots		Insert an SD or MicroSD card to copy files to and from your device
3.5 mm audio combo jack		For an audio speaker or a microphone; or a headphone
USB 3.2 Type Gen 2 Power Delivery (PD) port USB 3.2 Type C port		For USB Type C devices and PD supported charging up to 20W For a USB Type C device that supports data transfer of up to 10 Gb/s and 1.5A power output
USB 3.2 Type A port		For USB Type A devices that support data transfer of up to 10 Gb/s or charging devices

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer USB 4 Dock, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting doesn't work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Don't take apart the device, and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.

Don't place objects on top of the device.

Only use the provided cable, power cord, and adapter with your device, and opt for accessories that are either made by or approved by Razer. Non-standard accessories may not provide adequate power delivery or data transfer rates and may affect the dock's performance and safety.

When disconnecting any device, avoid abruptly tugging on its cable wire. Instead, gently unplug it from its connector.

Make sure that the device is positioned in a well-ventilated area and that there's enough space around it for air circulation.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE

The Razer USB 4 Dock requires minimum maintenance to keep it in optimum condition. Once a month, we recommend that you power off the device, disconnect it from the power adapter and computer, unplug all connected devices, and clean it using a soft cloth or cotton swab to prevent dirt buildup. Don't use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers." and "Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States and other countries. Actual product may differ from pictures. All other trademarks are the property of their respective owners.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer USB 4 Dock (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FOR GAMERS. BY GAMERS.™



[RAZER USB 4 Dock](#) [pdf] User Guide

USB 4 Dock, Dock

References

- [Razer Warranty Policy | Razer United States](#)
- [Razer ID](#)
- [support.razer.com](#)
- [support.razer.com/](#)
- [Razer ID](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.