



Razor SLA Controller Replacement Instruction Manual

[Home](#) » [Razor](#) » Razor SLA Controller Replacement Instruction Manual 

Contents

- [1 Razor SLA Controller Replacement Instruction Manual](#)
- [2 Required Tool: \(Not included\)](#)
- [3 Step 1](#)
- [4 Step 2](#)
- [5 Step 3](#)
- [6 Step 4](#)
- [7 Step 5](#)
 - [7.1 Reverse the steps.](#)
- [8 Read More About This Manual & Download PDF:](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Razor SLA Controller Replacement Instruction Manual



Required Tool: (Not included)

 
A. Phillips screwdriver



CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck. Remove the deck from the unit and set aside

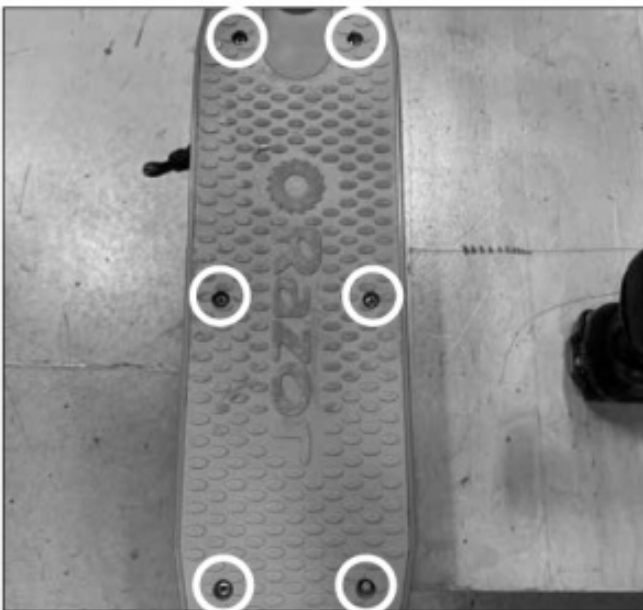

Step 2

 
Locate and disconnect the battery connector from the controller.



Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday – Friday 8:00am – 5:00pm Pacific Time.

Step 3

Using a Phillips screwdriver, remove two (2) screws from the controller bracket. Remove the bracket and controller from the unit and set aside.

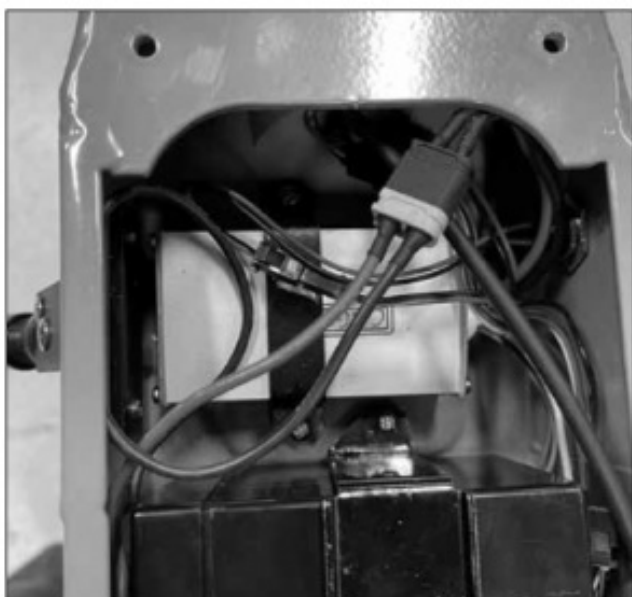

Step 4

Continue to disconnect the rest of the connectors from the controller.



Step 5

 
Reverse the steps.

- Reattach the battery bracket on top of the battery.
- Reconnect the battery to the controller.
- Reposition the deck and attach with the screws that were removed in Step 1.

ATTENTION: Charge battery 8 hours before using.

Read More About This Manual & Download PDF:

Documents / Resources

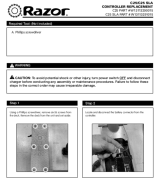	<p>Razor SLA Controller Replacement [pdf] Instruction Manual SLA Controller Replacement, C25 PART W13113290015, C25 SLA PART W13113291015</p>
---	---

References

-  [Change Country / Region on Razor.com](#)