

Razor W15110710015 Vector Controller Instruction Manual

Home » Razor » Razor W15110710015 Vector Controller Instruction Manual



Contents

- 1 W15110710015 Vector
- **Controller**
- 2 WARNING
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

W15110710015 Vector Controller

VECTOR CONTROLLER REPLACEMENT PROCEDURES PART # W15110710015

Required Tools: (Not included)

A. Phillips screwdriver



CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove two (2) screws fr om the battery cover on the right side of the unit.

Step 2

Locate and disconnect the battery and charger port connectors from the controller.



Step 3Continue to disconnect the rest of the connectors from the controller.

Step 4

Using a Phillips screwdriver, remove one (1) screw loc ated at the front of the controller and remove the controller.





Step 5 Reverse the steps.

ATTENTION: Charge battery 8 hours before using.



Visit our website at www.razor.com
or call toll-free at 866-467-2967

Monday – Friday 8:00am – 5:00pm Pacific Time.

Documents / Resources



Razor W15110710015 Vector Controller [pdf] Instruction Manual W15110710015 Vector Controller, W15110710015, Vector Controller, Controller

References

Change Country / Region on Razor.com

Manuals+,