


 **Razor**
W15128785015 16
Controller
Replacement

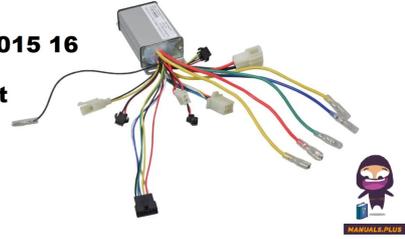

Razor W15128785015 16 Controller Replacement User Guide


[Home](#) » [Razor](#) » [Razor W15128785015 16 Controller Replacement User Guide](#) 

Contents

- [1 Razor W15128785015 16 Controller Replacement](#)
- [2 Specifications](#)
- [3 Step 1: Remove Battery Cover](#)
- [4 Step 2: Remove Battery Cover](#)
- [5 Step 3: Disconnect Connectors](#)
- [6 Step 4: Remove Controller](#)
- [7 Step 5: Reconnect Controller Wires](#)
- [8 Step 6: Reassemble](#)
- [9 FAQs](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



Razor W15128785015 16 Controller Replacement

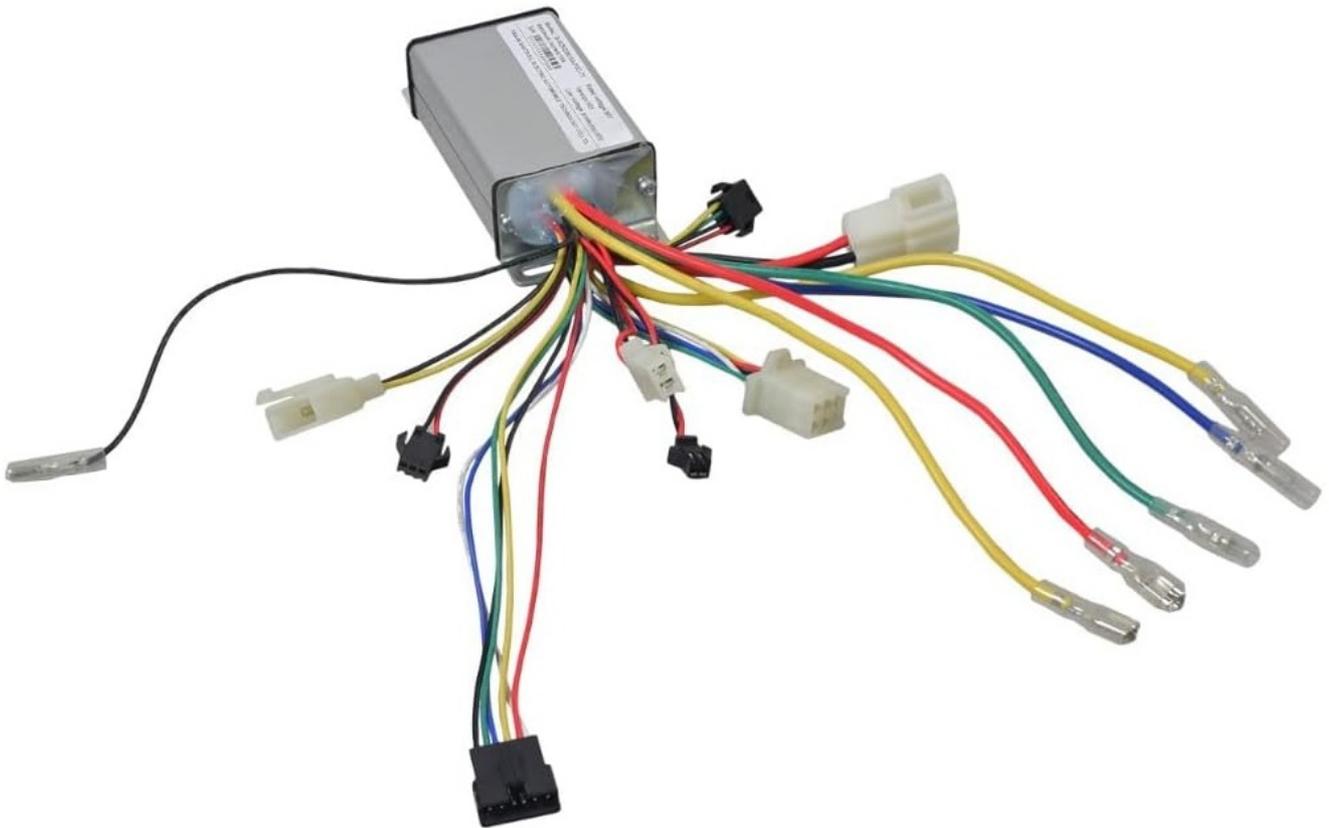

Specifications


- Product Name: Rambler 16 Controller Replacement
- Part Number: W15128785015

Required Tools: (Not included)

- A. Phillips screwdriver


Step 1: Remove Battery Cover

Using a Phillips screwdriver, remove seven (7) screws from the side of the battery cover with the power switch.

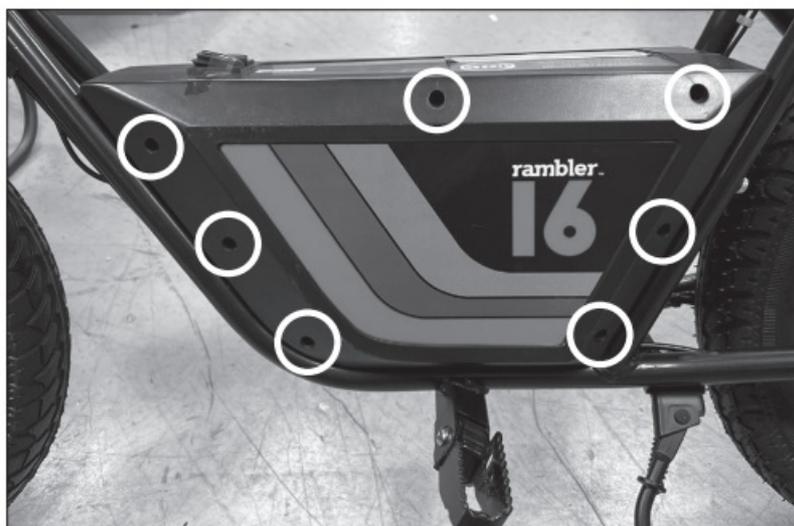


Step 2: Remove Battery Cover

Remove four (4) screws, two (2) at the front and two (2) at the back of the battery cover. Pull the cover out. Be careful not to damage the wires.

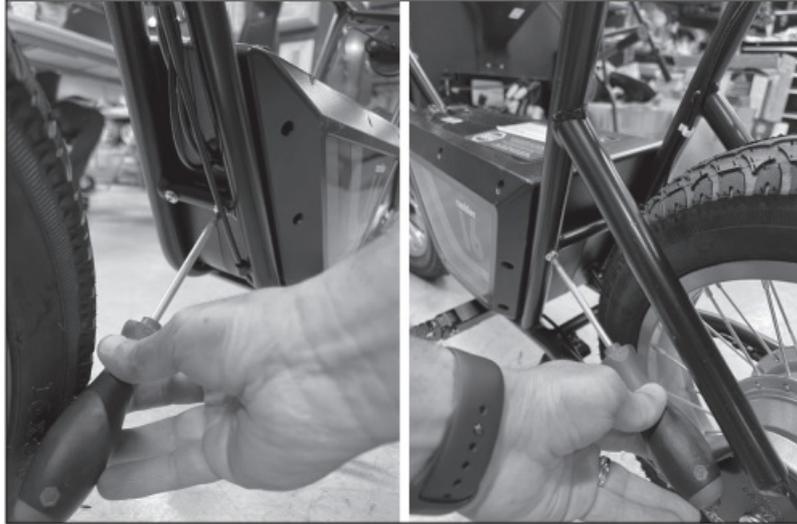

Step 3: Disconnect Connectors

Disconnect all the connectors from the controller.

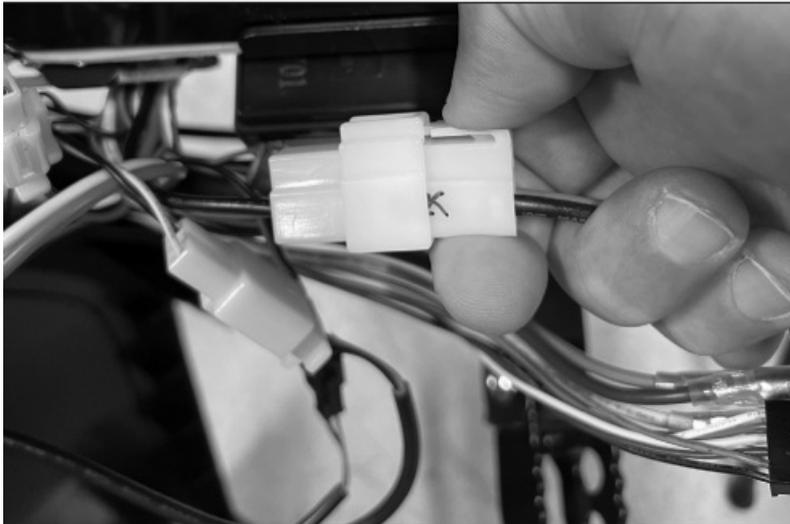

Step 4: Remove Controller

Using a Phillips screwdriver, remove the two (2) screws that hold the controller onto the battery bracket.



Step 5: Reconnect Controller Wires



When re-connecting the controller to the power switch, make sure you connect the black wire to the gold-colored prong, the red wire to the middle silver-colored prong, and the yellow wire to the remaining silver-colored prong.

Step 6: Reassemble

Reverse the steps.

ATTENTION

Charge the battery 12 hours before using.

FAQs

Q: What should I do if I encounter difficulties during the replacement procedure?

A: For assistance, visit our website at www.razor.com or call toll-free at [866-467-2967](tel:866-467-2967) Monday – Friday between 8:00 am – 5:00pm Pacific Time.

Need Help?

Visit our website at www.razor.com or call toll-free at [866-467-2967](tel:866-467-2967) Monday – Friday 8:00 am – 5:00 pm Pacific Time.

Documents / Resources



[Razor W15128785015 16 Controller Replacement \[pdf\] User Guide](#)
W15128785015 16 Controller Replacement, W15128785015, 16 Controller Replacement, Controller Replacement, Replacement

References

-  [Razor | Scooters and Ride-ons for the whole family](#)
- [User Manual](#)

Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.